


2006 Model

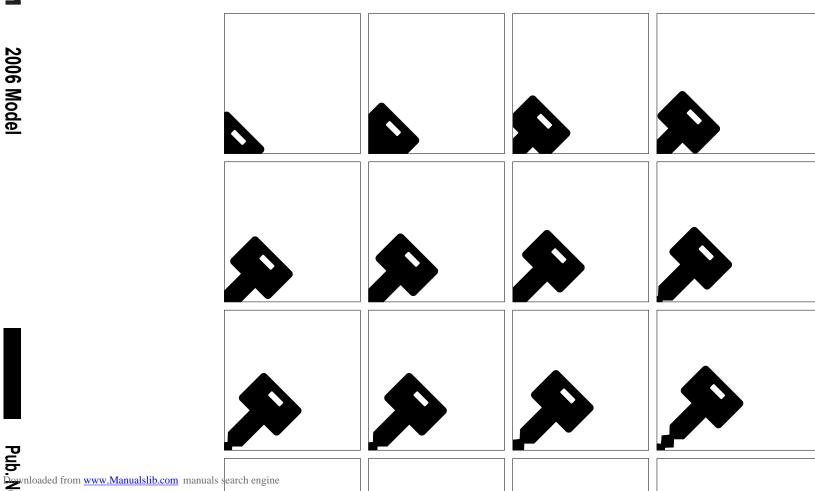



OWNER AND VEHICLE INFORMATION
OWNER NAME:
USER/COMPANY NAME:
MAILING ADDRESS:
CITY, STATE: ZIP:
VEHICLE IDENTIFICATION NUMBER:
DATE OF DELIVERY (WARRANTY START DATE): / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

•

SELLING DEALER IMPRINT HERE

۲

www.Manualslib.com manuals search engine

•

€

•



Foreword

Thank you for purchasing a Mitsubishi Fuso FK/FM series truck.

This owner's manual explains proper vehicle handling, simple maintenance practices, and the periodical maintenance schedule to ensure that you are able to drive your vehicle safely and comfortably.

As improper use of the vehicle may result in a breakdown or cause an accident, we urge you to read this manual thoroughly before operating the vehicle.

Please keep this manual in the vehicle so it is always available for reference. If you sell the vehicle, make sure the next owner receives this manual and is aware of its contents.




© 2005 Mitsubishi Fuso Truck & Bus Corporation Printed in Japan

Reading the handbook


- The information in this manual is accurate as of the time of printing. Because of differences in specifications and improvements that may be added after preparation of this manual, some of the explanations and illustrations in this manual may not apply to your vehicle.
- The following symbols are used throughout this manual:

 \Rightarrow \square : requests that reader should refer to the page of the number indicated.

This manual contains important cautionary instructions and supplementary information under the following four headings which identify the nature of the instructions and information:

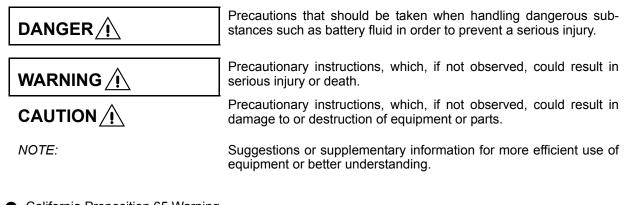

California Proposition 65 Warning

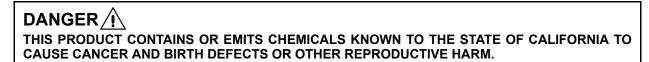

CONTENTS

•

1.	Recommendation to drivers	1-1
2.	Warning labels	2-1
3.	Opening and closing	3-1
4.	Seat and steering wheel adjustments	4-1
5.	Switches and controls	5-1
6.	Instruments and warning lamps	6-1
7.	Starting and driving	7-1
8.	ABS – driving hints	8-1
9.	Heating and air conditioning	9-1
10	. Interior equipment and accessories	10-1
11	In cold weather	11-1
12	. Simple inspection and service 1	12-1
13	. Useful advice for emergencies 1	13-1
14	. Service data	14-1
15	. Maintenance schedule	15-1
16	Alphabetical index	16-1
17	. Maintenance record	17-1

Each chapter has a table of contents on its first page.

۲

www.Manualslib.com manuals search engine

•

€


•


1. Recommendation to drivers

Chassis and engine numbers	1-2
Powerline label	1-2
Vehicle identification number (VIN)	1-3
Maintenance	1-4
Fuels	1-5
Handling of the new vehicle	1-7
Reporting safety defects	1-7
Obtaining service	1-8

 $\mathbf{\bullet}$

1-2

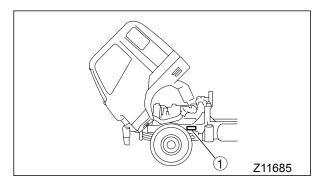

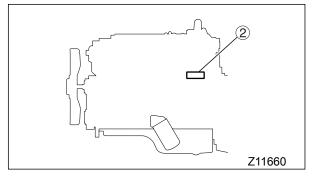

Chassis and engine numbers

If presented at the time of repair or parts order, the chassis number 1 and engine number 2 will facilitate the quick and smooth processing of your requests.

1 Chassis number


The chassis number 1 is indicated on the left frame, near the left front wheel.




Vehicle model

2 Engine number


The engine number 2 is indicated on the left side of the crankcase.

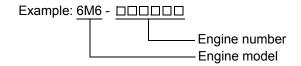

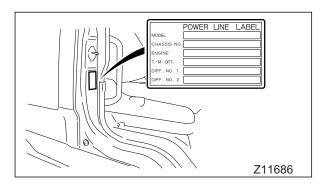

Powerline label

The powerline label located in the position shown indicates the vehicle model, chassis number and information relevant to the vehicle's power transmission components.

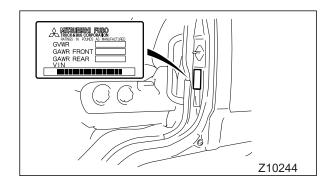

 (\mathbf{b})

Vehicle identification number (VIN)

The VIN is stamped on a plate that is located as shown in the illustration.


The VIN comprises 17 numbers and letters, the meanings of which are listed below.


6 K (10) (İÌ) (12)

- ① Country
- J: Japan L: Mitsubishi Fuso
- ② Make
- ③ Type
- 6: Incomplete vehicle ④ Gross vehicle weight/Brake system

	D:	19,501 to 26,000 lbs./Air over hydraulic	
	F:	26,001 to 33,000 lbs./Full air	
	G:	16,001 to 19,500 lbs./Air over hydraulic	
5 Line	F:	FK61F	
	G:	FM61F	
	H:	FM64F	
	J:	FM65F	
⑥ Series (Wheel base)	F:	3.5 to 3.79 m (11.48 to 12.43 ft.)	
	H:	4.1 to 4.39 m (13.45 to 14.40 ft.)	
	J:	4.4 to 4.69 m (14.43 to 15.38 ft.)	
	K:	4.7 to 4.99 m (15.41 to 16.37 ft.)	
	L:	5.0 to 5.29 m (16.40 to 17.35 ft.)	
	M:	5.3 to 5.59 m (17.38 to 18.33 ft.)	
	P:	5.9 to 6.19 m (19.35 to 20.30 ft.)	
⑦ Cab/chassis type	1:	Chassis cab	
8 Engine	E:	7.545 L diesel turbo charged and charge air cooled	
9 Check digit			
10 Model year	6:	2006	
① Plant	K:	Kawasaki	
② Plant sequential No.			

1-4

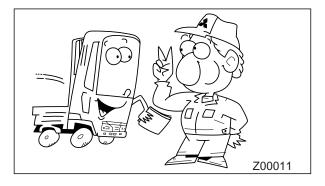

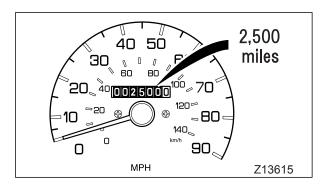

Maintenance

Checking your vehicle at regular intervals is very important for maximizing performance and extending service life. It is recommended that you make a habit of performing the following inspections.

This manual describes simple maintenance checks and procedures that can be carried out by the owner. If you have difficulty or your vehicle needs maintenance work that is not shown in this manual, please refer to an authorized dealer.

1 New vehicle inspection

After you have driven the first 4,000 km (2,500 miles), your vehicle requires a special inspection and adjustments to compensate for the initial run-in of various parts. When the distance has been reached, have your vehicle inspected by an authorized dealer by showing them this Owner's Manual.

NOTE:

The cost of oil, Lubricants, parts and any work that is not included in the new vehicle inspection must be borne by the owner.

2 Pre-operational check

Make a habit of checking your vehicle at the start of every day's operation. This will ensure safe and comfortable operation. $\Rightarrow \square$ P. 12-8


3 Periodic inspection


 In addition to maximizing the vehicle's working life, regular inspections also help prevent accidents.

Periodic inspection is based on either the distance traveled (odometer reading) or period of use (months/years).

 The intervals between and content of periodic inspections are as shown in the Maintenance Schedule section.

Please adhere to the maintenance schedule carefully.

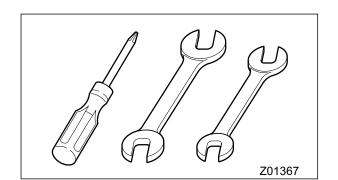

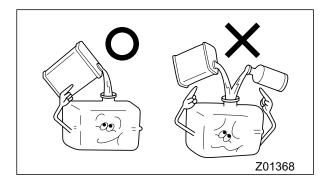

Fuels

Use only diesel fuel, without any additives, for diesel engines installed in Mitsubishi Fuso trucks.

1 Diesel-fuel properties

The following recommendations concerning diesel fuel used with Mitsubishi Fuso diesel engines are given for optimum fuel economy and performance.

Use condition	Recommendation
Normal operation at temperatures above –12°C (10°F)	ASTM D-975 Grade Low Sulfur Grade 2-D*
Operation at tempera- tures below –12°C (10°F), or long-hour no- load operation.	ASTM D-975 Grade Low Sulfur Grade 1-D*

NOTE:

* ASTM is an acronym for the American Society for Testing and Materials which recommends fuel containing 0.05% or less sulfur content.

Note that a sulfur content exceeding 0.05% deteriorates the performance of emission control device.

To meet fuel requirements exactly, it is necessary to obtain cooperation from a reputable fuel oil supplier. Both fuel suppliers and users are responsible for keeping fuel clean.

2 Danger of fire and explosion by using mixed fuel

Do not use diesel fuel mixed with gasoline, gasohol and/or alcohol. Fuel containing 5% gasoline has a flash point as low as $0^{\circ}C$ ($32^{\circ}F$), which can lead to a fire or explosion while the engine is running.

DANGER /!

- NEVER MIX DIESEL FUEL WITH GASO-LINE, GASOHOL OR ALCOHOL. USE OF FUEL MIXED WITH ONE OR MORE OF THESE COULD LEAD TO A FIRE OR EXPLOSION INVOLVING SERIOUS INJURY, DEATH OR PROPERTY DAMAGE.
- IF YOU MISTAKENLY FILL THE FUEL TANK WITH A MIXED FUEL, DRAIN OUT ALL THE FUEL FROM THE FUEL SYSTEM.

3 Adverse effects of mixed fuel on engine

Using diesel fuel mixed with gasoline, alcohol, or both, has the following adverse effects on the engine:

- Fuel viscosity becomes lower, resulting in excessive wear, damage, and failure of fuel system parts.
- Difficulty in starting the engine will result due to a reduced cetane number.

The lower the cetane number, the more likely internal engine damage will occur.

4 Refueling

WARNING <u>/</u>

- Stop the engine before fueling.
- Never smoke when fueling since diesel fuel could ignite or explode. Never operate lighters or other items that emit sparks.

When refueling the vehicle, take care to prevent dirt and water from entering the fuel tank.

The fuel tank is on the left-hand side of the vehicle. To open the cap, slowly turn it counterclockwise. To close the cap, turn it fully clockwise.


Fuel tank capacity200 liters (52.8 gallons)


WARNING /!


If you inadvertently put gasoline in the fuel tank, pump it all out. Running the engine with gasoline in the tank could cause a fire or explosion endangering your or other people's lives.

NOTE:

If you run out of fuel, refuel the tank. After refueling an empty tank, be sure to air bleed the fuel system. Otherwise, the engine will not start. $\Rightarrow \square P. 13-17$

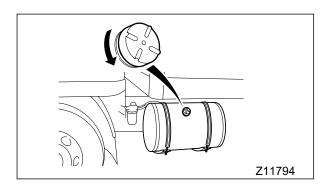

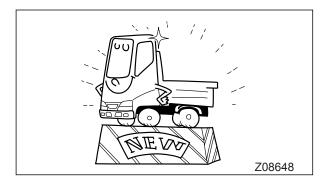

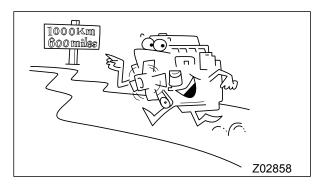

Handling of the new vehicle

The way the vehicle is handled when new greatly affects its subsequent performance and service life. Observe the following precautions when handling the new vehicle.

1 Maintenance

The "new vehicle inspection" is very important for extending the service life of your vehicle. We strongly recommend that you have this inspection carried out by an authorized dealer. Be sure to give the dealer this manual at that time.

During the initial run-in period, oil is quickly contaminated. Replace the following oils at the time of the "new vehicle inspection".

At 4,000 km (2,500 miles)

- Power steering fluid
- Power steering fluid filter element
- Engine oil
- Manual transmission gear oil
- Axle housing gear oil

2 Maximum engine speed during run-in period

To avoid overburdening the new engine, limit engine RPM to those listed below for the first 1,000 km (600 miles).

Then, run in your vehicle step by step at various speeds, beginning with low gears.

Maximum engine speed during run-in period 2,000 rpm

Reporting safety defects

If you believe that your vehicle has a defect that could cause a crash or could cause injury or death, you should immediately inform both the National Highway Traffic Safety Administration (NHTSA) and Mitsubishi Fuso Truck of America, Inc. (MFTA).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or MFTA.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 1-202-366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590.

You can also obtain other information about motor vehicle safety from the Auto Safety Hotline.

Obtaining service

At Mitsubishi Fuso Truck of America, Inc. (MFTA), we are proud of the quality and workmanship that is built into every MFTA Truck. We are equally proud of our corporate commitment to promote the highest possible degree of customer satisfaction with our products and services.

Today's trucks are extremely complex and are comprised of an enormous number of individual parts. Occasionally, a failure of one of these parts may occur. Should you experience such a failure, we are confident that you will find an Authorized Dealer prepared to provide you with high quality service. Every Authorized Dealer has trained personnel, plus the tools and equipment necessary to provide for your various service needs. In the event that a problems arises, we ask you to follow the procedure outlined as follows, and in the sequence listed:

STEP 1: Contact your Nearest Authorized Dealer

This is the most direct and expedient way to obtain service. Each Authorized Dealer has the ultimate responsibility for providing the services and repairs you may need. We recommend that you contact the Service Manager of your nearest Authorized Dealer for assistance. In the event that you feel additional assistance is required, ask to speak to the General Manager of the Authorized Dealer.

STEP 2: Contact MFTA

After the completion of Step 1, and in the event that your nearest Authorized Dealer has been unable to satisfactorily resolve the problem, please contact MFTA's Customer Service Representative at **1-877-711-0707**.

Please be prepared to provide the following information when you call:

- Your Name, Company Name, Address, Telephone Number
- Vehicle Model
- Vehicle Model Year
- Vehicle Identification Number
- Mileage
- Name of Dealer contacted under Step 1, if applicable
- Details of the Complaint/Comment

You also may correspond with the Customer Service Representative in writing, addressed to:


MITSUBISHI FUSO TRUCK OF AMERICA, INC. CUSTOMER SERVICE REPRESENTATIVE 2015 CENTER SQUARE RD. LOGAN TOWNSHIP, NJ 08085

2. Warning labels


Locations in cab	 2-2
Locations outside cab	 2-4

۲

- The caution and warning labels show important information. Be sure to read them before using the vehicle.
- If any label has peeled so it is difficult to read, is scratched or otherwise damaged, or has peeled off completely, please inform an authorized dealer. The warning and caution labels apply only to the vehicle itself, not to any equipment mounted on the vehicle. For information on caution and warning labels that apply to equipment mounted on the vehicle, please refer to the Owner's Manual supplied by the manufacturer of the equipment.
- The caution and warning labels are located in the cab as shown below. Samples of these labels are indicated in this and following pages.

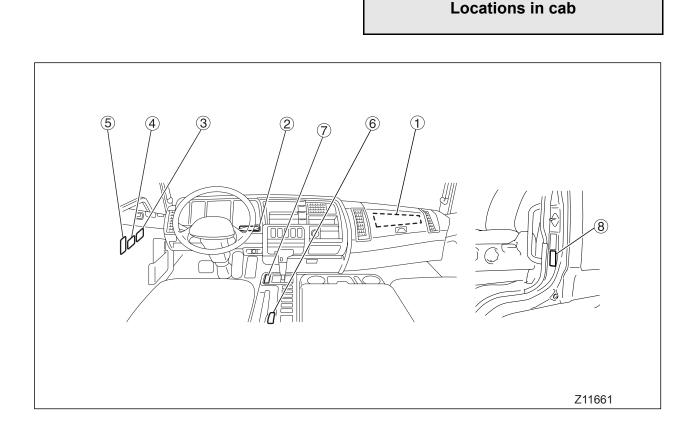

① Fuse

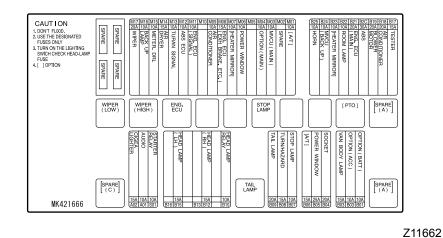


- ② Clutch pedal <Manual transmission vehicles>
- ③ Starting the engine while the cab is tilting

HYDRAULIC CLUTCH
DO NOT DEAT FOOT ON DEDAL
DO NOT REST FOOT ON PEDAL



Automatic transmission
 <Automatic transmission vehicles>

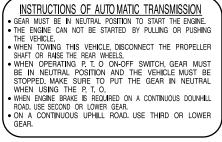

Z11665

Parking brake
 <Automatic transmission vehicles>

WARNING


DO NOT APPLY PARKING BRAKE WHILE THE VEHICLE IS IN MOTION, OR TRANSMISSION WILL BE SEVERELY DAMAGED.

Z11667




Z11664

Towing
 <Automatic transmission vehicles>

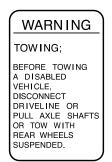


Z11666

⑦ To shift into the "P" position

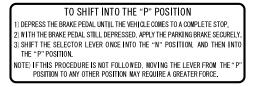

$\textcircled{8} \quad \text{Tire and rim}$

SUITABLE TIRE-RIM CHOICE
GVWR
10430 KG(23000 LBS)
GAWR FRONT
3600 KG(7935 LBS)
WITH 9R22.5(F) TIRES
22.5×6.75 RIMS
AT 720 KPa(105 PSI) COLD SINGLE
GAWB BEAB
7165 KG(15800 LBS)
WITH 9R22.5(F) TIRES
22.5×6.75 RIMS
AT 720 KPa(105 PSI)
COLD DUAL
PART NO.MK448490

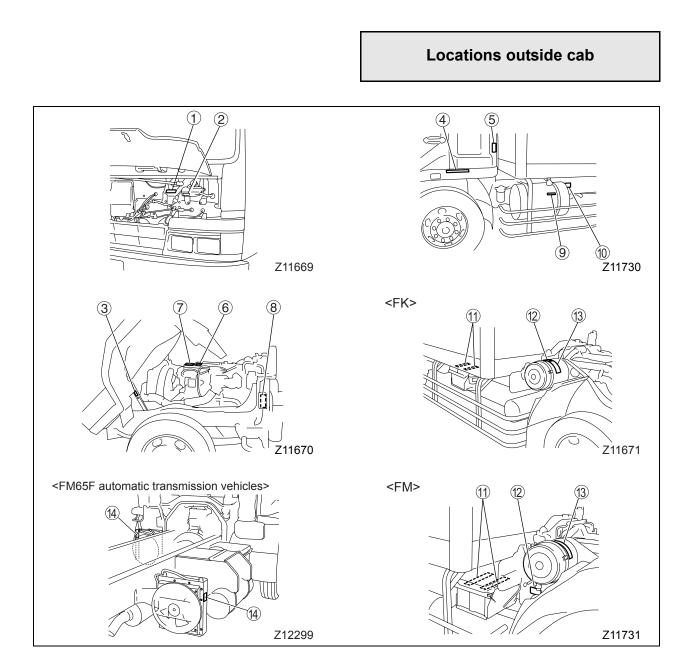


① Wiper linkage

0



Z11672

③ Tilting the cab

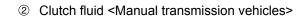




Z11683

④ No step <FM>



Z11673

5 Tilting the cab

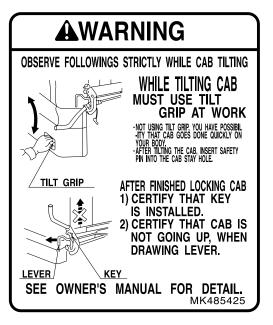

Z11675



Z11674

6 Engine oil

ふそう純正エンジンオイル S — 3 (C D 級)以上を御使用下さい USE DIESEL ENGINE OIL API SERVICE CD OR HIGHER GRADE

2-6

⑦ High voltage



Z11676


9 Fuel

Begin and the second sec



Z11677

Connectors for body lights and van body dome lights

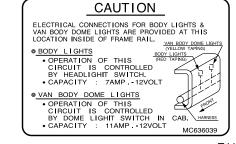

Z11679




Z11678

1 Battery



⁽¹⁾ Starting the engine

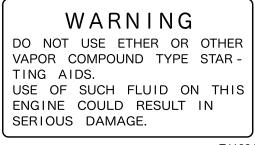

۲

•



Z09802

•

2-7

④ Automatic transmission oil cooler <FM65F automatic transmission vehicles>



www.Manualslib.com manuals search engine

•

€

•


3. Opening and closing

Starter key	. 3-2
Doors	. 3-2
Central door locks	. 3-4
Entering and leaving the vehicle	. 3-4
Door window glass	. 3-5
Rear quarter window	. 3-6

www.Manualslib.com manuals search engine

۲

3-1

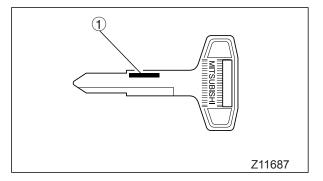



Starter key


- Your vehicle is provided with two identical starter keys.
- The starter key can be used to start and stop the engine and lock and unlock the doors.
- Make a note of your starter key number ① so that you can order a replacement key from an authorized dealer in the event that it is lost.


Doors

- To help prevent accidents, always check for vehicles and pedestrians approaching from behind before opening the doors.
- Driving with a door ajar can be very dangerous. Make sure the doors are completely closed before starting.
- Exercise caution when opening a door in strong wind. Otherwise, the wind could catch the door and suddenly blow it open.
- Exercise caution when opening a door on a downward slope. Otherwise, the inclination of the vehicle could cause the door to suddenly fall open.
- When leaving the vehicle, take with you any child who was riding in the cab. Never leave a child in the cab. A child left in the cab could interfere with the vehicle, causing it to move or catch fire. Also, the cab gets extremely hot in sunshine and in hot weather so a child left in the cab could suffer heatstroke.

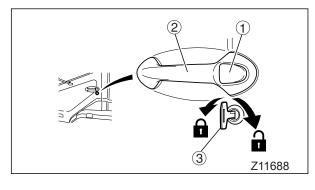

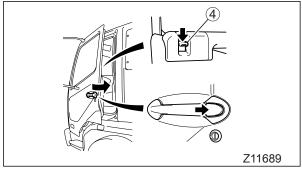

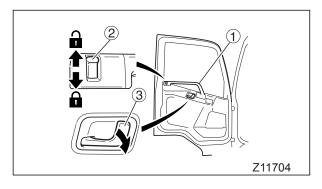

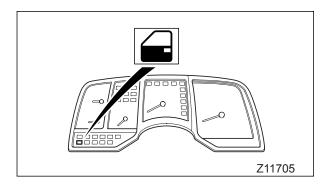

1 From the outside

- To open, pull outer handle ② toward you while pressing button ①.
- Use starter key ③ to lock or unlock the door.

• To lock the door without using starter key, press lock knob ④ to the lock position and then, while pressing the button, close the door.

NOTE:

- When you lock the driver's door using the starter key or by lowering the lock knob, the passenger's door is automatically also locked.
- When you leave your vehicle, be sure to remove the starter key from the starter switch and lock all doors to prevent theft.
- Be careful not to lock the doors with the starter key inside the vehicle.

2 From the inside

- To close, pull door waist bar ①. Be sure to close the door completely.
- To lock, press lock knob 2.
- To open, raise the lock knob and pull inner handle 3.


Closing the door by pulling any part other than the waist bar could damage the door mechanism.

3 When the door is open

The indicator lamp illuminates when the door is opened or not closed completely with the starter key in the ON position. If the door does not close completely, close it again properly.

NOTE:

If the interior lamp button is pressed, the interior lamp illuminates whenever the door is opened.

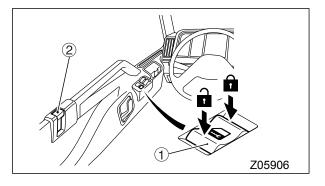


Central door locks


- When the switch ① is pressed, both doors are locked or unlocked simultaneously.
- When the lock knob ② on the driver's door is lowered, the passenger's door is also automatically locked. If the lock knob on either door is subsequently lifted, only that door is unlocked.
- When the driver's door is locked from the outside using the starter key, the passenger's door is automatically also locked. If the starter key is subsequently used to unlock either door, the other door remains locked.

Entering and leaving the vehicle

WARNING /!

- Always use the step to climb into or down from the vehicle. Never put your foot on the wheel or tire since it could easily slip off.
- The step can become slippery in rain or snow. Firmly hold the grip while climbing into or down from the vehicle. Holding the grip is particularly important when snow has settled and frozen on the step.
- If the soles of your shoes are oily or greasy, you could slip when climbing down from the vehicle or when operating the brake or clutch pedal. Wipe any oil and grease off the soles of your shoes before entering or leaving the vehicle.
- When putting your foot on the step, make sure your body is supported in three places for safety.
- Do not hold luggage or other items in your hands when entering or leaving the vehicle since this can be dangerous.
- Do not jump down from the vehicle. Jumping down from the vehicle could cause you to fall or sustain an injury.
- Take care when entering or leaving the vehicle on a slope or in a strong wind since the door could open or close suddenly.

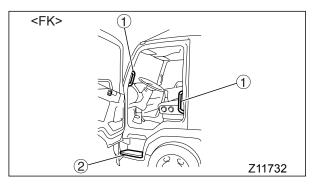

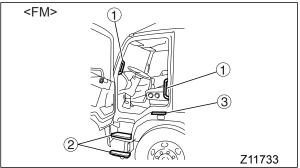

- Hold onto the grip when entering or leaving the vehicle. Do not grasp any other part of the vehicle since it could break.
- Do not step on a fender. Doing so not only may damage the fender but also can be dangerous as it is slippery.

Hold the grip ① tightly and put your foot fully on the step ② when entering or leaving the vehicle. If you place your hand on the fender, put it on the non-slip section ③.

Door window glass

WARNING /!


- Do not put your hands or head outside a window or let anyone in your vehicle do so. Serious injury could result from external objects or in the event of sudden braking. Be particularly careful when carrying a child in your vehicle.
- Always make sure that no one has their head or hands out of the window when closing it.


A body part could be injured if caught in a closing window.


Never allow a child to open or close the window.

 When a child is in the cab, be sure to press the power window lock switch to prevent the child from opening and closing the assistant driver's window. Otherwise, the child may accidentally operate the power window switch and get its hands or head trapped.

Do not keep any door or window open in rainy weather, and be careful not to spill a drink on any of the window switches. If water or any other liquid gets on a window switch, it can cause a malfunction.

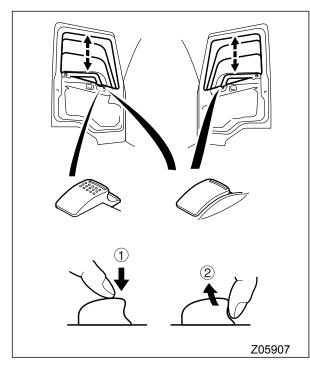

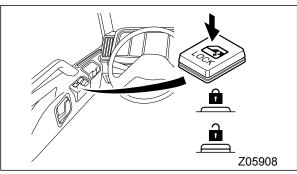

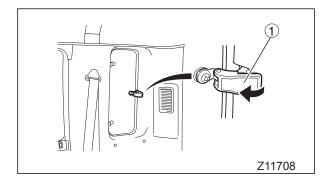

1 Power window switches

The power window switches function only when the starter switch is in the "ON" position.

On the driver's door, there are two switches: one for controlling the driver's window and the other for controlling the passenger's window.

- ① Press the switch to open the window.
- ② Raise the switch to close the window.

2 Power window lock switch

Press the power window lock switch to prevent the passenger's window from being opened or closed. Pressing the switch a second time releases the lock.

NOTE:

If a child is in your vehicle, it is important for safety's sake to press the power window lock switch to prevent the child from opening or closing the passenger's window.



Pull latch ①, and push it outward to open.

4. Seat and steering wheel adjustments

Seats	4-2
Seat belts	4-5
Steering wheel	4-9

www.Manualslib.com manuals search engine

 $\mathbf{\bullet}$


•

4-1

4-2

5 3 1 4 2 Z11715

2 Z11715

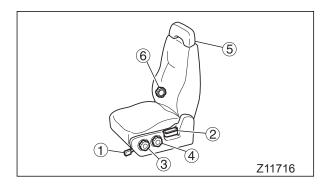

Seats

WARNING <u>/</u>!


- Avoid adjusting the seat while the vehicle is moving since the seat may move more than you intend and cause an accident by impeding operation of the vehicle. Be sure to stop the vehicle and set the parking brake before performing any adjustment of the seat.
- After you have adjusted the seat, gently move or rock the seat to ensure that it is locked in the desired position.
- When adjusting the seat, keep your hands away from the bottom of the seat and from moving parts of the seat. Otherwise, you could suffer an injury by getting your hands and fingers trapped.


1 Correct driving position


- Before driving the vehicle, adjust the driver's seat with reference to the following points:
 - ① Your back must touch the seatback, and you must be able to see the warning lamps and gauges.
 - ② You must be able to reach and firmly press the pedals.
 - ③ You must be able to operate the steering wheel and switches with ease.
 - ④ You must be able to operate the gearshift lever or range selector lever with ease.
 - ⑤ You must be able to fasten the seat belt correctly.
- Adjust the steering wheel to a position at which you can operate it comfortably with your arms slightly bent.
 ⇒ □ P. 4-9


2 Driver's seat

- ① Slide lever
- 2 Reclining lever
- ③ Front height adjustment knob
- ④ Rear height adjustment knob
- ⑤ Head restraint
- 6 Lumbar support knob

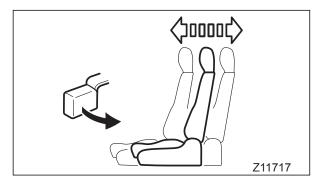

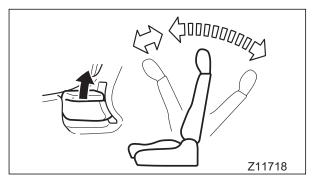

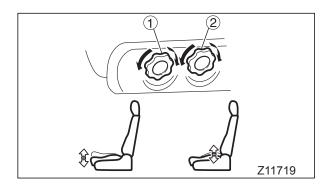

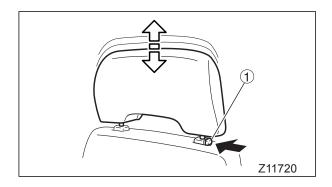

2.1 Front/rear slide adjustment

With the slide lever pulled, slide the seat forward or backward to the desired position.

2.2 Recline adjustment

When adjusting the recline angle, sit back against the seatback or place your hand on it. Unless restrained, the seatback could return forward suddenly and injure your face or other body parts.

Pull the reclining lever and set the seatback at the desired angle.

2.3 Seat height adjustment

Adjust the height and angle of the seat cushion by turning the front height adjustment knob ① and rear height adjustment knob ②.

2.4 Head restraint

WARNING /!

Before driving, adjust the head restraint to the correct position and make sure it is locked.

• Up/down adjustment


Make up/down adjustments so that the middle of the head restraint is behind your head.


To raise or lower the head restraint: Slide it while pressing the head restraint knob ①.


Removing and refitting the head restraint

To remove the head restraint: Press the head restraint knob and pull the head restraint off the seat.

To refit the head restraint: Slide it into the seat, press the head restraint knob, and lower the head restraint in position.

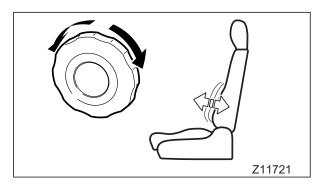

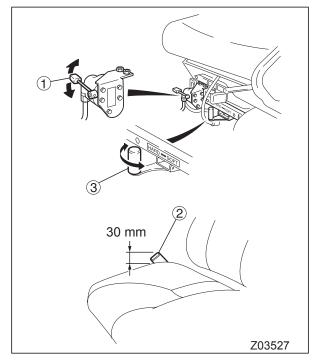

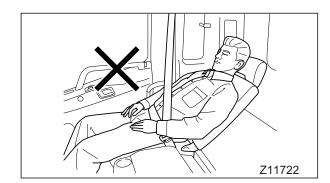

2.5 Lumbar support

Turn the lumbar support knob to adjust the firmness with which the seatback supports your lower back.

2.6 Air suspension seat @PT

<Standard on FM65F>

 Adjusting the seat suspension air pressure to your body weight is important to ensure the best seating comfort.

Adjust the air pressure as follows:

- 1. Rotate the front and rear height adjusting knobs to bring the seat into its lowest position.
- 2. Place yourself in the seat and move air pressure adjusting lever ① until the seat top surface is approx. 30 mm below the edge of seat belt buckle ②.
- Now the air pressure has been adjusted to your body weight.
 Adjust the seat height as desired by using the front and rear height adjusting knobs.

Without a proper air pressure adjustment, you may experience uncomfortable riding under certain road conditions.


• The following two seat suspension settings can be selected using adjustment lever ③ according to the road conditions:


SOFT: For a soft ride on normal roads. HARD: For minimizing bumpy ride on rough roads.

3 Passenger's seat

WARNING

During vehicle operation, the seatback must not be reclined further than necessary. In the event of sudden braking, the occupant could slide forward and suffer severe injuries.

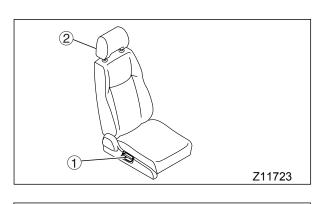

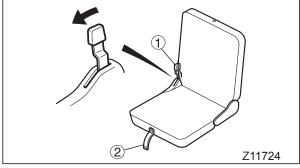




- ① Reclining lever
- ② Head restraint

For front/rear adjustments of the seat, up/down adjustments of the head restraint, and removal and installation of the head restraint, follow the same procedures as for the driver's seat.

4 Center seat (

The seatback can be folded down by moving lever 1. Secure the folded seatback with strap (2).

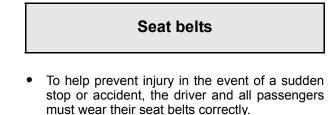

 When wearing your seat belt, sit back in your seat with your back straight. If a seat belt is used incorrectly, its effectiveness is greatly diminished and it could aggravate injuries in the event of accident.

• For details of seat belt usage for children and pregnant women, refer to page 4-8.

```
www.Manualslib.com manuals search engine
```

4-6

WARNING <u>/</u>

- Passenger's must never be in the cargo area while the vehicle is in motion. Unless seated and properly belted up, the risk of injury is greatly increased.
- Seat belts should be worn as low as possible over the hips. Wearing a seat belt across the abdomen could be dangerous since undue pressure would be placed on internal organs in the event of a collision.
- Make sure that the seat belt is not twisted when fastening it. A twisted seat belt could be dangerous since its reduced width will apply a larger force to a smaller part of your body in the event of impact.
- Replace any seat belt that is cut or frayed, or if its buckle does not work properly.
- Never use a single seat belt for more than one person.
- It is dangerous to fasten or unfasten your seat belt while driving since the momentary diversion of your attention could lead to a serious accident. Always stop the vehicle first.
- The seats feature 3-point lap and shoulder belts with Emergency Locking Retractor (ELR).

1 Three-point ELR seat belt

NOTE:

It is not necessary to adjust the length of these seat belts.

An ELR seat belt extends and retracts automatically as its wearer moves but locks automatically for protection in the event of a sudden stop or shock.


The belt's tightness should be adjusted automatically. If there is any looseness, lift the shoulder belt gently and the mechanism will take up the slack. With the belt properly tightened, the risk of it slipping off in a collision is reduced.

Fastening


WARNING <u>/!</u>


The shoulder belt can be dangerous if worn across the neck. Adjust its position so that it does not cross over the neck.


- 1. Hold tang ① and gently extend the belt. If the belt locks or is difficult to extend, let it retract and pull it gently again.
- Take care that the belt does not become twisted. Insert the tang into the buckle 2 until you hear a click.
- 3. Pull on the tang to confirm that it is locked in.

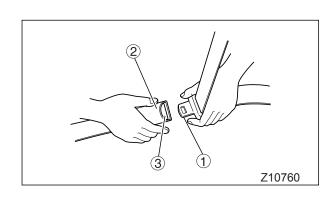

4-7

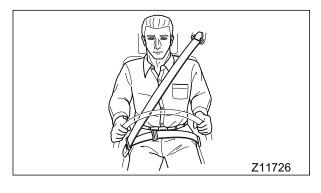

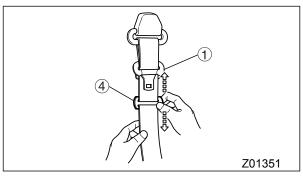

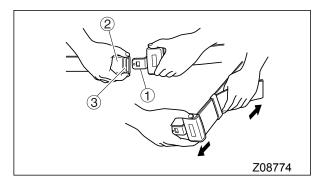

4. Adjust the belt so it is across your hips and shoulder.

• Unfastening

- 1. Press the red button ③ to unlock the buckle.
- 2. The belt automatically retracts when unlocked. To prevent the tang causing damage or injury, hold it while the belt retracts.
- 3. Adjust the tang stopper ④ to locate the tang in an easy-to-reach position and prevent it from slipping.
- 2 2-point seat belt @PT-

WARNING /

For maximum protection in the event of an accident, the belt must not be loose. A loose belt could even aggravate injuries.

• Fastening

- 1. Take care that the belt does not become twisted. Inset the tongue ① into the buckle ② until you hear a click.
- 2. Pull on the tongue to confirm that it is locked in.
- 3. Adjust the belt so it is low across you hips.
- 4. To adjust the belt's length, hold the tongue at 90° to the belt.

Pull the belt end to shorten the belt or the tongue to lengthen it.

Unfastening

Press the red button ③ on the buckle to separate the tongue and buckle.

- Insert tongue ① into buckle ② until you hear a click.
- Press red button ③ to unlock the belt buckle.
- To adjust the seat belt length, hold the tongue at right angles to the belt. Pull the belt end to shorten or the tongue to lengthen the belt as desired.

4-8

3 Children and babies

- When carrying children or babies, they must be restrained properly to minimize the risk of injury in the event of a sudden stop or accident. Never allow children to stand or kneel on the seats. For maximum safety, we recommend fitting and using a restraint system that complies with Federal Motor Vehicle Safety Standards. The use of child and/or baby restraint systems is mandatory in some states. Please abide by your state's regulations.
- Older children may sit on the regular seats and use the regular seat belts. However, make sure that the shoulder belts do not cross their necks or faces.

4 Pregnant women

Since a seat belt could exert undue pressure on the abdomen in the event of an accident, pregnant women should consult a doctor about the use of seat belts before riding in the vehicle. A pregnant woman should wear her seat belt as low as possible across the hips, not across her abdomen.


5 Seat belt care

- Periodically, check the action of the mechanical parts such as the buckles, tangs, and ELR units. Check also for any damage that could stop the seat belts from functioning properly. Replace seat belt unit if there is any malfunction or damage.
- Replace any webbing that is cut, rayed, or otherwise damaged.
- Replace any seat belt that has received a shock due to a collision.
- Keep sharp or other potentially damaging objects away from the seat belts, especially the webbing.
- Keep the seat belts clean and dry. Use a mild soap and lukewarm water to clean seat belts. Such solvents as gasoline and thinner may seriously affect the strength of webbing.
- Never attempt to bleach or dye the seat belts, as this could weaken them considerably.
- Do not attempt to remove the seat belts or disassemble the ELR units.

Steering wheel

The steering wheel can be adjusted to the preferred height and tilted forward/backward. Adjust the steering wheel as well as the seat to the best positions for easy, safe driving.

- After every adjustment, try to move the steering wheel back and forth to make sure that it is securely locked. Unless the lever returns to the locking position, the steering wheel may move while the vehicle is in motion and cause an accident.
- Adjusting the steering wheel while driving is dangerous since it could detract from your concentration or cause the steering wheel to move more than desired.
- 1. Raise lock lever ① to adjustment position ②, and adjust the steering wheel to the desired height and angle.
- 2. After performing the adjustments, firmly push the lock lever down ③ to lock the steering wheel in position.

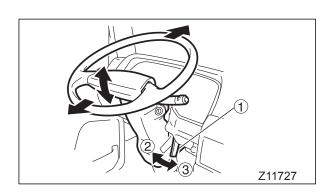

www.Manualslib.com manuals search engine

•

€

•

5. Switches and controls


5-1


Arrangement of switches and controls 5-2
Starter switch
Cold start switch
Engine idling control volume
Starting the engine
Warming up the engine
Stopping the engine
Pedals
Gearshift lever
9-speed transmission
Allison automatic transmission LCT 1000/2400 series 5-12
Allison automatic transmission MD3060P series 5-20
Parking brake
Combination switch
Van body dome light switch
Brightness control switch
Power take-off switch
Cruise control
Air suspension height control

 $\mathbf{\bullet}$

•

5-2

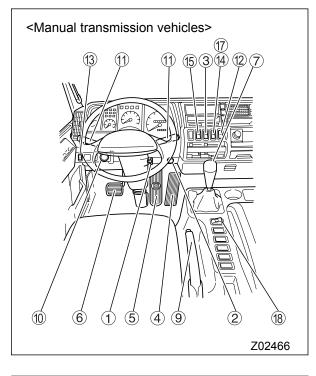

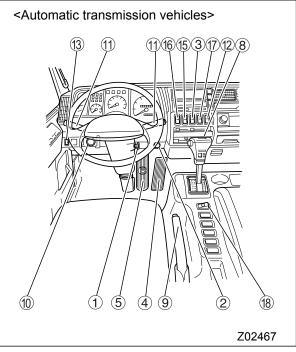

Arrangement of switches and controls

- ① Starter switch
- 2 Engine idling control volume
- 3 Cold start switch
- ④ Accelerator pedal
- ⑤ Brake pedal
- 6 Clutch pedal

- ⑦ Gearshift lever
- ⑧ Range selector lever
- 9 Parking brake lever <other than FM65F>
- 1 Parking brake control valve <FM65F>
- ① Combination switch
- ② Van body dome light switch
- ⁽¹³⁾ Brightness control switch
- Power take-off switch <option>
- 15 Cruise control main switch
- [®] Power mode switch <other than FM65F>
- ⑦ Height control switch <Air suspension vehicle>
 - Oil level check switch $\Rightarrow \square P. 12-20$

Starter switch

WARNING /!

Never turn the starter switch to any position other than the "ON" position while driving the vehicle. Turning the starter switch to the "ACC" position would be dangerous because the engine would stop and the following problems would occur:


- The compressed air used to enhance braking ceases to be generated. This could significantly reduce the effectiveness of the brakes.
- The power steering system becomes inoperative, rendering steering dangerously sluggish.
- The electrical circuits of the warning lamps, meters, etc. become inoperative, causing electric components to malfunction.


Removing the starter key causes the steering wheel to lock, making it impossible to steer the vehicle.

If you attempt to turn the starter key from the "ACC" to "LOCK" position without pressing the reset button, the key will turn only to the position midway between the "ACC" and "LOCK" positions (marked "•"). Do not force the key.

When the reset button is pressed while in this position, the starter key can be turned to the "LOCK" position and then removed from the switch. Once the reset button is pressed, you need not keep it pressed to be able to turn the key.

- Do not turn the key to the "S" position while the engine is running since this could damage the starter.
- If is not possible to move the vehicle with only the starter. If the engine stops while the vehicle is on the road, turning the starter switch to the "S" position will have no effect.
- If you park the vehicle over an extended period of time, always place the starter key in the "LOCK" position and remove it from the starter switch, or keep it in the position midway between the "ACC" and "LOCK" positions (marked "•"). Leaving the key in the "ON" or "ACC" position could run down the battery.

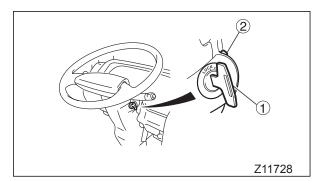

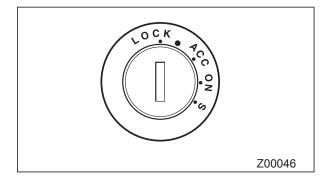

• LOCK:

Starter key ① can be inserted and removed only when it is in this position. To return the starter key to the "LOCK" position, first turn the key to the position midway between the "ACC" and "LOCK" positions (marked "•"), and after holding down reset button ②, turn it the rest of the way back to the "LOCK" position. When the key is removed, the steering wheel locks.

The light switch, brightness control switch, hazard warning lamps, interior lamp, spot lamp, horn, and central door lock can be used.

• ACC:

The engine is shut off or is not running in this position.

The turn signal lamp, wipers, washer, power windows and cigarette lighter can be used. Any audio system (such as a radio) that has been installed in the vehicle and correctly wired can also be used.

• ON:

The engine is running in this position. All electrical circuits are operable.


• S:

The engine is turned over and started in this position.

Once the engine is running, release the starter key and the switch will automatically return to the "ON" position.

NOTE:

- Insert the starter key fully in the starter switch before turning it.
- If you are unable to turn the starter key, gently turn the steering wheel clockwise and counterclockwise as you turn the key.

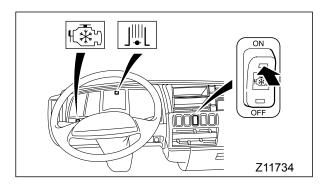

Cold start switch

When starting the engine in freezing temperatures, or when you want to shorten the warm-up time or boost interior heating during parking, press this switch to ON.

When the switch is turned to ON, the exhaust brake will be applied. This makes the engine warm up quicker after start-up. Indicator lamps R and R light up.

NOTE:

- Be sure to press the switch to OFF before starting your vehicle.
- In cold-temperature environments, white smoke in the exhaust gas may decrease for several minutes after pressing the cold start switch ON, then increase again after a while.

www.Manualslib.com manuals search engine

Engine idling control volume

- Be sure to set the engine idling control volume to the AUTO position during driving.
 If you drive with the engine speed raised by the volume, abrupt starting or premature wear of the clutch may occur.
- Turn the engine control knob gently, as forcing it could damage the internal mechanism.
- If the idling speed is set too low using manual control, the engine may become excessively noisy. Make sure the idling speed is correct.

NOTE:

If the engine speed is raised by the engine idling control volume with the cold start switch set to the ON position, black smoke may be produced. Before turning on the cold start switch, be sure to set the engine idling control volume to the AUTO position.

① Automatic control


The engine is warmed up with the speed being automatically controlled according to the engine coolant temperature. (The engine speed automatically decreases as the coolant temperature rises.)


2 Manual control

Turn the knob counterclockwise to reduce the engine speed.

Turn it clockwise to increase the engine speed. The engine idling control knob should normally be placed in the automatic control position.

Engine idling speed	
575 to 625 rpm	

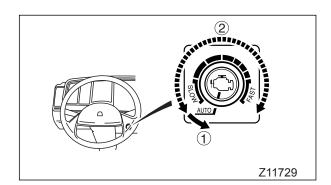

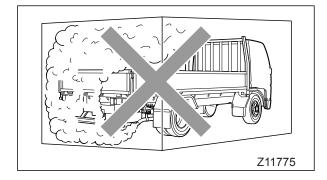

Starting the engine

WARNING /!

 Do not warm up the engine in a garage or other closed area. When starting the engine or entering or leaving a garage, do not run the engine for longer than is necessary as the accumulation of exhaust gas in closed areas is very dangerous.

Exhaust emissions contain carbon monoxide (CO), which if breathed can cause unconsciousness or death.

 If you smell exhaust gases inside the cab, inspect the exhaust pipe and check whether exhaust gases are leaking through holes or cracks caused by corrosion or damage. If exhaust gases are leaking, have the exhaust pipe inspected by an authorized dealer.

If exhaust gases that have leaked from the exhaust pipe come into the cab, ventilate the cab with fresh air by opening the windows fully or by opening the doors.

- Make sure that there are no flammables such as dry grass under or behind the parked vehicle, especially close to the exhaust pipe. A fire could be started by the heat from the engine or exhaust pipe.
- When you start the engine, be sure to sit in the correct position on the driver's seat to wait for the engine to warm up. If you are leaning out of the door window or otherwise incorrectly seated and the vehicle suddenly moves, a serious accident could occur.

- It is dangerous to push-start the engine since, at the time of start, sufficient assist power is not available for both braking and steering. Only push-start the engine when it is unavoidable.
- It is impossible to push-start an automatic transmission vehicle, and attempting to do so could damage the transmission.
- Do not use ether or other vapor compound type starting aids. Use of such fluid on this engine could result in serious damage.

NOTE:


- In cold weather, keep the accelerator pedal depressed until the engine is running.
- Do not continue to turn over the starter for more than 15 seconds as this could damage the starter or wear down the battery.
- If you operate the starter continuously for 15 seconds and the engine still does not start, turn the starter switch to the "ACC" position and wait 30 seconds before trying again to start the engine.
- Do not rev the engine after it starts. If you are depressing the accelerator pedal to help start the engine and once the engine starts, reduce the foot pressure on the pedal properly to prevent the engine from running at excessively high speeds.
- If the engine does not start in cold weather, check if the preheating circuit fuse has blown.


⇔∭ *P.* 13-10

 On a vehicle that has not been operated for a long period, or after replacement of engine oil or engine oil filter element, be sure to crank the engine before turning it over.

1 Pre-starting steps


- 1. Pull parking brake lever or parking brake control valve to fully apply the parking brake.
- Z11776

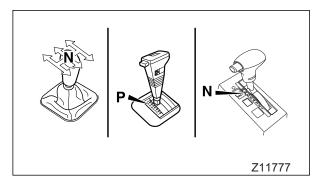


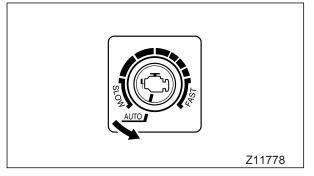


 Manual transmission vehicle: Place gearshift lever in the neutral position. Automatic transmission vehicle: Place range selector lever in the "P" position <other than FM65F> or "N" position <FM65F>.

3. Turn the engine idling control volume to the automatic control position.

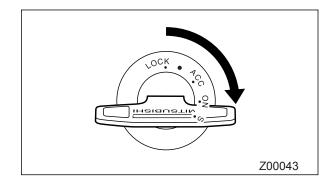

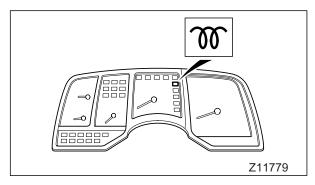

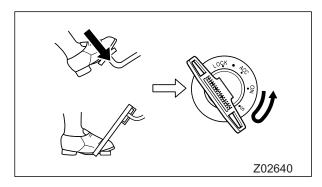

NOTE:

- For safety, the engine in a manual transmission vehicle cannot be started unless the gearshift lever is in the neutral position.
- In an automatic transmission vehicle other than FM65F, the engine cannot be started unless the range selector lever is in "P" or "N" position. It is safer to start the engine with the range selector lever in the "P" position. Start the engine with the range selector lever in the "N" position only when absolutely necessary, for example, if the engine stops while the vehicle is on a level crossing.
- In an automatic transmission vehicle of the FM65F, the engine cannot be started unless the range selector lever is in the "N" position.

2 Starting procedure

1. Turn the starter key to the "ON" position.

NOTE:

If a buzzer sounds when the starter key is turned to the "ON" position, activate the parking brake. Should the buzzer still continue sounding with the parking brake activated, the air tank pressure or the brake fluid level is too low. $\Rightarrow \square P. 6-7, P. 6-8$

2. Check whether the m indicator lamp illuminates or not.

• If the lamp does not illuminate: With the clutch pedal depressed, turn the starter switch to the "S" position to start the engine. You need not depress the accelerator pedal.

• If the lamp illuminates:

Wait until the \mathfrak{W} lamp goes out. Pump the accelerator pedal several times while waiting. When the \mathfrak{W} lamp goes out, turn the starter switch to the "S" position to start the engine with both the clutch pedal and accelerator pedal depressed.

NOTE:

To start the engine in cold weather, press the cold start switch to "ON". This shortens the engine warm-up time, but be sure to press this switch to "OFF" before driving.

3 Starting the engine when vehicle has been parked over an extended period


When a vehicle sits idle over an extended period of time, its engine becomes oil starved and should be cranked using the following method to distribute oil throughout the engine:

- For safety, apply the parking brake fully and chock the wheels to prevent the vehicle from moving.
- Cranking the engine as described here is essential for protection of the turbocharger.
- 1. Pull the parking brake lever or knob to fully apply the parking brake.
- Manual transmission vehicle: Place the gearshift lever in the neutral position. On automatic transmission vehicle other than FM65F, place the range selector lever in the "P" position.

On FM65F, place the range selector lever in the "N" position.

3. Without pressing the accelerator pedal, turn the starter switch to the "S" position and crank the engine for about 15 seconds.

If the engine starts, release the starter key and do not depress the accelerator pedal for roughly 15 seconds.

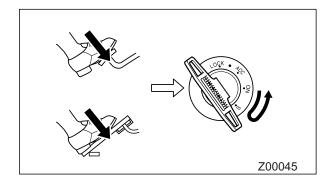

4 Starting engine with the cab tilted

When you need to start the engine with the cab tilted for inspection or servicing purposes, be sure to observe the following safety precautions:

- Set the parking brake firmly, chock the wheels, and take other necessary measures to prevent the vehicle from moving.
- With a manual transmission vehicle, check that the gear shift lever is in the neutral position. With an automatic transmission vehicle other than FM65F, check that the range selector lever is in the "P" position.

With the FM65F automatic transmission vehicle, check that the range selector lever is in the "N" position.

 Place the starter switch in the "S" position to start the engine.

Warming up the engine

Do not drive the vehicle immediately after starting the engine. Allow the engine to warm up at least until the needle moves in the water temperature gauge.

WARNING /


 Do not warm up the engine in a garage or other closed area. When starting the engine or entering or leaving a garage, do not run the engine for longer than is necessary as the accumulation of exhaust gas in closed areas is very dangerous.

Exhaust emissions contain carbon monoxide (CO), which if breathed can cause unconsciousness or death.

 If you smell exhaust gases inside the cab, inspect the exhaust pipe and check whether exhaust gases are leaking through holes or cracks caused by corrosion or damage. If exhaust gases are leaking, have the exhaust pipe inspected by an authorized dealer.

If exhaust gases that have leaked from the exhaust pipe come into the cab, ventilate the cab with fresh air by opening the windows fully or by opening the doors.

• Make sure that there are no flammables such as dry grass under or behind the parked vehicle, especially close to the exhaust pipe. A fire could be started by the heat from the engine or exhaust pipe.

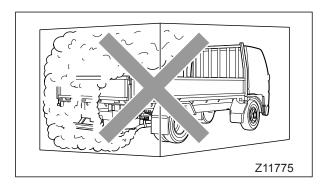

Racing the engine immediately after starting may cause rapid wear of cylinders and pistons, leading to engine failure. Be sure to follow the following warming up procedure.

NOTE:

- Immediately after starting, ignition is somewhat harder to take place due to the low temperature of the engine, which may cause knock, especially in cold regions.
- Idling the engine for long time wastes fuel, and is therefore detrimental to environmental protection and resource conservation. So shut down the engine whenever you leave the vehicle, even for a short period.

After the engine has been idling for a relatively long time, white smoke may be given off from the muffler when driving off from a standstill and accelerating. This is a normal effect of the catalytic converter that is located in the muffler, and does not indicate any abnormality.

1. When the engine has started, remove your foot from the clutch pedal. If you started the engine with the accelerator pedal depressed, gradually release the accelerator.


If the engine idling control volume is placed in the automatic control position, it automatically adjusts the engine speed.


2. If you want to shorten the warm-up time, turn the cold start switch to ON.


NOTE:


If the engine speed is raised by the engine idling control volume with the cold start switch set to the ON position, black smoke may be produced. Before turning on the cold start switch, be sure to set the engine idling control volume to the AUTO position.

3. Continue warming up the engine until the water temperature gauge needle moves.

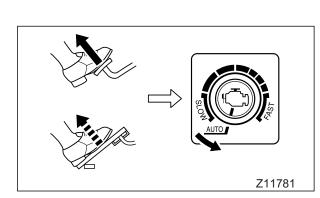

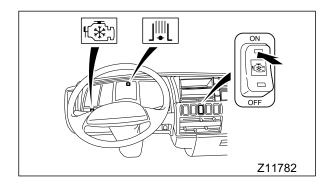

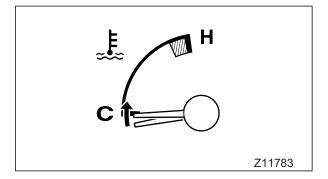

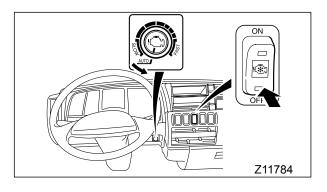


4. If you placed the engine idling control volume in the manual control position before starting the vehicle, place it in the automatic control position. Turn the cold start switch to OFF if the switch was turned to ON in step 2.

Stopping the engine

WARNING /


- Never allow the vehicle to coast with the engine stopped as braking may be ineffective and steering difficult when engine is not running. This may also cause trouble in the fuel injection system.
- The engine and exhaust pipe are extremely hot just after stopping the vehicle. Avoid parking the vehicle where the exhaust pipe could set fire to materials such as dry grass.

- Allow the engine to idle for at least 3 minutes before stopping it. Not doing so could result in an engine malfunction.
- The engine should only be stopped from an idle. Stopping it at a high RPM could result in an engine malfunction.
- After stopping the engine, do not leave the starter switch in the "ON" or "ACC" position since this could drain the battery. Turn the switch to the "LOCK" position or to the position between the "ACC" and "LOCK" positions (marked with a "•").
- 1. Apply the parking brake while depressing the brake pedal.

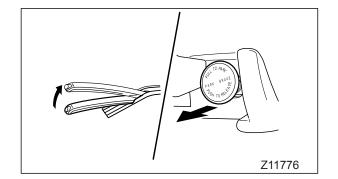

2. Manual transmission vehicle: Place gearshift lever in the neutral position. Automatic transmission vehicle: Place range selector lever in the "P" position <other than FM65F> or "N" position <FM65F>.


- 3. Allow the engine to idle for more than 3 minutes before stopping it. When the vehicle is in motion, engine parts become extremely hot. This is particularly true during uphill or high-speed driving. Therefore, let the engine cool down sufficiently by allowing it to idle for a time before stopping it.
- 4. Turn the starter switch to the "ACC" position to stop the engine.

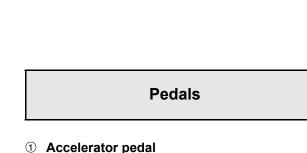

Racing the engine also increases fuel consumption.


WARNING /!


If you use a floor mat, lay it correctly and make sure it is suitable for the size of the vehicle. It is dangerous for a floor mat to cover the accelerator pedal or for floor mats to be laid in multiple layers since the accelerator pedal may be prevented from returning when released.

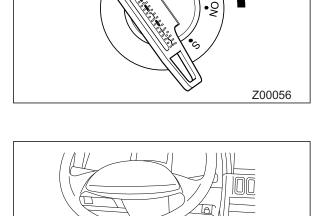

2 (1)

<u>`</u>0ČK

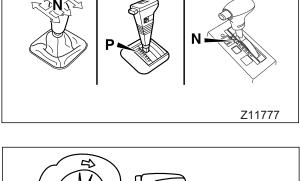

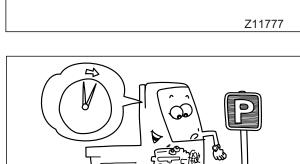

Z11785

Z11787

② Brake pedal

Use the brake pedal correctly.

⇔∭ P. 7-7

WARNING <u>/i</u>

Do not allow the floor mat, gravel, or empty beverage cans or bottles to get under the brake pedal as they will interfere with brake pedal movement.


Keep the floor free of any objects obstructive to operation of the pedal. Mud, dust or floor mat, if caught in the pedal, may also cause dragging of brakes.

③ Clutch pedal

<Manual transmission vehicles>

Do not operate the vehicle with your foot on the clutch pedal as doing so can shorten the service life of the clutch. It may also cause the engine braking and exhaust braking performance to deteriorate. For details of clutch pedal usage when pulling away, refer to "Precautions when setting the vehicle in motion" on page 7-2.

For details of clutch pedal usage while driving, refer to "Precautions for driving" on page 7-3.

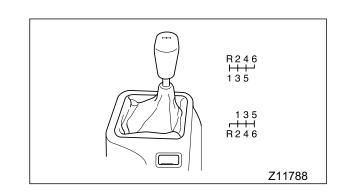



Gearshift lever

<Manual transmission vehicles>

- Shifting from a forward gear to the reverse gear or vice versa, should be done only after the vehicle has come to a complete stop.
 When backing up, always double check to make sure that there is nothing in your path.
- When the gearshift lever is in the neutral position, never keep your hand on the lever, as a forward or backward pressure resulting from this practice could cause malfunction of the transmission.
- When shifting, fully depress the clutch pedal and then operate the gearshift lever. Otherwise, damage to the transmission may result.
- The gear pattern is inscribed on gearshift lever.
- When the gearshift lever is placed in the reverse "R" position, the backup lamps light up and the backup buzzer sounds simultaneously.
- Refer to the following pages for instructions on using the 9-speed transmission.

9-speed transmission

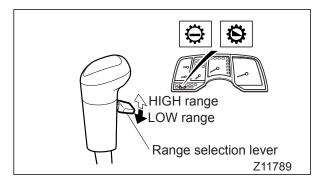

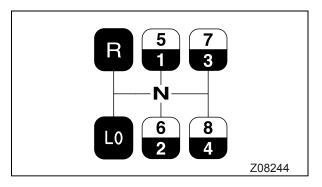

<Manual transmission vehicles>

The 9-speed transmission has two speed ranges: LOW and HIGH. The "LO" and reverse gears can be used only in the LOW range, and the other gears can be used in both the LOW and HIGH ranges.

1 Gearshift lever

The range selection lever on the gearshift lever allows selection of the LOW and HIGH ranges.

The Sindicator lamp comes on when the LOW range is selected, and the Sindicator lamp comes on when the HIGH range is selected.

Read the "Gearshifting" section for information on appropriate use of the ranges.

2 Shift pattern

The shift pattern is indicated on the top of the gearshift lever knob.

LOW range: LO - 1 - 2 - 3 - 4 Reverse "R"

HIGH range: 5 – 6 – 7 – 8

N: Neutral position

3 Gearshifting

- Standing start
- 1. Select the LOW range with the range selection lever.
- 2. Make sure the 🙀 indicator lamp is illuminated.
- 3. Depress the clutch pedal fully.
- 4. Move the gearshift lever from the neutral position to the "LO" or 1st position.
- 5. Release the clutch pedal slowly and depress the accelerator pedal.

The LOW range must be selected when the "LO" gear is used. Make sure the ♣ indicator lamp is illuminated before moving the gearshift lever to the "LO" position.

Upshifts and downshifts (LO ↔ 4th; 5th ↔ 8th)

Operate the gearshift lever and pedals in the same way as with a standard manual transmission.

Range changes from 4th to 5th

- 1. While driving in the 4th gear, move the range selection lever to the HIGH range position.
- 2. Depress the clutch pedal fully.
- 3. Move the gearshift lever to the neutral position.
- Make sure the indicator lamp is illuminated, then move the gearshift lever to the 5th position.
- Release the clutch pedal and depress the accelerator pedal.

• Range change from 5th to 4th

- 1. While driving in the 5th gear, move the range selection lever to the "LOW" range.
- 2. Depress the clutch pedal fully.
- 3. Move the gearshift lever to the neutral position.
- Make sure the period indicator lamp is illuminated, then move the gearshift lever to the 4th position.
- Release the clutch pedal and depress the accelerator pedal.

- Range changes from LOW to HIGH and vice versa take place when the gearshift lever passes through the neutral position after the range selection lever has been moved to the HIGH or LOW position.
- Whenever you change the range, move the range selection lever to the LOW or HIGH position first and then move the gearshift lever as desired.
- When the gearshift lever is in the neutral position, never keep your hand on the lever, as a forward or backward pressure resulting from this practice could cause malfunction of the transmission.


Reversing

- With the gearshift lever in the neutral position, move the range selection lever to the LOW range position. Make sure the indicator lamp is illuminated.
- 2. Depress the clutch pedal fully.
- Move the gearshift lever to the reverse position. The backup lamp will illuminate and the buzzer will sound.
- 4. Release the clutch pedal slowly and depress the accelerator pedal.

- The LOW range must be selected when the vehicle is reversed. Make sure the indicator lamp is illuminated before moving the gearshift lever to the "R" position.
- Never move the range selection lever to the HIGH position while reversing the vehicle. The vehicle speed would be dangerously high with the HIGH range selected.
- Shifting from a forward gear to the reverse gear or vice versa, should be done only after the vehicle has come to a complete stop.
 When backing up, always double check to make sure that there is nothing in your path.

• Skipshifting

You can skip gears when upshifting or downshifting to a desired gear. With a downshift, first make sure the engine speed is low enough for the engine not to overrev.

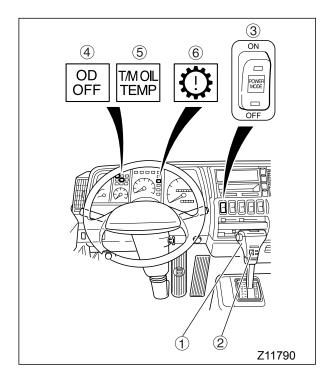

Allison automatic transmission LCT 1000/2400 series

<All models except FM65F with automatic transmission>


Please refer to the attached Allison Operator's Manual for instructions not covered in this Owner's Manual.

- ① Range selector lever
- ② Overdrive switch
- ③ Power mode switch
- ④ Overdrive off indicator lamp
- ⑤ Transmission fluid temperature warning lamp
- 6 Transmission warning lamp

1 How to use the range selector lever

WARNING /!

- When shifting from the "P" or "N" position to other positions, be sure to keep the brake pedal depressed or set the parking brake.
- Do not move the range selector lever to the "D" or "R" position when the engine speed is high during engine warm up, operation of the air conditioner, or depression of the accelerator pedal. Shifting under this condition is highly dangerous as the vehicle will jerk.

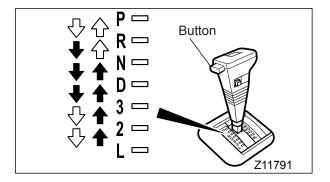

The range selector lever is used to select gear ranges.

Select lever positions carefully to ensure proper engagement of each gear.

When the gearshift lever is placed in the reverse "R" position, the backup lamps light up and the backup buzzer, if provided, sounds simultaneously.

 \uparrow Push the button and move the lever.

 $\mathbf{\bar{A}}$ Move the lever without pushing the button.

NOTE:

 Before starting to move the vehicle forward or backward, you must depress the brake pedal and wait until the engine speed reaches a regular idling speed before placing the range selector lever in the "D" or "R" position.

If you try to move the range selector lever to the "D" or "R" position while the engine is running faster than a regular idling speed or the vehicle is in motion, the safety system may cause the transmission to remain in neutral. If this happens, a buzzer will sound and you must then perform the range selector lever operation again.


• To place the range selector lever in the "P" position, proceed as follows. Depress the foot brake pedal to bring the vehicle to a halt, then apply the parking brake. Move the lever from either the forward or reverse range, whichever the gear is in at that time, to the "N" position. Then, finally move the lever to the "P" position. If this process is not followed, it may require great effort to move the range selector lever out of the "P" position and back to other ranges.


2 Overdrive switch


Pressing the switch to the down position will turn it off and pressing it again to the up position will turn it on.


The OD OFF indicator lamp will light up when the switch is pressed to the OFF position.

- ON: Place the switch in this position for normal driving. Make sure the switch is in this position during high-speed driving. When the overdrive switch is ON, the transmission will operate in the 5-speed mode, which makes driving more economical.
- OFF: Use this position for downhill driving requiring engine braking and long uphill driving. The transmission will operate in the 4speed mode.

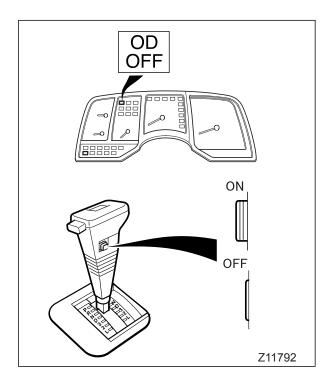

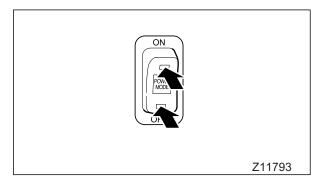

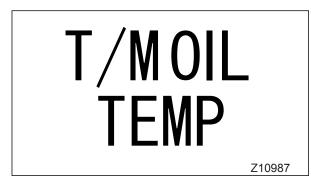

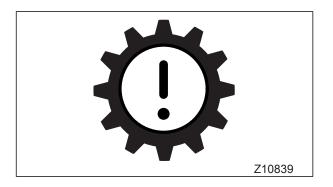

3 Power mode switch

A choice of two driving modes is available to suit the road conditions and the load being carried.

Press the ON side of this switch to activate the power mode. Pressing the OFF side of the switch will cause the transmission to revert to the normal mode.

The lamp inside the switch will light up when the power mode is selected.

Power mode

This is used when a powerful driving force is needed, such as in mountainous areas, when carrying heavy loads, and when overtaking safely on expressways.

Normal mode

This is used for normal driving, and provides a smoother, quieter, and more economical ride.

4 If a warning lamp illuminates

Transmission fluid temperature warning lamp

This lamp illuminates if the automatic transmission fluid becomes excessively hot. If the lamp illuminates while the vehicle is in motion, pull over at the nearest safe place, put the range selector lever in the "P" position, and run the engine at slightly higher than idling speed to cool down the transmission.

If the warning lamp goes out, it is safe to continue driving.

If the warning lamp does not go out, or if it repeatedly lights up, you must have your vehicle repaired by an authorized dealer.

While cooling the transmission, check the automatic transmission for fluid leakage. If any leakage is found, call an authorized dealer for repair.

• Transmission warning lamp

 This lamp illuminates when there is something wrong in the transmission's electronic control system.

If it illuminates when the starter key is moved to the "ON" position, but then goes out after a few seconds, this means the electronic control system is working properly.

If the lamp illuminates while the vehicle is moving, drive to a safe place and stop.

 If the electronic control system fails, the fail-safe feature kicks in and the vehicle goes into backup mode. In this mode, the vehicle can still be driven to a safe place. If it is not possible to shift between gears, do it manually as follows to drive the vehicle to a safe place.

 Manually driving the vehicle to a safe place
 If a failure in the electronic control system disables gear shifting, remove the 2 "A/T" fuses in the sub-fuse box. This will enable driving using the range selector lever as follows.


 For the locations of the "A/T" fuses, refer to the decal on the back of the glove box lid.

⇔∏ P. 13-8

Range selector lever position	Corresponding range/ gear in manual mode	
Р	Park	
R	Reverse	
N	Neutral	
D	Fixed in 3rd	
3	Fixed in 3rd	
2	Fixed in 3rd	
L	Fixed in 3rd	

 Wait 10 seconds after stopping the engine, then start it again. If the fault was only temporary, the system may return to normal.
 If the warning lamp does not go out, or if it keeps

illuminating from time to time, the system needs repairing. Contact an authorized dealer.

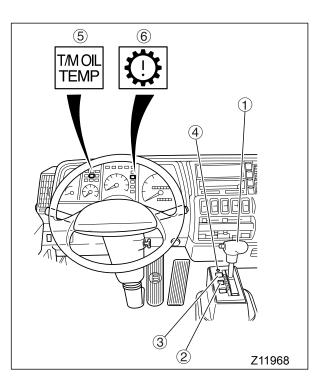

Allison automatic transmission MD3060P series


<FM65F model with automatic transmission> Please refer to the attached Allison Operator's Manual for instructions not covered in this manual.


- ① Range selector lever
- 2 Digital display
- ③ Mode button
- ④ Mode indicator
- ⑤ Transmission oil temperature warning lamp
- ⑥ Transmission warning lamp


1 How to use the range selector lever

WARNING /!

- When shifting from the "N" position to other positions, be sure to keep the brake pedal depressed or set the parking brake.
- Do not move the range selector lever to the "D" or "R" position when the engine speed is high during engine warm-up, operation of the air conditioner, or depression of the accelerator pedal. Shifting under this condition is highly dangerous as the vehicle will jerk.

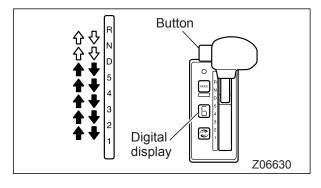

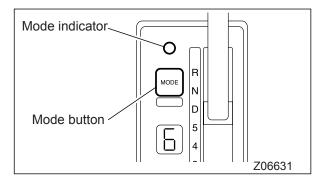

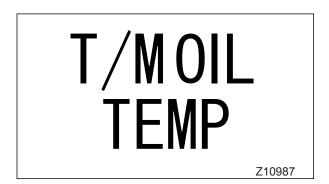

The range selector lever is used to select gear ranges. Select lever positions carefully to ensure proper engagement of each gear.

When the gearshift lever is placed in the reverse "R" position, the backup lamps light up and the backup buzzer, if provided, sounds simultaneously.

- \uparrow Push the button and move the lever.
- A Move the lever without pushing the button.
- The digital display will indicate the selected range.

NOTE:

Before starting to move the vehicle forward or backward, you must depress the brake pedal and wait until the engine speed reaches a regular idling speed before placing the range selector lever in the "D" or "R" position.

If you try to move the range selector lever to the "D" or "R" position while the engine is running faster than a regular idling speed or the vehicle is in motion, the safety system may cause the transmission to remain in neutral. If this happens, a buzzer will sound and you must then perform the range selector lever operation again.

2 Mode button

A choice of two driving modes is available to suit the road conditions and the load being carried. Pressing the mode button changes the mode back and forth between Power mode and Normal mode. When the transmission is in Power mode, the mode indicator illuminates.

Power mode

This is used when a powerful driving force is needed, such as in mountainous areas, when carrying heavy loads, and when overtaking safely on expressways.

Normal mode

This is used for normal driving, and provides a smoother, quieter, and more economical ride.


3 If a warning lamp illuminates

Transmission fluid temperature warning lamp

This lamp illuminates if the automatic transmission fluid becomes excessively hot. If the lamp illuminates while the vehicle is in motion, pull over at the nearest safe place, put the range selector lever in the "N" position, and run the engine at slightly higher than idling speed to cool down the transmission.

If the warning lamp goes out, it is safe to continue driving.

If the warning lamp does not go out, or if it repeatedly lights up, you must have your vehicle repaired by an authorized dealer.

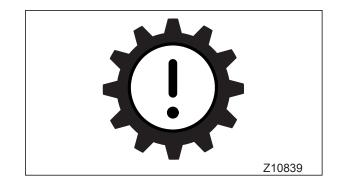

While cooling the transmission, perform the following inspection:

1. Check that the electric fans on both sides of vehicle are operating.

WARNING /!

Never touch the fan even if it is not turning. The fan could suddenly start operating and cause injury.

2. If the fan is not operating, check the fuse; replace it if blown.

Check the oil cooler for mud or other dirt, and
clean it if necessary.⇔ □ P. 12-65

 Check the automatic transmission for fluid leakage. If any leakage is found, call an authorized dealer for repair.

• Transmission warning lamp

This lamp illuminates when there is something wrong in the transmission's electronic control system.

If it illuminates when the starter key is moved to the "ON" position, but then goes out after a few seconds, this means the electronic control system is working properly.

If the lamp illuminates while the vehicle is moving, drive to a safe place and stop.

NOTE:

Do not stop the engine until the vehicle is in a safe place. If the engine is stopped, the gear will automatically go into the neutral, and the vehicle will not be able to move.


Wait 10 seconds after stopping the engine, then start it again. If the fault was only temporary, the system may return to normal.


If the warning lamp does not go out, or if it keeps illuminating from time to time, the system needs repairing. Contact an authorized dealer.


Parking brake

WARNING /!

Do not use the parking brake when driving except in an emergency, link if the service brakes have failed. Such use of the parking brake may make the vehicle spin or, at worst, roll over. It may also cause faults in vehicle components.

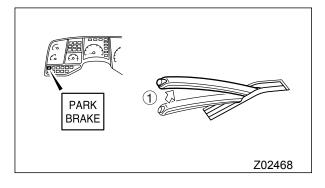

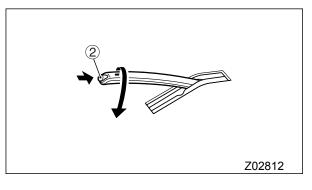

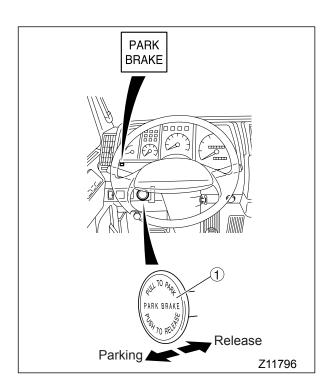

1 Parking brake lever

<All models except FM657F>

• To set for parking

The parking brake is activated when the parking brake lever ① is pulled. At the same time, indicator lamp $\frac{PARK}{BRAKE}$ lights up.

• To release

To release the parking brake, press the button (2) at the end of the lever while raising the latter slightly. Then, with the button pressed, return the lever to its original position.

• How to park ⇒ □ P. 7-12

- Illumination of indicator lamp PARK does not necessarily indicate that the parking brake has been fully activated. Be sure to pull the lever all the way.
- Before putting the vehicle in motion, check that indicator lamp PARK is not illuminated.
- Do not drive with the parking brake applied. Doing so will not only degrade the parking brake performance but also cause the parking brake to overheat, possibly resulting in a fire.

2 Parking brake control valve

<FM65F>

• To set for parking

Pull knob 1 of the parking brake control valve; the rear wheels are blocked and the park indicator lamp lights up.

• To release

Make sure that the $_{\rm AIR}^{\rm BRAKE}$ warning lamp is not illuminated. Push the knob and confirm that the $_{\rm BRAKE}^{\rm PARK}$ indicator lamp goes out.


How to park


⇔∭ **P. 7-12**

- Brake line air pressure may temporarily drop after a release of the parking brake. Always check the air pressure before driving.
- When the BRAKE warning lamp is illuminated, the brakes are not completely released even if the knob is pressed. Driving under such a condition may cause the brakes to drag.

If the air pressure in the parking brake system falls due to factors like damage to the brake line, the brake might not release even when the brake control valve knob is pressed.

⇔ 💭 P. 13-14

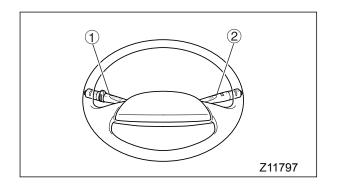

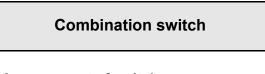

1 Arrangement of switches

- ① Lighting switch Turn signal lamp switch Passing signal/dimmer switch Auto cruise cancel switch and set/ resume switch
 ⇒ □ P. 5-29
- Wiper and washer switch Hazard warning lamp switch Exhaust brake switch

2 Lighting switch


The lighting switch can be used with the starter switch in any position.


Turning the knob at the end of the lever controls the illumination of lamps as follows:


Switch position	Clearance/side marker lamps, identification lamps, parking lamps, rear combina- tion lamps, backup lamps, license plate lamp, and meter illumination lamps	Head- lamps
OFF	Off	On*
ED OE	On On*	
≣D	On	On


*: Illuminated by daytime running light system

Keeping the headlamps on for a long period without the engine running can drain the battery, making the engine impossible to start.

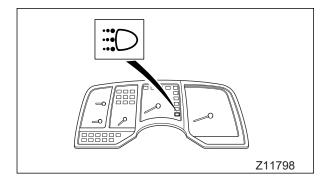

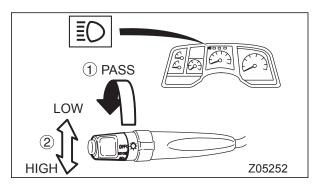

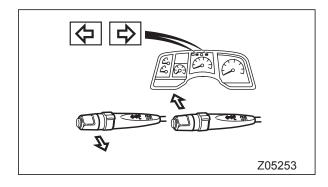

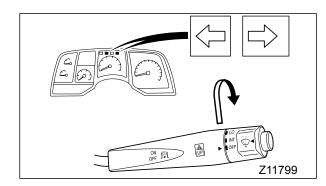

NOTE:

Even when the vehicle is operated with the lighting switch in the "OFF" or $\ge 0 \le \infty$ position, the daytime running light system causes the low-beam headlamps to be lit. (The headlamps are dimmer than when activated using the lighting switch.) The $\cong \bigcirc$ indicator lamp is also lit. When the parking brake is applied or the engine is stopped, the headlamps and the $\equiv \bigcirc$ indicator lamp go off.

3 Passing signal/dimmer switch

① Passing signal

Pulling the lever up activates the high beams. Use this to flash a signal when overtaking another vehicle.

② Dimmer

With the headlamps illuminated, pushing the lever down activates the headlamp high beams and pulling it back to the original position reactivates the low beams. When the high beams are on, indicator lamp $\equiv \bigcirc$ lights up.

4 Turn signal lamp switch

• Turn signal

Moving the lever forward or backward activates the corresponding turn signal causing it to flash. At the same time, the corresponding indicator lamp \triangleleft or \dashv flashes.

When the steering wheel is returned to the neutral position after a right or left turn, the switch automatically moves back to the neutral position and the lamp stops flashing. After making a moderate turn, however, the switch will sometimes not return automatically. In this case, put the switch in the neutral position by hand.


• Lane changer

Lightly pushing the lever forward or backward causes the corresponding turn signal lamp to flash while the lever is held in this position.

5 Hazard warning lamp switch

The hazard warning lamps may be used as a warning to other vehicles when you suddenly find it necessary to stop your vehicle in emergencies.

The lamps can flash in any of the starter switch positions.

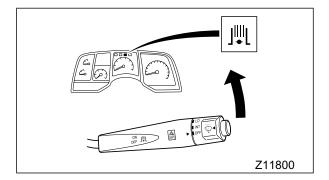

The battery may be discharged and the engine impossible to restart if the hazard warning lamps are operated for an extended period of time.

6 Exhaust brake switch

Using the exhaust brake on a wet, frozen, snow-covered, or otherwise slippery road surface when the vehicle is lightly loaded or not loaded can cause the tires to slip on the road surface, resulting in a skid. Do not use the exhaust brake on slippery road surfaces.

The exhaust brake enhances engine braking. Use it as an auxiliary braking means on downhill stretches or during high-speed driving.

NOTE:

Do not keep the exhaust brake switch in the activation position at all times. Frequent use of the exhaust brake reduces fuel economy. Move the exhaust brake switch between the activation and non-activation positions as necessary according to road and traffic conditions.

Pushing the lever forward activates the exhaust brake. While the exhaust brake activated, indicator lamp Jul stays illuminated.

The exhaust brake is temporarily deactivated if any of the actions listed below are performed. It will become active again as soon as the vehicle returns to its previous state.

- Depressing the accelerator pedal
- Depressing the clutch pedal <manual transmission models>
- Moving the gearshift lever or selector lever to the neutral position
- Operating the anti-lock brake system
- Driving at a very low speed or reversing <automatic transmission models>

NOTE:


In an FM65F automatic transmission vehicle, activating the exhaust brake while the vehicle is running in 6th gear causes the transmission to shift down to 5th gear.


7 Wiper and washer switch

WARNING /!

- Do not operate the windshield wipers or washer when you are servicing your vehicle with the front panel opened as the wiper link inside is potentially dangerous.
- In cold weather, warm the windshield with the heater before operating the washer since washer fluid could otherwise freeze onto the windshield and obstruct your vision.

- Operating the wipers when the windshield is dry damages the windshield glass. Always squirt the glass with washer fluid before operating the wipers.
- Never operate the wipers and washer with the wiper arms raised. The arms could be damaged.
- Do not operate the wipers when the rubber parts of the wiper blades are frozen onto the windshield or otherwise stuck to the windshield. The wiper blades could get damaged, and the wiper motor could fail.
- When the wipers are not used for a long time, dust, sand, and other substances can collect between the wiper blades and windshield. Clean the wipers before using them. Otherwise, the windshield may get scratched.
- Operating the washer continuously for more than 20 seconds or when there is no fluid in the reservoir could burn out the washer motor.
- Rotating the grip at the end of the lever activates the windshield wipers in one of the following three modes:
- INT: Wipers operate intermittently at 3 to 5 second intervals.
- ② LO: Wipers operate at a slow speed.
- ③ HI: Wipers operate at a rapid speed.
- To activate the windshield washer, push ④ the button at the end of the lever; the washer fluid will be sprayed and the wiper will operate one or two strokes automatically.
- Refill the washer fluid reservoir if the fluid level is low.
 ⇒ □ P. 12-60

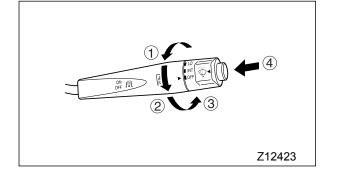

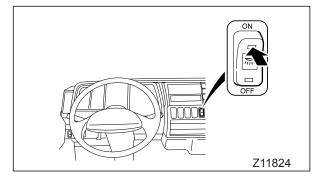


Van body dome light switch

This switch operates the lighting inside the van body. With the starter switch in the "ON" position, operate the van body dome light switch to turn the van body interior lighting on or off. An indicator lamp comes on in the switch when it is in the "ON" position.




Leaving the van body interior lighting on for an extended period without the engine running can drain the battery.

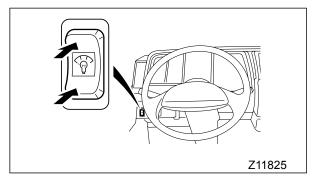

Brightness control switch

Use the brightness control switch to adjust the intensity of the meter cluster illumination lamps. With the meter cluster lamps on, press and hold either side of the switch to set the lamps to your desired brightness, then release the switch.

To brighten: Press upper side of the switch To darken: Press lower side of the switch

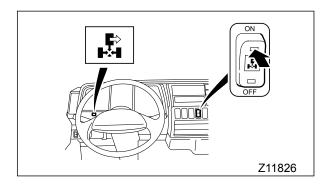



This switch is used to engage and disengage the power take-off device that transfers engine power through the transmission.

- To engage power take-off, turn on the switch only after depressing the clutch pedal.
- Never attempt to engage the power take-off while the vehicle is in motion.
- Disengage the power take-off before driving the vehicle. It is dangerous to drive the vehicle with the power take-off engaged because vehicle-mounted equipment that is driven through the power take-off could operate. Also, the vehicle-mounted equipment could fail.
- Pressing switch to the ON position with the clutch pedal depressed engages the power take-off. When the power take-off is engaged, the lamp inside the switch and the sindicator lamp light up.
- To disengage the power take-off, turn the switch OFF.

Cruise control

Cruise control memorizes any desired speed above the speeds given below and maintains that speed automatically without operating the accelerator pedal. It is especially useful for freeway driving that involves almost no chances of pulling over and stopping.

	Speeds above which cruise control functions
Manual transmis- sion vehicle	Approx. 40 km/h (25 mph)
Automatic trans- mission vehicle	Approx. 57 km/h (35 mph)

NOTE:

For the sake of safety, do not use the cruise control in the following driving conditions:

- In heavy traffic which does not allow sufficient vehicle to vehicle distance
- On roads with sharp turns or poor visibility
- On icy, snow-covered, or otherwise slippery roads
- Steep downhill road

The vehicle speed may become higher than the set speed on a steep downhill road. Stop using the cruise control if this occurs.

$\textcircled{1} \quad \textbf{Main switch}$

This switch is used to activate and deactivate the cruise control function. The lamp inside the switch illuminates when the cruise control is on.

WARNING <u>/</u>

For safety, turn off the main switch when the cruise control is not in use.

② Cancel switch

Used to terminate cruise-control operation.

③ SET/RESUME switch

SET position: Used to set a desired speed and to reduce the set speed.


RESUME position:


Used to increase the set speed and to return to a previously memorized speed.


④ Cruise control indicator lamp If the cruise control is activated, this lamp illuminates during driving.


NOTE:

The \mathcal{R} indicator lamp will light up when the starter switch is turned to the ON position and the engine is not running. It will go out in a few seconds if there are no problems.

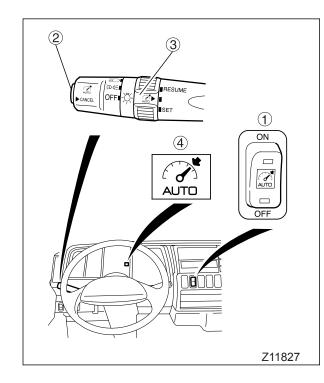

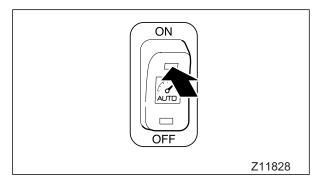

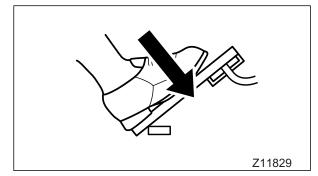

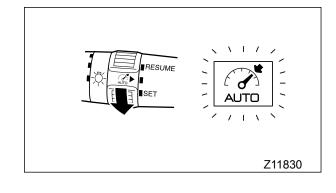


1 To set a desired speed


- Check that the exhaust brake switch is in the OFF position. If the switch is in the ON position, place it in the OFF position.
 Press the ON side of the main switch. The lamp inside the switch will illuminate.
- 2. Depress the accelerator pedal until the desired speed is reached.


3. When the desired speed is reached, turn the "SET/RESUME" switch to the "SET" position. The control is activated indicating that the cruise control is activated. Now the desired speed is memorized, so release the accelerator pedal. The vehicle will run maintaining that speed automatically.

NOTE:

- When setting the desired speed, the gearshift lever in a manual transmission vehicle must be in the 4th or higher gear position and in an automatic transmission vehicle, the selector lever must be in the "D" position.
- Before pressing the ON side of the main switch to set a desired speed, make sure the exhaust brake switch is in the OFF position. You will not be able to set the speed if the exhaust brake switch is in the ON position. When driving with the cruise control active, exhaust braking can be used as usual, but the cruise control function will be deactivated while exhaust braking is being used.

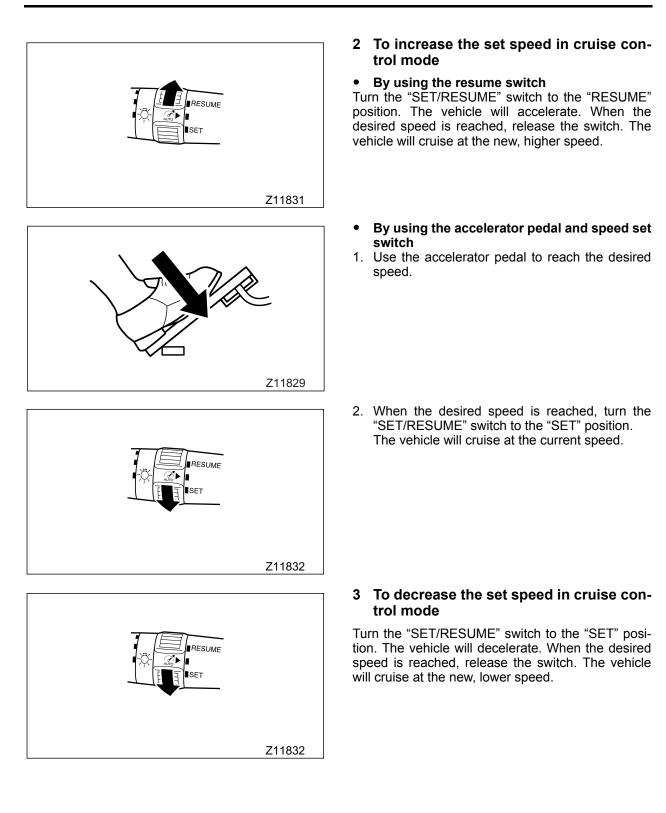

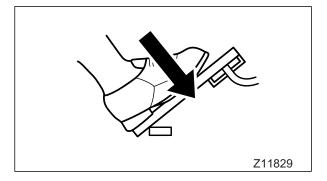

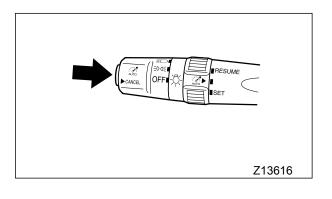

4 To accelerate temporarily in cruise control mode

Depress the accelerator pedal as you do in normal accelerating. When the pedal is released, the vehicle will cruise at the set speed again.

5 Automatic deactivation of the cruise control

The cruise control is deactivated automatically and the \mathcal{Q}_{e}^{*} indicator lamp also goes out in the following conditions:

- When the cancel switch is pushed
- When the brake pedal is depressed
- When the exhaust brake is activated
- When the clutch pedal is depressed <Manual transmission vehicles>
- When the gearshift lever is placed in the neutral position <Manual transmission vehicles>
- When the range selector lever is placed in the "N" position <Automatic transmission vehicles>

In an automatic transmission vehicle, placing the range selector lever in the "N" position temporarily deactivates the cruise control. However, such practice is dangerous during driving because engine braking will no longer be possible. It will also cause malfunction of the automatic transmission.

TI1833


6 To reactivate the temporarily deactivated cruise control

- To reactivate the cruise control, turn the "SET/ RESUME" switch to the "RESUME" position. The A indicator lamp will illuminate again and the vehicle will resume running at the set speed.
- To reactivate the cruise control with a different speed specified, turn the "SET/RESUME" switch to the "SET" position when the vehicle reaches your desired speed. The similar indicator lamp will light up, and the vehicle will continue running at the set speed.

NOTE:

Under any of the following conditions, you cannot resume the set speed by performing the above operation. In these situations, perform the speed setting procedure from the beginning.

- The vehicle speed is lower than 30 km/h (18 mph).
- The 3rd or lower speed gear is selected.

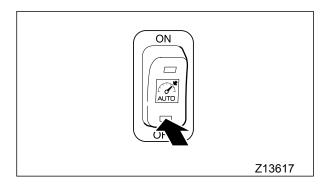

7 To deactivate the cruise control

Press the OFF side of the main switch.

- Consult an authorized dealer if you wish to install a radio transmitter/receiver equipment. Proper operation of the cruise control cannot be ensured if this equipment is installed in an inappropriate location or is incorrectly adjusted.
- If the control warning lamp illuminates, turn off the cruise control main switch and have the vehicle inspected by an authorized dealer.
- When there is a problem with the engine control system, the cruise control cannot be used.

Air suspension height control

<Rear air suspension vehicles>


It is possible to lower the cargo bed while the vehicle is stationary. This function can be used with the starter switch in "ON" or "ACC" position.

NOTE:


- The height control switch should be turned off when adjustment of the cargo bed height is not being performed.
- Compressed air will be required to move the cargo bed back to driving height. It is important, therefore, that the engine be started up.
- Extended periods of use while the engine is not running can be the cause of flat batteries.


1 Lowering the cargo bed

- 1. Set the starter switch in "ON" or "ACC" position.
- 2. Apply the parking brake securely. In a manual transmission vehicle, set the gearshift lever in neutral. In an automatic transmission vehicle, set the range selector lever in "P" or "N" range.

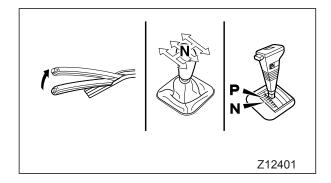

5-34 Switches and controls

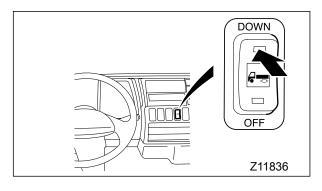

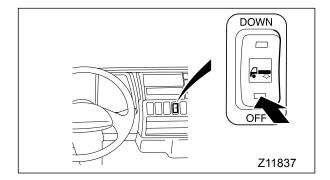

3. Push the DOWN side of the height control switch to lower the cargo bed.

NOTE:

- The system will prevent the cargo bed from lowering if the vehicle is in any of the following conditions.
 - The parking brake is not applied.
 - The starter switch is not in the "ON" or "ACC" position.
 - The gear shift lever is not in "NEUTRAL" (vehicle with manual transmission).
 - The range selector lever is not in the "P" or "N" range (vehicle with automatic transmission).
- If either of the following operations are performed during the lowering process, the cargo bed will automatically return to driving height. The height control switch will automatically return to OFF.
 - The parking brake is released.
 - The starter switch is turned to positions other than "ON" or "ACC".
 - The gear shift lever is moved out of "NEU-TRAL" (vehicle with manual transmission).
 - The range selector lever is moved out of the "N" or "P" range (vehicle with automatic transmission).

2 Returning the cargo bed to driving height

Push the OFF side of the height control switch to automatically return the cargo bed to driving height.

NOTE:

Be sure to push the OFF side of the height control switch before the vehicle is driven.

WARNING /!

The air suspension height control system uses compressed air from the brake system. It is important to confirm that the BRAKE warning lamp is not lit and that no buzzer is sounding before the vehicle is driven.


6. Instruments and warning lamps


Arrangement of instruments and warning lamps	6-2
Speedometer	6-2
Tachometer	6-2
Air pressure gauge	6-3
Water temperature gauge	6-3
Fuel gauge	6-4
Warning/indicator lamps	6-4


۲

•

6-2

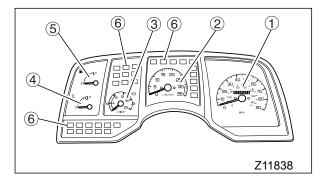

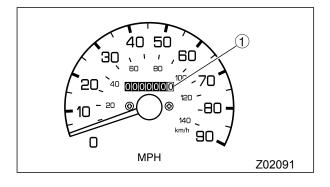

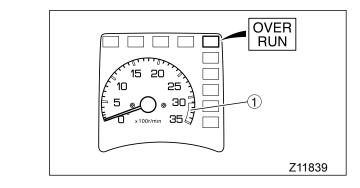

Arrangement of instruments and warning lamps

- ① Speedometer
- ② Tachometer
- ③ Air pressure gauge
- ④ Water temperature gauge
- ⑤ Fuel gauge
- 6 Warning/indicator lamps

Speedometer


- The speedometer indicates vehicle speed in MPH and km/h.
 - The outer numbers denote MPH, and the inner numbers denote km/h.
- The odometer ① indicates in miles the total distance covered by the vehicle. Black figures represent one-tenth of miles.



- The tachometer indicates engine speed in revolutions per minute.
- The red zone ① indicates that engine is overreved. Reduce the vehicle speed sufficiently so that the needle does not enter this range during downhill driving or downshifting.

The term "overrev" refers to an operational state of the engine in which it turns at an RPM exceeding the maximum limit. Persistent over-revving could lead to an engine failure.

• **Tachometer with overrevving alarm** <Vehicles with 9-speed transmission> When the engine speed exceeds 3,400 rpm, warning lamp ^{over} lights up and a buzzer sounds.

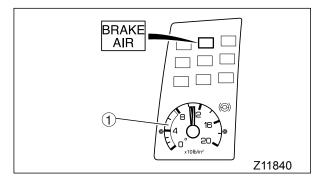


Air pressure gauge

The air pressure gauge indicates the amount of air pressure in the air tank. Red zone indicates that air pressure is either too low or too high.

If the needle deflects into the red zone ①, warning lamp BARE lights up and a buzzer sounds. The outer needle indicates the rear brake line air pressure, while the inner needle indicates the front brake line air pressure. Whenever the warning lamp BARE illuminates, pull off the road as soon as you can safely do so, and let the engine rotate at a speed in the intermediate range until air pressure builds to a normal level. If air pressure fails to build or takes longer to return to a normal level than it should, or again, if the needle indicates a high pressure over 130 lb./ in², call an authorized dealer.

WARNING

Never operate the vehicle if warning lamp BRAKE is lit up as brakes may be inoperative.

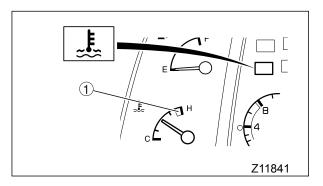

Water temperature gauge

This gauge indicates the temperature of the engine coolant.


With the engine running normally, the needle should be in the center of the gauge.

If the needle points in the red zone ①, the engine has overheated. The <u>t</u> warning lamp will light up and a buzzer will sound simultaneously. Should this occur, pull off the road as soon as you can safely do so and let the engine rotate at a speed above idling speed to cool it down.

If the vehicle has an air conditioner, switch it off.

⇔ 💭 P. 13-7

 Be sure to stop the engine only after letting it run at a speed slightly above the idling RPM until the coolant cools down. Turning off the engine immediately after stopping will cause the coolant temperature to rise quickly and may cause the engine to seize up. 6-4

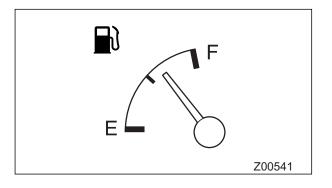

Fuel gauge

The fuel gauge indicates the amount of fuel still remaining in the fuel tank.

F: Full

E: Empty

When the needle approaches the "E" mark, refuel as soon as possible. \Rightarrow [] P. 1-5

The fuel injection system may fail if the engine stops due to lack of fuel.

NOTE:

The fuel gauge needle constantly follows the fuel level; it remains set even when the starter switch is in the "ACC" or "LOCK" position, indicating the fuel level at that time.


The reading may, however, change slightly over a long period even if the actual fuel level does not change.

Warning/indicator lamps

1 Arrangement of warning/indicator lamps

The illustrations below show the standard arrangement of the warning and indicator lamps. Some lamps may not be included depending on vehicle specifications.

The red warning lamps, if illuminated, warn you of vehicle component failures and possible danger of accident. Never drive the vehicle while a red warning lamp is illuminated. If any of them light up, stop the vehicle as soon as it is safe to do so and make checks for locating the cause. If necessary, have your vehicle repaired by an authorized dealer.

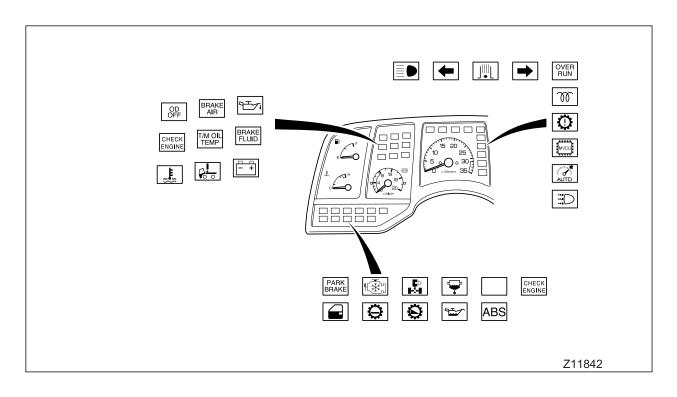

Lamp symbol	Warning/indicator lamp	If illuminated	Ref. page
— —	Charge warning lamp	Problem in battery charging system	6-9
	Open door warning lamp	Door not completely closed	3-2
6 . 0	Cab tilt lock warning lamp	Cab is tilting or incompletely locked	12-8
. 	Low coolant level/engine overheating warning lamp	 Coolant is at an excessively low level (*) Engine is overheating (*) 	6-7 12-38
الا_ل	Engine oil pressure/clogged oil filter warning lamp	 Excessively low engine oil pressure (*) Clogged oil level (*) 	6-9 12-31
٩ <u>ــــــــــــــــــــــــــــــــــــ</u>	Engine oil level warning lamp	Engine oil level is correct (when oil level check switch is operated)	12-20
BRAKE FLUID	Brake warning lamp <other fm65f="" than=""></other>	 Brake fluid at an excessively low level (*) Excessive brake shoe clearance (*) 	6-7
BRAKE A I R	Air pressure warning lamp	Low air pressure in air tank (*)	6-8
T/M OIL TEMP	Transmission fluid temperature warning lamp <automatic transmission="" vehicles=""></automatic>	Automatic transmission fluid excessively hot	5-19 5-21
٩	Transmission warning lamp <automatic transmission="" vehicles=""></automatic>	Fault in electronic control circuitry of auto- matic transmission	5-19 5-22

۲

4

-()

۲


0

6-6

Lamp symbol	Warning/indicator lamp	If illuminated	Ref. page						
CHECK	(Red) Engine control warning lamp	Fault in electronic control circuitry of fuel injection system	6-10						
ENGINE	(Amber) Engine control warning lamp	ning lamp Fault in electronic control circuitry of fuel injection system (functionality reduced)							
Ţ	Fuel filter warning lamp	Water level in fuel filter is high	12-37						
муси	Vehicle control warning lamp	Malfunction in electrical control system	6-11						
ABS	ABS warning lamp	Malfunction in anti-lock brake system (ABS)	8-4						
OVER RUN	Overrunning warning lamp <9-speed manual transmission vehicles>	Engine speed exceeding 3,400 rpm (*)	6-2						
	Daytime running light indicator lamp	Headlamps (low-beam) illuminated by daytime running light system	5-25						
$\Diamond \diamondsuit$	Turn signal indicator lamp	Turn signals activated	5-25						
≣D	Headlamp high beam indicator lamp	Headlamp high beams illuminated	5-25						
PARK BRAKE	Parking brake indicator lamp	Parking brake activated	5-22						
J∭L	Exhaust brake indicator lamp	Exhaust brake activated	5-26						
¶(Ĵ∰)	Cold start indicator lamp	Cold start switch ON	5-4						
M	Engine preheat indicator lamp	Engine being preheated	5-8						
OD OFF	Overdrive OFF indicator lamp <allison automatic transmission LCT1000/2400 series></allison 	Overdrive switch OFF	5-18						
Ø	High gear indicator lamp <9-speed manual transmission vehicles>	Transmission in HIGH range	5-15						
Ø	Low gear indicator lamp <9-speed manual transmission vehicles>	Transmission in LOW range	5-15						
	Cruise control indicator lamp	Cruise control activated	5-29						
⇒ •★•	Power take-off indicator lamp	Power take-off engaged	5-28						

•

NOTE: (*): Warning lamps illumination of which is accompanied by a buzzer sounding.

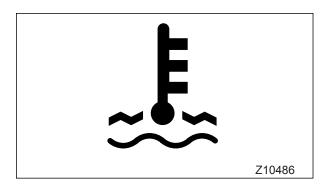

2 Low coolant level/engine overheating warning lamp

 This lamp illuminates and a buzzer sounds if there is insufficient engine coolant or if the engine overheats.

NOTE:

The buzzer stops sounding when the vehicle is stopped and the parking brake is activated.

 If the water temperature gauge's needle enters the red zone, the engine has overheated. Pull off the road as soon as it is safe to do so and run the engine slightly faster than idling speed until it cools down and then take necessary action against overheating.

WARNING /!

Driving with an overheated engine can damage the engine or even cause a fire.

Be sure to stop the engine only after letting it run at a speed slightly above the idling RPM until the coolant cools down. Turning off the engine immediately after stopping will cause the coolant temperature to rise quickly and may cause the engine to seize up.

 If the water temperature gauge's needle does not point to the red zone, there is insufficient engine coolant. Check the coolant level and add the coolant.

WARNING <u>/</u>

Driving with insufficient coolant will cause overheating, which can damage the engine and even cause a fire.

3 Brake warning lamp

<Other than FM65F>

The brake warning lamp will light up and a buzzer will sound if the brake fluid in the brake fluid reservoir tank falls below the predetermined level, or if the brake shoe clearance exceeds the predetermined value.

WARNING <u>/</u>

Never continue driving if the RAKE warning lamp is illuminated. The brakes are dangerously ineffective and could cause an accident.



Z10912

NOTE:

With the starter switch in the "ON" position and the engine not running, the BRAKE warning lamp will illuminate. It is normal if the lamp will go out when the engine is started.

- If the warning lamp stays illuminated
- Check the level of the fluid in the brake fluid reservoir tank.
- 2. If fluid level is found to be low, check for leaks.
- If leaks are detected, call an authorized dealer.
 If fluid leaks are not detected, fill with fluid to the
- normal level.
- 5. If the lamp illuminates even when the brake fluid level is correct or after fluid has been added, have the brakes inspected by an authorized dealer as soon as possible.

• If the warning lamp illuminates when the brake pedal is depressed

Brake shoe clearance (the clearance between the brake drum and brake shoe lining) is adjusted automatically. If the brake performance has deteriorated and warning lamp illuminates together with the buzzer sounding when the brake pedal is depressed, the brake shoe clearance has become excessive. Have the brakes inspected by an authorized dealer as soon as possible.

Although the brake shoe clearance is adjusted automatically, unexpected failure of the automatic adjuster can result in excessive clearance and poor brake performance. Regularly check the brake shoe clearance and how much the brake lining is worn to confirm that the automatic adjuster is functioning correctly.

4 Air pressure warning lamp

This lamp lights up and the buzzer sounds when the brake air pressure has dropped to an unsafe level at which sufficient braking performance is not ensured. Pull off the road as soon as it is safe to do so, and perform the following checks.

WARNING


- The brakes become completely inoperative when the compressed air in the air tank is exhausted.
- When the warning lamp is illuminated, the brakes are dangerously sluggish and could cause an accident. Never continue driving with the vehicle in this condition.


NOTE:

With the starter switch in the "ON" position and the engine not running, the BRAKE warning lamp will illuminate. It is normal if the lamp will go out if the engine is started.

BRAKE AIR

Z10913

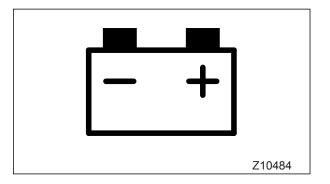

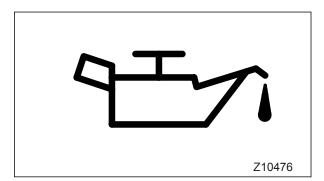

- 1. Let the engine run at an intermediate RPM until the warning lamp goes out.
- 2. Check piping and its connections for air leaks.
- 3. If the lamp does not go out or goes on again soon after it has gone out, the system must be repaired. Call an authorized dealer.

5 Charge warning lamp

The charge warning lamp lights up when the starter switch is turned to the "ON" position and goes out as soon as the alternator starts charging the battery after the engine has turned over.

The lamp also lights up if a problem occurs in the battery charging system while the engine is running. If this occurs, pull off the road as soon as it is safe to do so, and perform the following checks.

NOTE:

- The is warning lamp will light up if the starter switch is turned to the "ON" position when the engine is not running. It goes out after the engine is started if there are no problems.
- If the alternator is malfunctioning, the BRAKE and BRAKE warning lamps may light up simultaneously with the
 warning lamp.
- The buzzer stops sounding when the vehicle is stopped and the parking brake is activated.
- Check for a broken V-belt. Also check belt tension.
 ⇒ □ P. 12-44
- Check for a blown high-current fuse in the battery charging circuit. If blown, replace with a new one.

 ⇒ □ P. 13-8
- 3. If both the above checks have turned out normal, the problem is probably in the battery charging system. Call an authorized dealer.

6 Engine oil pressure/clogged oil filter warning lamp

The engine oil pressure/clogged oil filter warning lamp lights up when the oil filter element is clogged or the engine oil pressure becomes abnormally low. Pull off the road as soon as it is safe to do so, stop the engine, and perform the following inspection.

NOTE:

The $rac{}$ warning lamp will light up when the starter switch is turned to the "ON" position and the engine is not running. It goes out after the engine is started if there are no problems. In cold climates, the warning lamp may remain illuminated for a while after starting the engine due to high viscosity of the engine oil.

• If the lamp lights up without buzzer sounding The oil filter element is clogged. Replace the element as early as possible. ⇔ □ P. 12-31

Continued driving with the lamp illuminated may cause engine to seize up. Replace the element as early as possible.

• If the lamp lights up and buzzer sounds The engine oil pressure is abnormally low.

- 1. Check the engine oil level. Add if insufficient. ⇔ □ P. 12-19
- 2. Check the engine for any trace of oil leaks.
- If the oil level is normal and there is no trace of oil leaks, there is probably a problem in the lubricating system. Call an authorized dealer.

Never continue driving with the lamp illuminated. The engine could seize up.

NOTE:

The buzzer stops sounding when the vehicle is stopped and the parking brake is activated.

7 Engine control warning lamp

• Illumination of red lamp

Illumination of the red engine control warning lamp indicates a fault in the electronic control circuitry of the fuel injection system. The engine output may be limited depending on the location of the fault. If the lamp illuminates, stop the vehicle at a safe place. Place the starter switch in "ACC" or "LOCK" position for 5 seconds or longer to reset the computer and then restart the engine. If the lamp stays off, there is no problem. If the lamp illuminates again, stop the engine and contact the nearest authorized dealer.

NOTE:

The CHECK warning lamp will light up when the starter switch is turned to the "ON" position and the engine is not running. It goes out after the engine is started if there are no problems.


Illumination of amber lamp

Illumination of the amber engine control warning lamp indicates a fault in the electronic control circuitry of the fuel injection system that has caused the system's functionality to decrease. If the lamp illuminates, stop the vehicle at a safe place. Place the starter switch in "ACC" or "LOCK" position for 5 seconds or longer to reset the computer and then restart the engine. If the lamp stays off, there is no problem. If the lamp illuminates again, have your vehicle inspected at an authorized dealer in the earliest opportunity.

NOTE:

The ENGINE warning lamp will light up when the starter switch is turned to the ON position and the engine is not running. It goes out after the engine is started if there are no problems.



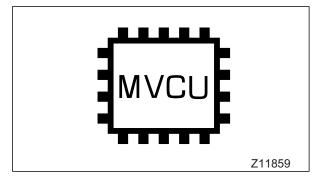

8 Vehicle control warning lamp

The vehicle control warning lamp lights up when problems occur in the vehicle's electrical control system. If it lights up, pull off the road as soon as it is safe to do so.

Place the starter switch to the "ACC" or "LOCK" position for more than five seconds, then restart the engine. If the warning lamp goes out, there are no problems. If it remains on, have your vehicle inspected by an authorized dealer as soon as possible.

NOTE:

The is warning lamp will light up when the starter switch is turned to the "ON" position and the engine is not running. If it goes out after a few seconds, there are no problems.

www.Manualslib.com manuals search engine

•

€

•

۲

۲


7. Starting and driving

7-1

Precautions when setting the vehicle in motion	7-2
Precautions for driving	7-3
Precautions when driving on a manual transmission vehicle	7-5
Precautions when driving on an automatic transmission vehicle	7-5
Tips for improving fuel economy	7-6
Braking	7-7
On uphill and downhill roads	7-9
On rough roads and in bad weather	'-10
Parking	'-12
Loading cargo	'-14

۲

7-2

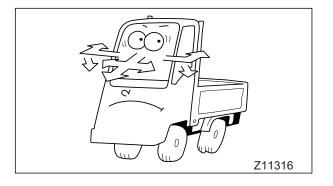

Precautions when setting the vehicle in motion

 Do not carry containers of fuel or spray cans in the cabin.

WARNING <u>/ N</u>

Carrying fuel in the cabin is extremely dangerous because an increase in the cabin temperature could cause fuel vapor to catch fire or cause the container to rupture.

 Do not attach any decorative panels or similar items to the windshield.

WARNING /!

Attaching a decorative panel or similar item to the windshield could impede driving and visibility. In addition, any suction cup on such an item could cause a fire by acting as a lens.

- Check the immediate area around the vehicle, using mirrors as necessary: there should be no persons or obstacles under, in front of, on either side, or behind the vehicle. Be particularly careful when backing up. If you cannot see behind the vehicle in the mirrors, get out of the vehicle and check that it is safe to start moving the vehicle.
- Check that none of the red warning lamps are illuminated. The PARK warning lamp will go out when the parking brake is released.
- Fully release the parking brake.
- In a manual transmission vehicle, put it in the first gear and set it in motion carefully. When pulling away, avoid racing the engine and suddenly engaging the clutch. Sudden starts place undue strain on the vehicle and should be avoided. Also, avoid slipping the clutch for extended periods since this can damage it.
- In an automatic transmission vehicle, depress the brake pedal and move the range selector lever out of the "P" or "N" position. If the engine's idling speed is too high, selecting the "D" or "R" ranges may make the vehicle lurch. Normalize the engine's idling speed before pulling away. Running the air conditioner, if fitted, raises the engine's idling speed and may make the vehicle pull away faster than expected.

NOTE:

If the range selector lever is operated with the engine speed too high, the intended gear may not be selected properly. If this happens, a buzzer will sound.

Precautions for driving

Observe the following precautions while driving. Should you notice anything unusual about the vehicle, immediately stop the vehicle in a safe place and inspect the relevant sections to find the cause of the trouble. If you are unable to identify the cause of the trouble or unable to do the repairs yourself, call an authorized dealer.

 Do not stop the engine while the vehicle is moving.

Never place the starter switch in any position other than the "ON" position while operating the vehicle.

If you turn the starter switch to the "ACC" position, the engine will stop. This is highly dangerous.

If the engine stops during driving:


- The compressed air used to enhance braking ceases to be generated. This could significantly reduce the effectiveness of the brakes. Also, the exhaust brake ceases to function.
- The power steering system becomes inoperative, rendering steering dangerously sluggish.
- The electrical circuits of the warning lamps, meters, etc. become inoperative, causing electric components to malfunction.


Removing the starter key causes the steering wheel to lock, making it impossible to steer the vehicle.

- Should the engine stall while the vehicle is in motion, do not panic. Simply depress the brake pedal to slow the vehicle, and pull off the road as soon as it is safe to do so.
- When any of the red warning lamps light up or a buzzer sounds, pull the vehicle off the road as soon as it is safe to do so and take the necessary measures. Contact an authorized dealer if the cause of the problem is unclear or if the problem requires complex repair work.

⇔ 💭 P. 6-4

- Avoid making sharp turns and braking hard except in emergencies. Doing so during highspeed driving could cause the vehicle to tip over.
- Avoid accelerating sharply on slippery roads since this could make the tires slip and impair directional stability.
- If you notice a strange noise, vibration, or smell, or if steering or braking feels unusual, pull the vehicle off the road as soon as it is safe to do so and check for the source of the trouble.

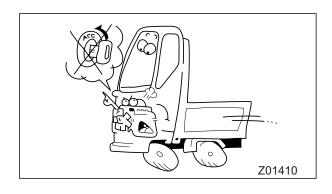

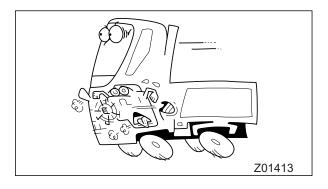

- When driving on narrow streets or when making a turn, keep in mind that the tracking of the front and rear inner wheels is different, and also make sure of rearward safety using the rearview mirrors.
- Remember that the mirrors protrude from the vehicle body. Be careful not to hit pedestrians and obstructions with the mirrors when driving on narrow roads.

Looking at the mirrors while driving causes your line of vision to move significantly. Be sure to keep paying attention to safety ahead of the vehicle.

- Continuous high-speed driving burdens the engine and other vehicle parts. Allow yourself enough time that you do not need to push the vehicle too hard.
- Perform your pre-operation checks with particular care when you expect to drive at high speeds.

When continuously driving at high speeds, your sense of speed may become dull. Pay constant attention to your speed, and maintain an adequate distance from the preceding vehicle.


- If a tire bursts or gets punctured while you are driving at high speed, do not panic. Keep a firm grip on the steering wheel and gradually reduce your speed. Stop the vehicle in the nearest safe place. Do not brake sharply. Braking sharply would be dangerous because the steering wheel would be pulled to one side with great force.
- Do not keep the steering wheel turned to the right or left stop for more than 10 seconds as doing so could lead to a failure of the power steering system.
- When driving at high speeds in the rain, it sometimes happens that the tires ride on a film of water and lose contact with the road surface. This is known as "hydroplaning". If this should happen, you will lose control of both steering and braking. Therefore, be sure to maintain moderate speeds on rainy days.

The hydroplaning can easily occur if tire tread is worn to the point where the tread pattern is very shallow.

- Using the exhaust brake on a wet, frozen, snowcoverd, or otherwise slippery road surface when the vehicle is lightly loaded or not loaded can cause the tires to slip on the road surface, resulting in a skid. Do not use the exhaust brake on slippery road surfaces.
- Do not use a mobile telephone while driving. if you wish to use a mobile telephone, first stop the vehicle in a safe place. Using a mobile telephone while driving could distract your attention from the vehicle and from the vehicle and from the road ahead, resulting in an accident.
- Operate the radio and other items of equipment in the cab when the vehicle is stationary. It is dangerous to operate such items of equipment or use a carphone (other than a hands-free type) while driving.

www.Manualslib.com manuals search engine

 Do not allow a child to touch the driver's controls and other equipment. A child's interference could cause a fault or accident.

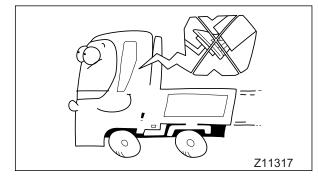

Precautions when driving on a manual transmission vehicle


- Avoid slipping the clutch excessively. Partially depressing the clutch pedal while the vehicle is in motion causes the clutch to slip and shortens the service life of the clutch.
- Avoid suddenly releasing the clutch pedal since this places undue stress on the vehicle and shortens the service life of the clutch.
- Do not operate the vehicle with the clutch disengaged or the gearshift lever in neutral. Doing so will render the engine braking and exhaust brake features ineffective, forcing you to rely only on the service brakes and overusing them in the process.
- Before shifting down, wait for the tachometer needle to drop below 1,600 rpm (1,800 rpm on 9-speed transmission vehicles) or decelerate until the vehicle speed comes within the next gear's range. Not shifting down in this manner could cause the engine to overrev.

NOTE:

"Overrev" refers to an operating state of the engine in which it rotates at an RPM higher than the recommended maximum RPM. Overrevving the engine could lead to an engine failure.

Precautions when driving on an automatic transmission vehicle

- Select the "D" range for normal driving. Other than FM65F, it is also possible to pull away using the range selector lever in the same way as a manual gearshift lever, starting in "L", then upshifting position by position to "D".
 On FM65F, it is also possible to pull away using the range selector lever in the same way as a manual gearshift lever, starting in "1", then upshifting position by position to "D".
- Do not push the range selector lever into the "N" position while the vehicle is in motion. This would make engine braking and exhaust braking impossible and force you to overuse the service brakes. It could also damage the transmission.
- For safety, the transmission will automatically refuse to shift down if the vehicle is moving too fast. Decelerate sufficiently by depressing the brake pedal before you can manually select a lower speed range.

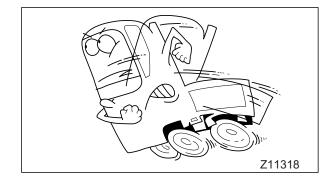

- If you stop the vehicle momentarily, for example, at a red light, keep the brake pedal firmly depressed. If you must wait for longer than expected, select the "N" or "P" range ("N" range on FM65F) and activate the parking brake.
- If you stop temporarily when driving uphill, depress the brake pedal and activate the parking brake. Do not attempt to stop the vehicle from rolling backwards with the accelerator pedal.



Observe the following precautions to achieve maximum fuel economy and to extend tire life.

- Continue warming up the engine only to the point at which the water temperature gauge needle begins to move.
- Avoid racing the engine as doing so not only wastes fuel but also harms the engine.
- Avoid sudden starts, sudden acceleration, and sudden braking.
- When accelerating, do not allow the tachometer needle to approach the red zone before changing gears; instead, change gears before engine speed reaches a high RPM.
- Once cruising speed has been reached, select the appropriate gear so that the engine will rotate around the maximum torque generating RPM (1,400 rpm). Moreover, unnecessary acceleration and deceleration wastes fuel.
- Do not keep the exhaust brake switch in the activation position at all times. Frequent use of the exhaust brake reduces fuel economy. Move the exhaust brake switch between the activation and non-activation positions as necessary for road and traffic conditions.
- Always keep the air pressure in tires correctly adjusted.
- Try to load cargo in a way that minimizes wind resistance.
 ⇒ □ P. 7-14
- Be sure to perform the pre-operational checks and periodic inspections.

Braking

Applying even a light pressure to the brake pedal provides powerful braking. Therefore, do not step hard on the brake pedal except in emergencies.

When driving downhill, use engine braking as well as exhaust braking in combination with the foot brake. $\Rightarrow \square P. 7-9$


- If the BRAKE or BRAKE warning lamp illuminates while the vehicle is in motion, stop at the nearest safe place and identify the problem.
 ⇒ □ P. 6-5
- If you release the brake pedal completely, the vehicle will coast past the point at which you wish to come to a halt.
- Do not pump the brake pedal as doing so reduces the air pressure, which in turn could reduce braking power.
- Using the exhaust brake on a wet, frozen, snow-covered, or otherwise slippery road surface when the vehicle is lightly loaded or not loaded can cause the tires to slip on the road surface, resulting in a skid. Do not use the exhaust brake on slippery road surfaces.
- Sudden braking will wear down tires and could cause malfunctions in other sections of the vehicle.


Sudden braking could also result in an injury due to shocks.


- Do not use the parking brake when driving except in an emergency, like if the service brakes have failed. Such use of the parking brake may make the vehicle spin or, at worst, roll over. It may also cause faults in vehicle components.
- 1. The distance needed for braking varies with speed, load weight, and road conditions. Make effective use of engine braking and exhaust braking to decelerate sufficiently before applying the brakes.


NOTE:

Engine braking is a braking effect realized when the accelerator pedal is released during vehicle operation. The lower the transmission gear, the more powerful the engine braking.

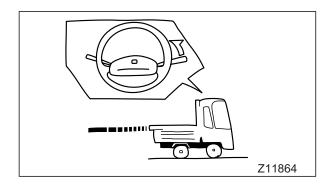

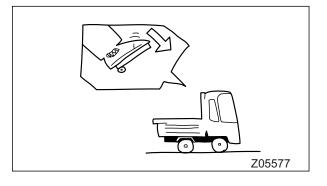

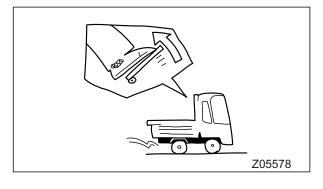


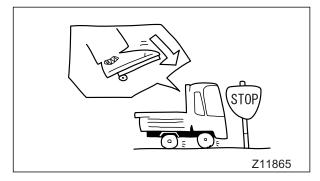


2. Depress the brake pedal halfway when you are nearby the place at which you wish to stop.

3. Slowly release the pedal (half or one-third of the stroke which you have used until then).

4. Just before reaching the point at which you wish to come to halt, depress the pedal again very slightly to stop the vehicle.

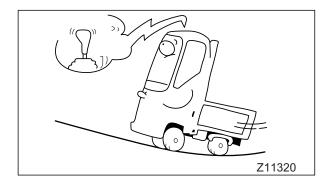

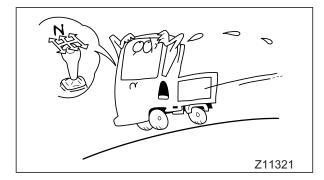

On uphill and downhill roads

1 Uphill roads

- Downshift early when the speed begins to drop to minimize the load on the engine.
- With an automatic transmission vehicle, downshifting can be performed either with the range selector lever or by depressing the accelerator pedal hard. If you depress the accelerator pedal to maintain a constant speed when driving uphill, the transmission may shift down and the engine speed increase.

2 Downhill roads

- If you are going to drive down a steep road or a road with a long downhill grade, test the service brake and exhaust brake in advance to make sure that they are functioning well.
- Place the vehicle in the gear used when driving uphill and use engine braking and exhaust brake to help slow the vehicle. Never drive downhill at high speeds.

If your vehicle is equipped with an automatic transmission, leaving the range selector lever in the "D" position will result in insufficient engine braking, causing the vehicle to speed up too much. Add engine braking as required by shifting down the gears.

Other than FM65F:

Shift down to "3", "2" or "L" position. Use the service brakes to prevent engine overrev when shifting to "2" or "L" position. FM65F:

Shift down to "5", "4", "3", "2" or "1" position. Use the service brakes to prevent engine overrev when shifting to "2" or "1" position.

- On slippery roads, avoid sudden engine braking since this could cause a skid.
- Never coast downhill with the gearshift lever in neutral (manual transmission vehicles) or the range selector lever in the "N" position (automatic transmission vehicles). Doing so makes both engine braking and exhaust brake inoperative, which in turn excessively burdens the service brakes. This also causes the brakes to overheat and the brake linings to wear out prematurely.

In an automatic transmission vehicle, this can also cause damage to the transmission.

 Avoid overusing the service brakes as the resultant overheating could cause undesirable vapor lock (other than FM65F) and fading, both of which contribute to poor braking. NOTE:

- "Vapor lock" refers to the condition in which the brake system overheats, causing the brake fluid to boil and form bubbles that weaken hydraulic pressure, resulting in poor braking.
- "Fading" refers to the condition in which the brake linings overheat to the point where friction with the brake drum is significantly reduced. This also results in poor braking.
- First decelerate the engine sufficiently before downshifting.

Downshifting more than two gears at a time or downshifting at a high engine speed could cause the engine to overrev.

Generally speaking, you should decelerate to roughly 1,600 rpm (1,800 rpm on 9-speed transmission vehicles) before downshifting.

For safety in an automatic transmission vehicle, the transmission will automatically refuse to shift down if the vehicle is moving too fast. Depress the brake pedal to decelerate.

NOTE:

"Overrev" refers to an operating state of the engine in which it rotates at an RPM higher than the recommended maximum RPM. Overrevving the engine could lead to an engine failure.



On rough roads and in bad weather

- Use a low gear and try to drive at a constant speed when driving on gravel roads or muddy roads.
- Do not race the engine when attempting to move out of mud. Racing the engine is useless and even worsens the condition as the spinning wheels will make ruts deeper. Instead, place thick waste cloth, gravel or the like under tires, and engage the 1st and reverse gears alternately or, in an automatic transmission vehicle, select the "D" and "R" positions alternately to move the vehicle back and forth until you can drive out.


When shifting from "D" or "R" or vise versa, release the accelerator pedal to lower the engine speed to idle.


Do not operate an automatic transmission in this way for more than 5 minutes since it causes the automatic transmission fluid to heat up rapidly.

• Drive very slowly on bumpy roads and try to avoid bumps to prevent bottoming out of the undercarriage.

If the muffler strikes a rock or other obstacle, its catalyst or other internal elements may be damaged. Have it checked by an authorized dealer.

- Avoid sudden steering and sudden braking on roads which are slippery from rain. Conditions are especially dangerous just after it begins to rain. Use engine braking and the exhaust brake together with the wheel brakes to decelerate. Note, however, that sudden engine braking can cause a skid. Drive at a speed at which you can stay comfortably in control of the vehicle.
- Brake performance may deteriorate when the vehicle is driven through puddles or washed and if water enters the brake drums. If this happens, drive slowly while paying careful attention to surrounding traffic and keeping light pressure on the brake pedal to dry the brake shoes and drums.
- If you cannot avoid driving the vehicle into water (for example, when the road is covered with water because of torrential rain), first check the depth of the water. If water gets into the engine, it can cause engine damage. After driving through water, check whether water has entered the high-current fuse box. If water has entered the high-current fuse box, remove the water and have the vehicle inspected by an authorized dealer. Water in the high-current fuse box could cause a short circuit that results in a fire.
- In fog, drive carefully at low speeds, paying attention to the center line and the vehicle ahead of you.
- When driving in snow or on frozen roads, use tire chains or snow tires and drive at moderate speeds. Avoid sudden braking and sharp turns.

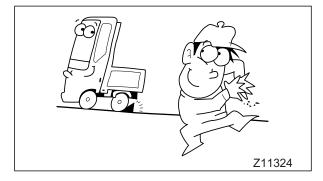

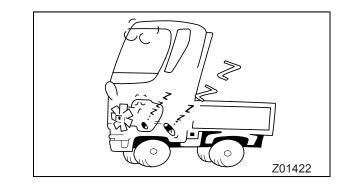

Parking

WARNING /

• Park the vehicle on the flattest available surface.

Avoid parking on slopes.

When you cannot avoid parking on a slope, apply chocks to the wheels. You can further improve safety by leaving the steering wheel turned so the vehicle will roll toward an obstacle (for example, a curbstone) in the unlikely event of movement.

- The engine and exhaust pipe are extremely hot immediately after the vehicle has been driven. Do not park the vehicle in any place where there is dry grass, waste paper, or other flammable material.
- Always stop the engine before sleeping in the cabin. You could otherwise cause an accident by unintentionally moving the accelerator pedal or shift lever while sleeping. Also, you could suffer carbon-monoxide poisoning from exhaust gases if the vehicle is parked in a closed space.
- Never leave lighters, cans of carbonated drink, and spectacles in the cabin when parking the vehicle in hot sunshine. The cabin will become extremely hot, so lighters and other flammable items may catch fire and unopened drink cans (including beer cans) may rupture. The heat may also affect plastic spectacle lenses and other spectacle parts that are made of plastic. For example, the coating on the lenses may crack and the lenses themselves may become deformed.
- Do not open the door suddenly when getting out of the vehicle. This is dangerous, as the door may obstruct the passage of vehicles, motorcycles, bicycles, or pedestrians coming from behind the vehicle. Always use the mirrors to check that it is safe to open the door.

- 1. Depress the brake pedal to bring the vehicle to a complete halt.
- 2. Parking procedures vary depending on the type of transmission used on the vehicle. Proceed as follows.
 - On a vehicle with manual transmission, move the gear shift lever to the "NEUTRAL" position and apply the parking brake.
 - On a vehicle with automatic transmission (excluding FM65F), apply the parking brake and then operate the range selector lever as follows.

Move the lever from the forward or reverse range, whichever the vehicle is in at that time, to the "N" position, and then set the lever to the "P" position. If this process is not followed, it may require great effort to move the range selector lever out of the "P" position and back to other ranges.

Do not park the vehicle only by setting the range selector lever to the "P" position. Be sure to also apply the parking brake at the same time.


 On a vehicle with automatic transmission (FM65F), apply the parking brake and then set the range selector lever to the "N" position.


WARNING <u>/ !</u>


Illumination of the PARK indicator lamp does not necessarily mean that the parking brake is sufficiently activated. Always activale fully the parking brake.

- Stop the engine by turning the starter switch to the "ACC" position.
 ⇒ □ P. 5-12
- 4. To help prevent theft and needless consumption of electricity from the battery, be sure to remove the starter key and lock the doors.

- Leaving the starter switch in the "ON" position or "ACC" position for an extended period may drain the battery.
- Be sure to turn off all lights after parking to prevent drainage of the battery.
- 5. If parking on a slope is unavoidable, block the wheels securely with chocks and take other necessary measures to prevent the vehicle from moving.

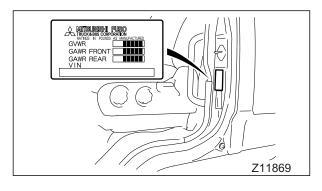

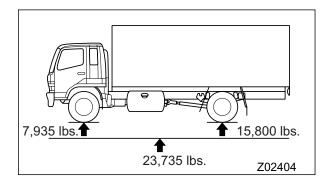

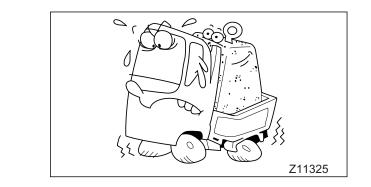

Loading cargo

1 Do not overload the vehicle.

- Overloading places undue stress on the vehicle and shortens its service life. The vehicle is designed to perform best when loaded within its Gross Vehicle Weight Rating (GVWR) and within its front and rear Gross Axle Weight Ratings (GAWRs). Try not to exceed these ratings.
- The vehicle's GVWR, front GAWR, and rear GAWR are listed on the VIN plate on the upper section of driver's door.

NOTE:

Loading to a weight almost equal to a total of the front and rear GAWRs may exceed the GVWR. For example, a vehicle with a GVWR of 23,000 lb. (10,430 kg) has a front GAWR of 7,935 lb. (3,600 kg) and a rear GAWR of 15,800 lb. (7,165 kg). Added together, the GAWRs total 23,735 lb. (10,765 kg), thus exceeding the GVWR. Be sure neither the GAWRs nor GVWR are exceeded.

WARNING <u>/!</u>


- Overloading the vehicle can damage the vehicle and make safe driving difficult. For safety, never overload.
- The GVWR and GAWRs pertain to the maximum load the vehicle can physically carry. Please also abide by state and regional loading limit requirements.
- Do not carry passengers in the cargo area while the vehicle is in motion.

2 How to load cargo

Improperly loaded cargo not only is unstable but also may result in uneven weight distribution which could damage the cargo deck and frame.

WARNING <u>/</u>

- When roping up cargo or covering it with a tarpaulin, make sure that neither the rope nor the end of the tarpaulin hang down between the cab and the cargo deck as a loosely hanging rope or tarpaulin could catch fire from the engine heat.
- When spreading the tarpaulin, take care not to let it cover or be drawn into the engine air intake duct.
- When loading heavy cargo, take adequate measures to stop it from slipping. Also use wire to secure it.

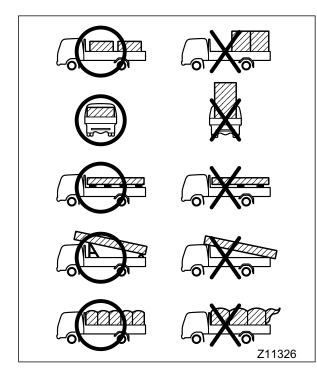

- Place the cargo evenly on deck.
- If cargo is piled high, the vehicle is at risk of rolling over upon being hit with a side wind or making a turn.
- If you place supports under the cargo, position them at equal intervals.
- Use suitable supports when loading long objects. Avoid supporting long objects only with the gate and the rear edge of the cargo deck.
- To prevent cargo from falling, strap it down securely and cover it with a tarpaulin. Secure the tarpaulin ends neatly so they do not flap.

www.Manualslib.com manuals search engine

•

€

•

۲

۲

8-1

8. ABS – driving hints

Anti-lock brake system (ABS)	8-2
ABS warning lamp	8-4

۲

0

Anti-lock brake system (ABS)

The ABS operates automatically without need for any manual control. However, you are requested to read the following instructions and precautions to ensure safe driving with your ABS-equipped vehicle.

WARNING <u>/ </u>

Even the ABS cannot remove limitations on the vehicle's running and braking performance. It is your responsibility to judge road and other conditions properly and drive safely on slippery surfaces.

NOTE:

When driving on slippery surfaces, activating the brakes could lock the wheels and the vehicle is very likely to lose directional control due to resulting skids. The ABS minimizes such wheel locking by electronically controlling the braking force of each wheel.

- On slippery surfaces, the braking distance for vehicles with an ABS is generally shorter than that for vehicles without it. This difference, however, varies with road surface conditions. It is always important to maintain sufficient distance from the vehicle ahead regardless of whether your vehicle is equipped with an ABS or not. Also, the braking distance of an ABS-equipped vehicle on gravel or heavily snow-covered roads may be longer than that for a vehicle without an ABS. On these roads, therefore, be sure to drive at reduced speeds. Also, avoid sudden maneuvering or braking on such roads to prevent collision with the vehicle behind you.
- Driving on icy roads or quickly braking from a high speed causes the ABS to work hard and in turn consume much air. If the BRAKE warning lamp illuminates and a buzzer sounds in such a situation, stop the vehicle in a safe place and wait until normal air pressure is recovered before continuing driving.
- Slight vibration will be felt on the vehicle body and brake pedal when the ABS is in operation. Also, the sound of air discharging will be heard intermittently. These indicate the ABS is operating normally and do not indicate any abnormal condition. Keep fully depressing the brake pedal.





- When the ABS starts functioning after sudden braking, the steering wheel may be pulled slightly to one side because of braking power distribution control made by the system. Especially in a condition where the traction is different between the right and left wheels (on a road covered by ice on one side and not on the other side, for example), you may need to correct direction with the steering wheel.
- The ABS cannot prevent the vehicle from overturning on a slippery surface that could result from excessive speed being used in sharp turns. Avoid driving at too high a speed or in a way which requires quick operation of the steering wheel.
- There is likelihood of skidding due to the effect of engine braking on slippery surfaces when the vehicle carries little or no load. In such a situation, it is recommended to depress the clutch pedal first and then the brake pedal.
- If cargo is loaded only on the back half of the cargo bed, the rear wheel brakes must share an extremely large burden during braking to prevent the front wheels from locking. On a snowcovered or otherwise slippery, long downslope, use engine/exhaust braking and minimize use of the service brakes.
- The exhaust brake, if activated, is released temporarily when the ABS comes into function.

WARNING /

If the tires slip when driving around a slippery curve or over a gap with the exhaust brake working, the ABS will start functioning and the exhaust brake will be temporarily deactivated. Always slow down before entering a curve.


- Before you install a radio transmitter/receiver equipment or tires of a size different from the original ones, be sure to consult an authorized dealer.
- Even if the ABS system fails and the ABS warning lamp illuminates, the normal brakes still work properly. You must, however, drive very carefully on slippery roads.

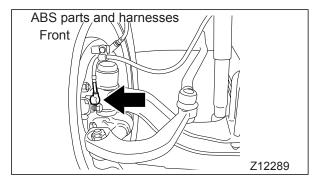

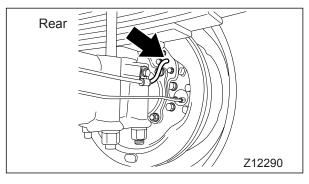



There are ABS components and electric wiring located behind the wheels. When removing snow or ice having adhered to the wheel areas after driving on snow-covered roads, be careful not to damage the ABS components and wiring. Also, avoid exposing the ABS components and wiring to high-pressure water or cleaner steam as the system could be damaged and not operate properly.

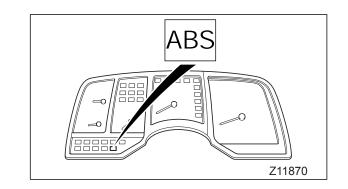

ABS warning lamp

This lamp comes on, it indicates there is a malfunction in the anti-lock brake system (ABS). Should this lamp illuminate during driving, stop the vehicle in a safe place and perform the following inspection.

NOTE:

The ABS warning lamp will light up when the starter switch is turned to the "ON" position and the engine is not running. If it goes out when the vehicle speed exceeds approx. 10 km/h, there is no problem.

- 1. Turn off the engine, then set the ignition switch to the "ON" position again.
- 2. Determine the system condition as follows:
 - The system is faulty if the warning lamp does not illuminate.
 - The system is normal if the lamp illuminates and then it goes out when the vehicle speed exceeds approx. 10 km/h.
- If the system is found to be faulty, have the system repaired by an authorized dealer as soon as possible.

NOTE:

Even with the ABS faulty and the warning lamp remaining lit, the normal brake system is still functioning satisfactorily. Only the ABS function is lost.

9. Heating and air conditioning

Heater		 	 	 	 	 		 	 	 	 	 • •	 •	 	 	 	9-2
Air condition	oner	 	 	 	 	 	•••	 	 	 	 	 •••	 • •	 	 	 	9-5

۲

0

9-1

0

Heater

NOTE:

The heater uses the heat produced by the engine coolant. Warm air is, therefore, not available until the coolant temperature becomes sufficiently high. When you use the heater while warming up the engine or parking, turn ON the cold start switch to help warm the interior more quickly.

1 Control panel

- ① Fan switch
- ② Temperature control lever
- ③ Mode selector lever
- ④ Air selector lever
- 5 Fresh air bypass lever

• Fan switch

Fan switch allows you to select 4 fan speeds. Select the desired speed.


OFF: Turned off


- Seeze
- St: Weak
- Section Medium
- Strong


Z11871

• Temperature control lever

Slide lever toward the high temperature side (orange colored) for warmer air.

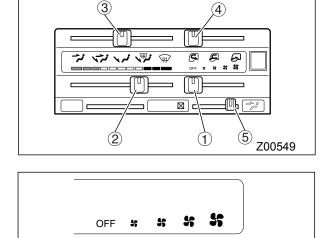

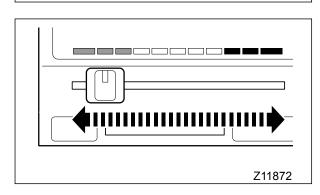

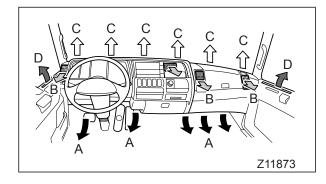

Mode selector lever

Use mode selector lever to select the appropriate air outlet combination.

Lever posi- tion	Air outlets	Purpose
イ	"В"	Ventilation: Fresh air to head.
な	"B" + "A"	Bi-level heating: Warm air to feet and relatively cooler air to head.
<i>ت</i> ر ۲	"A" + "D"	Heating: Warm air to feet.
×	"A" + "C" + "D"	Defrosting/heating: Warm air to feet, and, through the defroster, to windshield and door win-dows.
₩¥	"C" + "D"	Defrosting: Warm air to wind- shield and door windows through the defroster.

Outlets "B" have a louver. You can change the direction of air by moving it as desired. The airflow will be shut down when you place the lever in the \square position.

• Air selector lever


Move air selector lever to the desired position.


- Outside air is allowed to enter the cab. Keep the lever in this setting under normal conditions.
- Air inside the cab is mixed with outside air. Use this setting when you want heating and ventilation simultaneously.
- Air recirculation in the cab. Use this setting when you want to heat the interior quickly or when the outside air is dusty or polluted. If the lever is left for long at this setting, the windows will fog up. Keep the lever in the Setting under normal conditions. During parking, place the lever in the Settion to prevent the entry of dust.


• Fresh air bypass lever


This lever is used to direct fresh air to the head without passing through the heater unit.


If your face or head becomes hot, place lever in the \Rightarrow position. This function is more effective if you keep air selector lever in the \bigcirc or \bigcirc position.

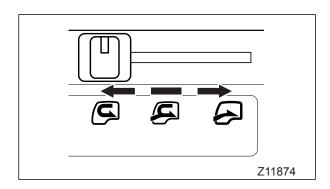


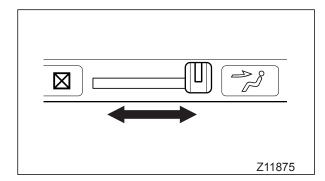

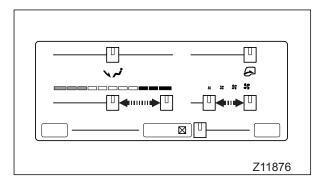

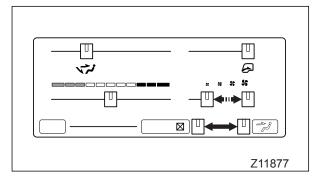

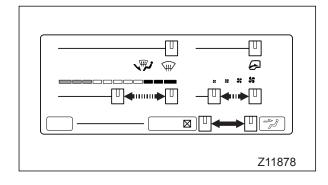

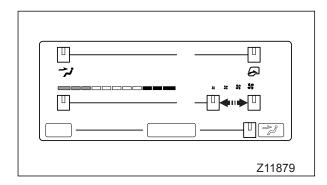

2 Heating

- Warm air is directed to your feet.
- When you want to heat the cab quickly or air outside is dusty or polluted, place the air selector lever in the position.
- If the windows fog up, place mode selector lever in the √♥ position.

3 Bi-level heating


- Warm air is directed toward the feet, while relatively cooler air is directed toward the head.
- Place temperature control lever in the middle setting. Sliding this lever to the right or left adjusts the air temperature from both outlets accordingly.
- When fresh air bypass lever is placed in the position, more cool air is directed toward the head.

4 Defrosting

- Warm air is directed toward the windshield and door windows. Select the high blower speed if you need to defrost quickly.
- To remove frost or ice from the outside surface of the windshield, place air selector lever in the position.
- When mode selector lever is placed in the very position, warm air is directed to feet in addition to the windshield and door windows.
- If warm air from the defrosters causes you discomfort in rainy or humid weather, place fresh air bypass lever in the position causing cool air to flow toward your head.

5 Ventilation

Outside air is directed to head.

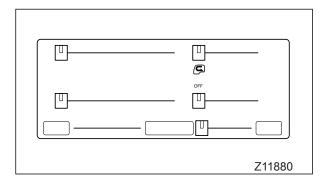

6 Shutting off the system

- When the heater is not being used, turn fan switch OFF.
- Placing air selector lever in the 🖾 position will prevent entry of dust into the cab.

7 Cleaning the air filter


Clean the air filter every 6 months. A dust-clogged air filter may cause a blower motor malfunction. $\Rightarrow \square P. 12-64$

Air conditioner @

Never leave children alone in the vehicle. In hot weather or when the vehicle is parked under the sun, the temperature inside the vehicle may become extremely high and can cause heat stroke. Even if the air conditioning is left on, the temperature inside the vehicle will rise rapidly if the system stops functioning. This is very dangerous to children.


NOTE:


The heater uses heat produced by the engine coolant. Warm air is, therefore, not available until the coolant temperature becomes sufficiently high. When you use the heater while warming up the engine or parking, turn ON the cold start switch to help warm the interior more quickly.

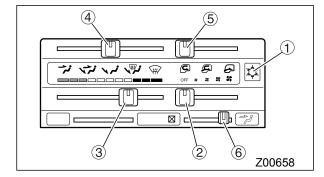



1 Control panel

- ① Air conditioner switch
- ② Fan switch
- ③ Temperature control lever
- ④ Mode selector lever
- ⑤ Air selector lever
- 6 Fresh air bypass lever

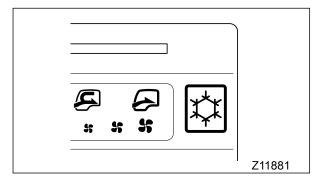

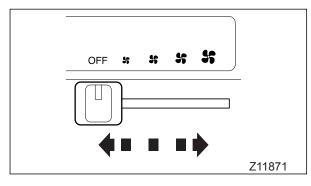

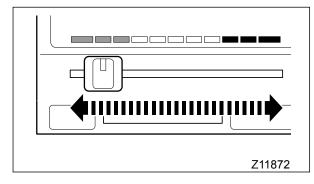

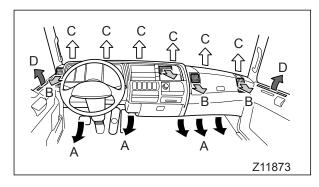

• Air conditioner switch

Pressing air conditioner switch turns on the air conditioner for cooling and dehumidifying.

When the air conditioner is on, the \ddagger pilot lamp inside the switch stays illuminated.

To turn off the air conditioner, press switch a second time.

• Fan switch

Fan switch allows you to select 4 fan speeds. Select the desired speed.

- OFF: Turned off
- Service Breeze
- S: Weak
- S: Medium
- Strong

Temperature control lever


Slide lever toward the high temperature setting (orange colored) for warmer air.


• Mode selector lever


Use mode selector lever to select the appropriate air outlet combination.

Lever posi- tion	Air outlets	Purpose
な	"В"	Ventilation: Fresh air to head.
\$	"B" + "A"	Bi-level heating: Warm air to feet and relatively cooler air to head.
~~	"A" + "D"	Heating: Warm air to feet.
V	"A" + "C" + "D"	Defrosting/heating: Warm air to feet, and, through the defroster, to windshield and door win-dows.
₩	"C" + "D"	Defrosting: Warm air to wind- shield and door windows through the defroster.

Outlets "B" have a louver. You can change the direction of air by moving it as desired. The air will shut down when you place the lever in the \boxtimes position.

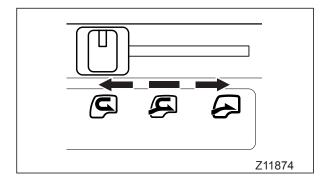

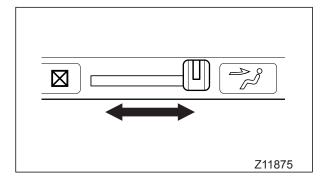

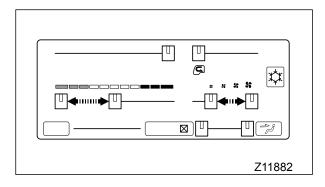

• Air selector lever

Move air selector lever to the appropriate position.

- Outside air is allowed to enter the cab. Keep the lever in this setting under normal conditions.
- Air inside the cab is mixed with outside air. Use this setting when you want heating and ventilation simultaneously.
- Air recirculates in the cab. Use this setting when you want to heat the interior quickly or when the outside air is dusty or polluted. If the lever is left in this position for long, the windows will fog up. Keep the lever in the position under normal conditions. During parking, place the lever in the position to prevent the entry of dust.

• Fresh air bypass lever

This lever is used to direct fresh air to the head without passing through the heater unit.

If your face or head becomes hot, place the lever in the \Rightarrow position. This function is more effective if you use it with air selector lever in the \bigcirc or \bigcirc position and the air conditioner switch in the ON position.


2 Cooling


- Press air conditioner switch and slide temperature control lever as necessary to obtain a comfortable temperature.
- Place air selector lever in the
 position to cool the interior quickly.


If the air selector lever is kept in the \bigcirc position too long, the interior air becomes stale. Place the lever in the \bigcirc position from time to time to allow fresh air to enter.


WARNING <u>/</u>

Never leave children alone in the cab especially when the air-conditioning is on. They will suffer from dangerously high interior temperatures should the air conditioning accidentally stop.

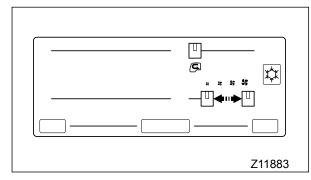

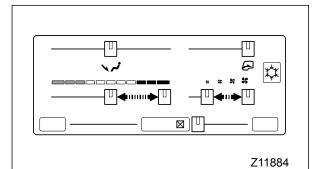

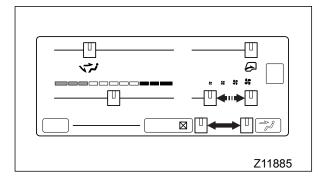

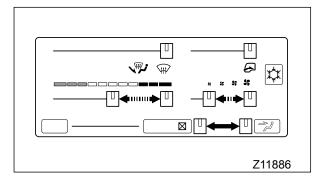

3 Dehumidifying

- When the air is excessively humid as it is, for example, when it rains, you can dehumidify the air by pressing air conditioner switch.
- Placing the air selector lever in the 🕥 position increases dehumidifying efficiency.

4 Heating

- Warm air is directed to your feet.
- When you want to heat the cab quickly or the air outside is dusty or polluted, place the air selector lever in the position.
- If the windows fog up, place mode selector lever in the v position.
- To dehumidify the interior, turn ON the air conditioner switch.


5 Bi-level heating


- Warm air is directed toward the feet, while relatively cooler air is directed toward the head.
- Place temperature control lever in the middle setting. Sliding this lever to the right or left adjusts the air temperature from both outlets accordingly.
- When fresh air bypass lever is placed in the position, more cool air is directed toward the head.


6 Defrosting

- Warm air is directed toward the windshield and door windows. Press air conditioner switch and select the high blower speed if you need to defrost quickly.
- To remove frost or ice from the outside surface of the windshield, place air selector lever in the position.
- When mode selector lever is placed in the verify position, warm air is directed toward the feet in addition to the windshield and door windows.
- If warm air from the defrosters causes you discomfort in rainy or humid weather, place fresh air bypass lever in the position causing cool air to flow toward your head.

with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine with the search engine withesearch engine with the search engine withesearch engine with th

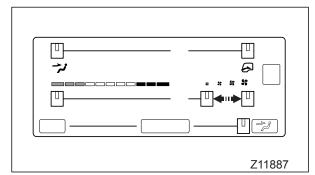

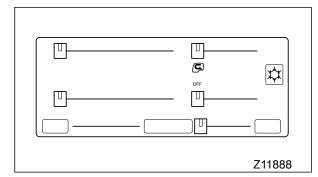

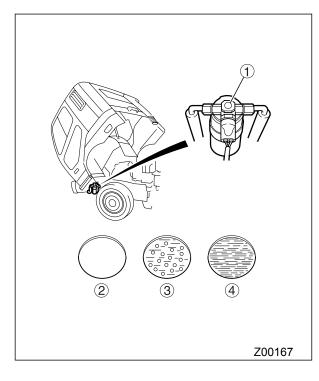

7 Ventilation

Outside air is directed to head.

8 Shutting off the system

- To turn off the air conditioner, press air conditioner switch and check that the pilot lamp in the switch goes out.
- When the heater is not being used, turn fan switch OFF.
- Placing air selector lever in the
 provide provid

9 Checking the refrigerant level

If refrigerant is insufficient, the cooling efficiency will be diminished. Therefore, check the refrigerant level from time to time. The refrigerant level can be checked by setting the air conditioner to maximum cooling (by placing the temperature adjustment lever to the lowest temperature position and the fan switch to the high speed position) and looking into the sight glass ① of the receiver. The refrigerant is sufficient if no bubbles are visible through the glass when the air conditioner is being operated. If bubbles are visible, the amount of refrigerant is insufficient. You can have your system charged at an authorized dealer.

- 2: No refrigerant
- ③: Insufficient refrigerant
- 4: Sufficiently charged

- Running the air conditioner without refrigerant will damage the air conditioner compressor. Check the refrigerant level if the air conditioner stops working efficiently.
- To protect the environment, your vehicle's air conditioning system uses refrigerant HFC-134a which does not harm the ozone layer.

Since charging the system with this refrigerant requires a method different from the conventional method, be sure to contact an authorized dealer if your system needs to be serviced.

 Using any refrigerant other than the HFC-134a will cause a malfunction of the air conditioning system. Be sure to use only the HFC-134a.

NOTE:

Do not release refrigerant gas into the atmosphere. When the air conditioning system requires servicing or when you discard the vehicle, ask your nearest dealer to do this so that they can collect the refrigerant gas.

10 Cleaning the air filter

Clean the air filter every 6 months. A dust clogged air filter may cause a poor air conditioning performance and blower motor malfunction. $\Rightarrow \Box P. 12-64$


10. Interior equipment and accessories

10-1

Cigarette lighter	10-2
Ashtrays	10-2
Sun visors	10-3
Interior lamp/spotlights	10-3
Small article compartments	10-4
Using the radio	10-6
Accessories	10-7

۲

0

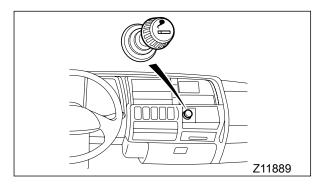


Cigarette lighter

The cigarette lighter can be used when the starter switch is in the ON or ACC position.

Push the cigarette lighter all the way in. It will soon pop back to the original position with its core red hot. Pull out and use.

WARNING <u>/</u>

- Do not hold the cigarette lighter in the pushed-in position since the wiring could burn out and start a fire.
- Something is wrong with the lighter if it does not pop out within approx. 30 seconds. If this should happen, pull it out manually and have the lighter inspected by an authorized dealer. Leaving the lighter unremoved in the socket could cause a fire.
- Do not leave your vehicle with the cigarette lighter pushed in. Doing so could result in a fire.
- Do not allow a child to touch the cigarette lighter. The child could get burned.
- Do not touch the metallic parts of the cigarette lighter. You could get burned.
- The cigarette lighter is designed to operate on 12 V. Never use a lighter with a 24 V rating.
- If the cigarette lighter is dented or broken, it will not pop out properly. Replace the dented or broken lighter with a new one available at an authorized dealer. Do not use lighters other than genuine lighters.
- Do not use electrical devices designed to be plugged into the cigarette lighter socket, as this could overload the circuitry and overheat the wiring.

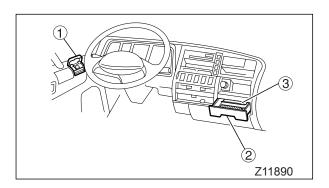

Ashtrays

Remove and empty the ashtrays when they become full.

Door ashtray:


Pull the ashtray upward and out by lid ①.

Dashboard ashtray:

With ashtray ② pulled out, press stopper ③ and pull the ashtray the rest of the way out.

WARNING <u>/</u>


- Be sure to put out cigarettes and matchsticks before putting them in the ashtrays. Close ashtrays completely.
- Put only cigarette stubs and matchsticks in the ashtray. Empty the ashtray before it becomes full completely as too many stubs crammed into the ashtray could catch fire.
- Do not throw cigarette ends out of the windows since this is environmentally irresponsible and could start a fire.
- When cleaning the ashtray, do not strike it with a hard object since it could break. If the ashtray breaks, stop using it and replace it with a new one. Using a broken ashtray could cause a fire.

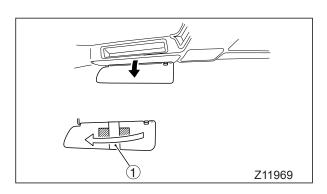



The sun visor screens your eyes from sunlight. Change its angle as needed. Unhook the inside edge of the sun visor and swing it sideways to reduce glare from the side.

On the reverse side of the sun visor, there is a paper holder that can be used to hold a paper or card.

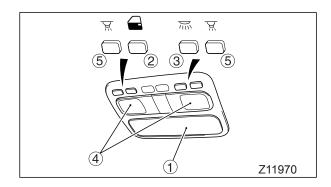

Interior lamp/spotlights

The interior lamp/spotlights can be used regardless of the starter switch position.

Leaving the interior lamp/spotlights on for an extended period with the engine off will cause the batteries to go flat and prevent the engine from starting.

1 Interior lamp


When \square button ② is pressed, illumination of interior lamp ① is controlled by opening and closing the doors; it lights up when either of the doors is opened and goes out when either of the doors is closed.

Press The button ③ to illuminate the interior lamp regardless of whether the doors are open or closed. Press both the above-mentioned buttons a second time to turn the interior lamp off.

2 Spotlights


Spotlight 4 lights up when $\overleftarrow{\mathbf{x}}$ button 5 is pressed. Press the button a second time to turn it off.

Small article compartments

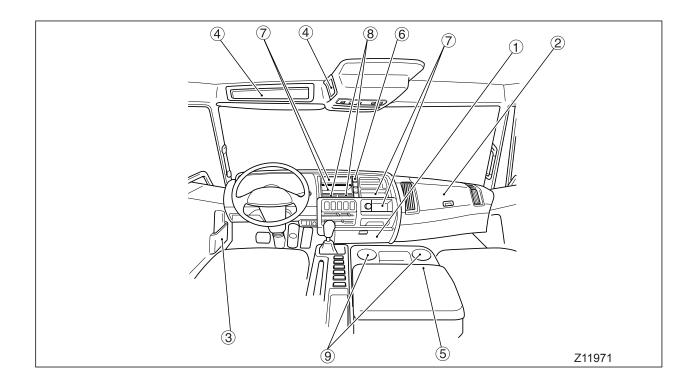


WARNING

Always close the parcel box, glove compartment, and console box before operating the vehicle. If left open, their covers could cause injury in the event of a collision or sudden stop.

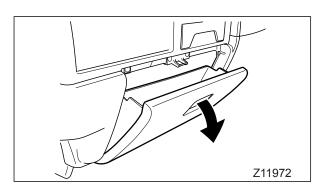

① Parcel box

Pull knob toward you to open the parcel box. To close the box, press lid until it snaps shut.

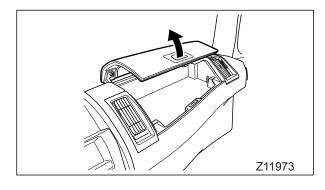

② Glove compartment

Raise lid to open the glove compartment.

Fuses, relays, and other electrical parts are located below the glove compartment. Be careful not to splash water on it or to place wet objects in the glove compartment.

③ Door pocket

<Driver's side>

Use the door pocket to store cleaning rags, maps, and other small articles.

④ Overhead console pocket


This pocket is suitable for storing cleaning rags and other small articles.

Storing things that tend to roll in the overhead console pocket is not recommended because they could fall down during starts and stops.

5 Center console box

Open the lid by lifting the black knob with your finger.

After closing, press down lightly on the lid to lock it.

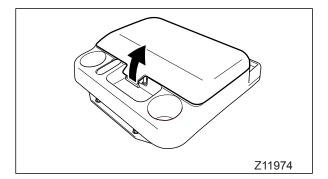

6 Coin box


⑦ Pocket

Use this pocket to store small things.

Storing things that tend to roll in this pocket is not recommended because they could fall down during starts and stops.

8 Card holder


This is useful for holding expressway tickets or other small cards.

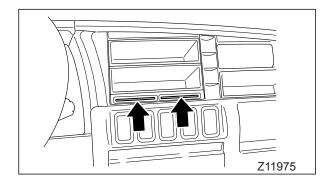

9 Cup holder

WARNING

The contents in a cup or can held in the cup holder may spill during movement of the vehicle. Be careful of scalding if they contain hot beverages.

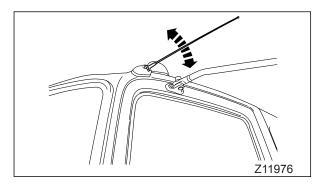


Using the radio

- The radio (optional) can be used with the starter switch in the ON position or ACC position.
- Raise the antenna before using the radio. Lower the antenna when it is likely to cause an obstruction, for example, when tilting the cab.

WARNING

Adjust the speaker volume to a level at which you can still hear sounds outside the vehicle. If the speaker volume is too high, you will be unable to hear sounds that may indicate danger.

- To avoid draining the battery, do not use the radio and other electrical accessories for extended periods when the engine is not running.
- The audio system may emit noise when radio communication equipment or a mobile telephone is used in the cab. This noise does not indicate a fault. Use mobile telephones as far away from the audio system as possible.
- If a foreign object gets inside the audio sys tem, water splashes on the audio system, or smoke or an abnormal smell is emitted by the audio system, immediately stop using the audio system and have it inspected by an authorized dealer.

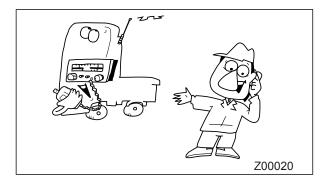

Accessories

- See an authorized dealer if you are considering adding accessories to your vehicle.
- Your vehicle contains electronic devices. Even though these are protected against interference from electromagnetic emissions, you should refer to an authorized dealer before fitting equipment that emits strong signals, such as mobile telephones.

WARNING /!

To avoid the risk of overheating, fire or faulty operation, have electrical accessories connected by an authorized dealer. Never connect them yourself.

www.Manualslib.com manuals search engine

•

€

•

۲

۲


•

11. In cold weather

Coolant	11-2
Engine oil	11-2
Fuels	11-2
Other recommendations for cold weather operation	11-3
Installing tire chains	11-4

 $\mathbf{\bullet}$


۲

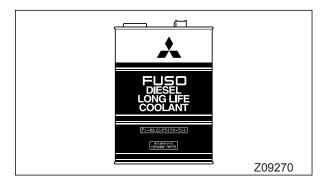

Coolant

- When vehicles are shipped from the factory, genuine FUSO DIESEL LONGLIFE COOLANT is added to the coolant in their cooling systems. This additive combines both antifreeze and antirust capabilities to sufficiently protect the cooling system from freezing up. However, for added safety, it is recommended that you have an authorized dealer check that the coolant has a proper concentration of the additive before winter begins.
- Be sure to use coolant added with an antifreeze or the FUSO DIESEL LONGLIFE COOLANT or equivalent to the recommended concentration.
 ⇒ □ P. 12-38

Never mix FUSO DIESEL LONGLIFE COOLANT with other brands of anti-freeze or anti-corrosion additives since these can detract from its performance. If a different coolant additive has been used and the FUSO DIESEL LONGLIFE COOLANT is to be used, be sure to thoroughly flush the cooling system.

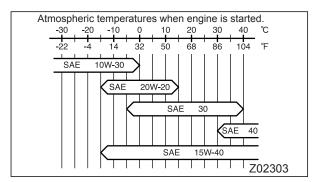

211189

Engine oil

The viscosity of the engine oil increases in cold temperatures, sometimes making it hard to start the engine, especially early in the morning. Therefore, use an engine oil of a viscosity which suits the weather conditions. $\Rightarrow \square P. 12-19$

Fuels

Ordinary diesel fuel gels in freezing temperatures, making it impossible to start the engine.

If you are bound for a cold area, it is recommended that you fuel your vehicle so that it burns more than half the fuel by the time you reach your destination. This allows you to refuel with a grade of diesel fuel appropriate to the colder weather conditions.


⇔∏ P. 1-5

Other recommendations for cold weather operation

- If the engine fails to start, turn the starter switch back to the "ACC" position or "LOCK" position and wait for the battery to recover before trying to start the engine.
- As the temperature falls, battery performance decreases. Check the battery electrolyte level and its specific gravity.
 ⇒ □ P. 12-61
- In cold weather, use a windshield washer fluid additive that prevents freezing in low temperatures. Use the additive in the concentration indicated by the manufacturer's instructions.

Do not use engine coolant or antifreeze since these would damage the vehicle's paint.

- Occasionally check the undercarriage and fender wells, and if necessary remove snow and ice taking care not to damage vehicle parts as you do so.
- The brakes may be frozen up when the vehicle is driven on snow-laden roads or during parking in cold weather. Since frozen brakes are sluggish to function, drive your vehicle carefully while paying attention to vehicles behind as well as in front and checking normal function of the brakes from time to time by slightly depressing the brake pedal. If the brakes are sluggish, depress the brake pedal repeatedly while driving at a low speed until normal braking returns.
- When parking your vehicle, select a site not directly exposed to wind or snow and face it away from the wind.
- Do not apply the parking brake in extremely cold conditions that could cause it to freeze up and become impossible to release. In such conditions, take the following steps:
 - 1. Set the parking brake. Never park on a slope.
 - 2. Block the wheels securely with chocks and ensure that the vehicle cannot move.
 - In a manual transmission vehicle, select first gear or reverse. In an automatic transmission vehicle, set the range selector lever in the "P" position <other than FM65F> or "N" position <FM65F>.
 - 4. Release the parking brake lever.
- On vehicles with air conditioner, operate the air conditioner at least once a month to maintain its functions even during the cold season when it is not being used.

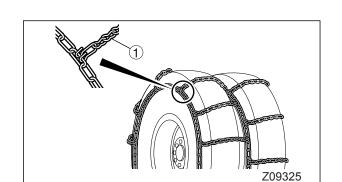

4 6 2 3 3 209326

Installing tire chains


- Make sure that tire chains are installed properly so that they do not become loose and interfere with other vehicle parts while the vehicle is in motion.
- Use triple chains corresponding to tire size.


- Do not put tire chains on the front wheels. Use of winter tires is recommended.
- Make sure that the chains and their spring bands are not excessively worn or otherwise damaged.
- If you hear an abnormal noise while driving, stop the vehicle in the nearest safe place and check the tire chains.
- Driving on a dry road with chains installed may damage the chains as well as the road surface. Avoid doing so as far as possible.
- When fitting tire chains, refer to the instructions supplied with them.
- 1. Place the chains over the tires with the hook ends of cross chains ① facing outward.


2. Connect the hook ③ of inside chain ②, leaving no excess links. Then, take up the slack in the inside chain by pulling cross chains ① for the inside tire outward.


NOTE:

Pull the hook section outward to the possible maximum extent.

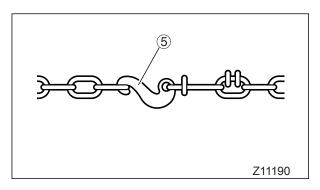

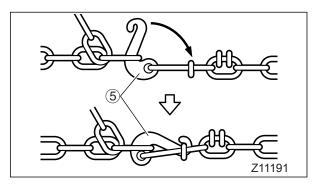

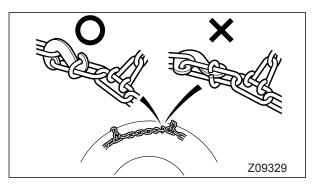

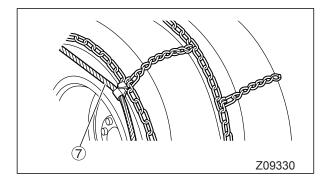

- 3. Temporarily connect hook 5 of outside chain 4 as shown.
- 4. Pull the middle chain (6) as far as possible and connect its hook.

5. Pull both ends of outside chain ④ to the possible maximum extent and connect hook ⑤.

- 6. Ensure that hooks ③ and ⑤ are flat on the tire sidewalls. Also make sure that the chains are not twisted.
- 7. Fasten extra chain links with a metal wire to prevent them from hitting against other vehicle parts.
- 8. Fit spring band ⑦. Attach the hooks of spring band on the chain at even intervals with the hook ends facing outward.
 9. After driving the vehicle for 5 to 10 minutes,
- 9. After driving the vehicle for 5 to 10 minutes, check the chains for looseness or disconnected hooks.

www.Manualslib.com manuals search engine

•

€

•

۲

۲

12. Simple inspection and service

General precautions for servicing the vehicle	. 12-2
Opening and closing the front panel	. 12-3
Tilting the cab	. 12-5
Pre-operational checks	. 12-8
Lubrication	12-15
Greasing	12-15
Oils and fluids	12-19
Filter elements	12-31
Draining water from fuel filter	12-37
Engine coolant – check and replacement	12-38
Belt – check and adjustment	12-44
Steering wheel – check	12-45
Service brakes – check	12-46
Air pressure – check	12-48
Parking brake – check	12-48
Clutch – check	12-49
Air drier – check	12-50
Air tank – check	12-51
Draining sediment from fuel tank	12-51
Tires – check	12-51
Tires – replacement	12-54
Wheel nuts – check and retightening	12-58
Tire rotation	12-59
Wiper blade – replacement	12-60
Windshield washer – fluid level check and refilling	12-60
Battery – check and cleaning	12-61
Air filters – cleaning	12-64
Intercooler – cleaning	12-65
Transmission oil cooler – cleaning	12-65
Cleaning your vehicle	12-66

۲

General precautions for servicing the vehicle

Please take the following precautions when servicing your vehicle:

- Make sure the vehicle is on safe, level ground.
- Prevent the vehicle from moving by setting the parking brake and blocking the wheels with chocks.
- Remove the starter key unless you need to run the engine.
- Take off wristwatches, rings, and neckties, and wear clothing that will not obstruct movement or snag on parts of the vehicle.
- Wear all safety gear necessary for your task, for example, hard hat or goggles.
- Use the correct tools for your task.
- Do not make adjustments or repairs unless you know exactly what you are doing. For servicing that is difficult or not shown in this manual, take your vehicle to an authorized dealer.
- When servicing electrical equipment, disconnect the negative (–) terminal of the battery.

WARNING <u>/</u>


- Never run the engine in a poorly ventilated area. Exhaust emissions contain carbon monoxide, which can cause unconsciousness or death if breathed.
- Never smoke when servicing your vehicle since its fuel and the gases given off by its battery are highly flammable.
- When tilting the cab, carefully follow the instructions in this manual. Be sure to insert the safety pin in the cab stay hole to prevent the cab from dropping.

After letting the cab down, check that it is locked securely in position. $\Rightarrow \square$ P. 12-5

- The engine gets extremely hot when running and stays hot for some time after being turned off. To avoid being burned, do not touch the engine, exhaust manifold, radiator, exhaust pipe, or other enginerelated parts until they have cooled down.
- Do not loosen the radiator cap while the engine is hot. Wait for the engine to cool down, then grip the cap with a cloth and turn it slowly to release the internal pressure before removing it completely.
- Never crawl under the vehicle when it is supported only by a hydraulic jack since the jack could slip out of position and cause the vehicle to crush you.
- The battery cables and starter cables carry extremely high voltages. Be careful not to short-circuit them, e.g., with a tool, since this could cause serious injury.

- Take great care when working near the fan and fan belt. Never touch them when they are moving.
- The oil cooling fan in a FM65F automatic transmission vehicle is electrically driven and switches on automatically when the engine is running. Keep your hands and tools clear of it. Also, the oil cooler is extremely hot just after driving, and could cause burns if you touch it before it has sufficiently cooled.
- Keep oily rags and other flammable items in a safe place.
- Put away all tools and rags after use. Items left in the engine bay could get hot and catch fire.

- Do not climb onto the engine. Stepping on engine pipes or accessories could cause damage and malfunctions.
- Always use genuine parts for replacements such as filters or filter elements. Also, oil and grease should be those recommended in this manual.
 ⇒ □ P. 14-3 Use of non-genuine parts, or oil and grease not recommended by Mitsubishi, may lead to failures.
- When replacing the oil or coolant, be sure to have a container suitable for catching drained fluid ready.
- Dispose of drained oil and coolant in the specified manner. Disposing of them irresponsibly could cause environmental harm.
- The muffler contains a catalytic converter. Do not kick or knock the muffler since the catalytic converter could be damaged. Water emitted by the exhaust pipe is slightly acidic and should not be touched. If you touch this water, rinse it off under a faucet.

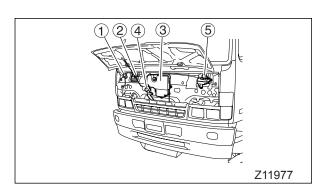

Opening and closing the front panel

Open the front panel to gain access to the parts or equipment located at the vehicle's front on those occasions when you need them for performing inspections or for servicing the vehicle or again for the pre-operational checks.

- ① Windshield washer tank
- ② Air filter for heater and air conditioner
- 3 Coolant reservoir tank
- ④ Engine oil filler port (oil filler cap)
- 5 Clutch fluid reservoir tank

After you have completed the inspections or checks and closed the front panel, make sure that the panel is securely locked.

WARNING /!

- Be careful when opening the front panel during high winds as the wind could force up the panel, blowing it off its stay.
- Never operate the wipers when the front panel is open; your hands or other items could become trapped in the wiper links.

1 Opening

- 1. If the wiper arms are raised, put them down.
- 2. Pull lock release knob ① from inside the cab to unlock the front panel.
- 3. Raise front panel 2 and support it with stay 3.

Fit the stay securely into the hole in the front panel ② to prevent the front panel from falling and possibly causing an injury.

2 Closing


- 1. Support front panel ② with your hand. Unhook stay ③ and bring it back to its original position.
- Gently lower the front panel, and push it so it locks in place.


Make sure your hands are not behind the front panel when closing it since they could be crushed.


3. Check that the front panel is securely locked.

- Never pull up the lock release knob in the cab while driving. An unlocked front panel could open and obstruct your vision, which is very dangerous.
- Make sure that the front panel is locked completely after closing it. If locked incompletely, the front panel could open while driving.

Closing the front panel by letting it drop or forcing it down could damage the panel.

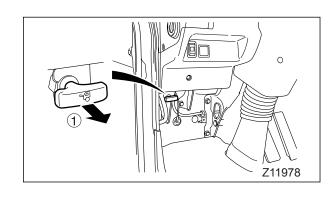

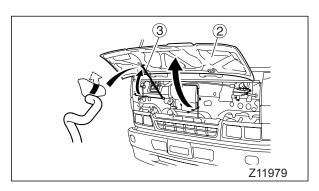

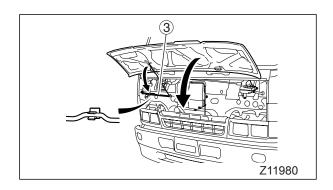

Tilting the cab

1 Preparation

 Park the vehicle on a flat and level surface and stop the engine.

Tilting the cab on a slope is dangerous since the cab could swing up unexpectedly. This could also damage the mechanism because of the huge, sudden stresses on it.


- Prevent the vehicle from moving by pulling the parking brake lever and blocking the wheels with chocks.
- In a manual transmission vehicle, put the gearshift lever in the neutral position. In an automatic transmission vehicle other than FM65F, put the range selector lever in the "P" position. For FM65F, put the range selector lever in the "N" position.
- Remove water or other liquids from inside the cab before tilting.
- Loose items left in the cab could fall and break the windshield or other equipment. Take out or safely stow all loose items before tilting the cab.
- Close both doors completely.
- At least 1 m (1 yard) is needed both in front of and above the cab when the cab is tilted. If there are obstacles within these 1 m (1 yard) spaces, remove them.


WARNING /!


- Before tilting or lowering the cab, make sure that the area around the cab is clear of people and obstructions.
- The cab will move too quickly under the effect of inertia if it is tilted on a slope, possibly causing damage to various vehicle components. Doing so is dangerous as the hook may not engage completely when the cab is lowered.


Never tilt the cab when the vehicle is on any kind of slope.

- Never tilt the cab with persons inside.
- The cab can drop suddenly if it has heavy objects inside or is fitted with a roof deck. You should be sufficiently aware of this for your safety.
- Do not operate the steering wheel, gearshift lever, or any other controls in a tilted cab. Doing so could lead to an accident.

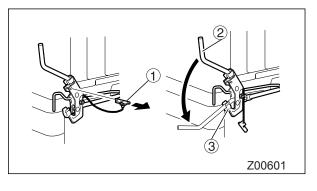

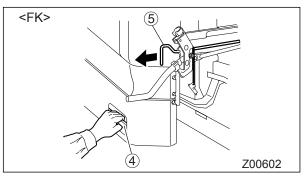

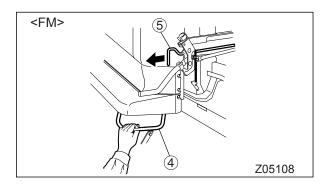

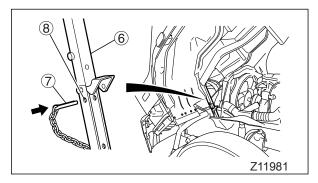

2 Tilting the cab

- 1. Remove lever key \bigcirc .
- 2. Pull lever 2 down until it is fitted in stopper 3.

3. Holding onto grip ④ on the cab, pull lever ⑤. This causes the cab to start rising.

- 4. Hold the grip and push the cab up until it is stopped by cab stay ⁽⁶⁾.
- 5. Fit safety pin $\ensuremath{\overline{\mathcal{D}}}$ into hole $\ensuremath{\overline{\mathbb{B}}}$ in the cab stay.

- If lever ② is not pulled down completely, the hook may not be engaged when the cab is lowered.
- Raise the cab only gently.


To ensure safety, be sure to fit the safety pin in the cab stay hole. On no account climb under the cab before the pin is in the hole.


www.Manualslib.com manuals search engine


3 Lowering the cab

WARNING /!

- Before lowering the cab, make sure that you have not left rags, tools, etc. in the engine compartment. Flammable objects left inside the engine compartment can cause fires.
- The cab could come down too quickly if there are heavy objects inside or on the roof deck. Always lower the cab slowly while supporting it.
- 1. Remove safety pin \mathcal{T} from cab stay **(6)**.
- 2. While supporting the cab by holding grip ④ push lever (9) down. This unlocks cab stay (6), allowing the stay to be folded and the cab to start lowering.

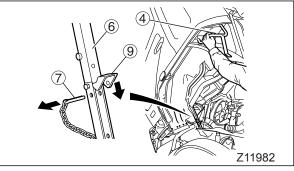

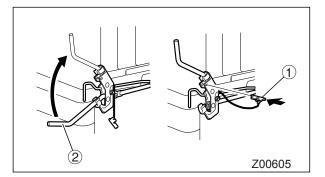

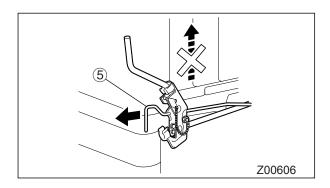



WARNING /!

When pushing the lever (9) and folding the cab stay, take care that your fingers do not get trapped.

- 3. Lower the cab until lever (5) is engaged.
- 4. Push lever 2 all the way up.
- 5. Install lever key ①.

6. Make sure that the cab does not rise even when lever (5) is pulled.

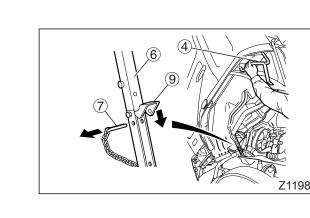

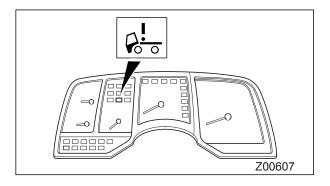

7. Turn the starter switch to the ON position and check that warning lamp $\rho_{\sigma\sigma}^{!}$ does not light up.

- If lever ② cannot be pulled up or warning lamp ¹/_{φ²} is illuminated, perform the cab tilting and lowering procedures over again.
- Make sure that the intake air duct and its rubber boot are perfectly aligned.
- Do not hold lever 2 when lowering the cab. If you hold the lever and apply force to it to lower the cab or ease shocks when the cab reaches the lowered position, the mechanism components could be damaged.


WARNING <u>/!</u>

- The cab could come down abruptly. Lower the cab slowly while supporting it by hold-ing grip ④.
- Make sure that lever key ① is in position. Operating the vehicle with the key removed is extremely dangerous as the cab can come unfastened.


Pre-operational checks

Be sure to perform the pre-operational checks for the items listed below at the start of each day's operation in order to ensure safe and comfortable driving. If you find anything unusual, you should have your vehicle inspected at an authorized dealer before operating it.


1 Before starting the engine (Open the front panel.)

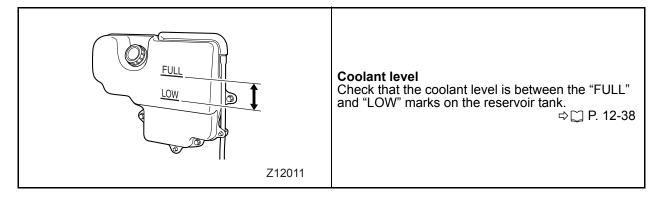


12-9

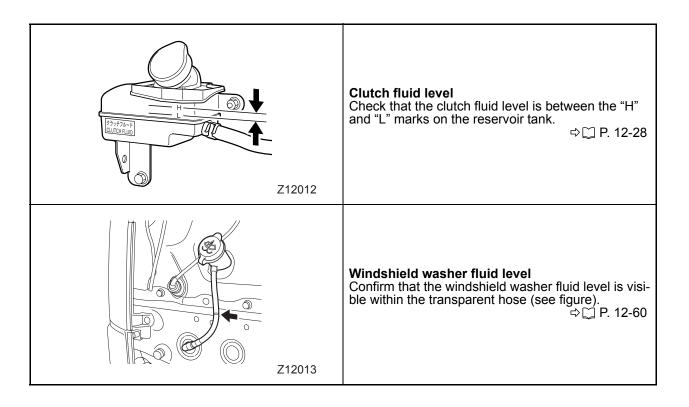


2 Before starting the engine (Tilt the cab.)

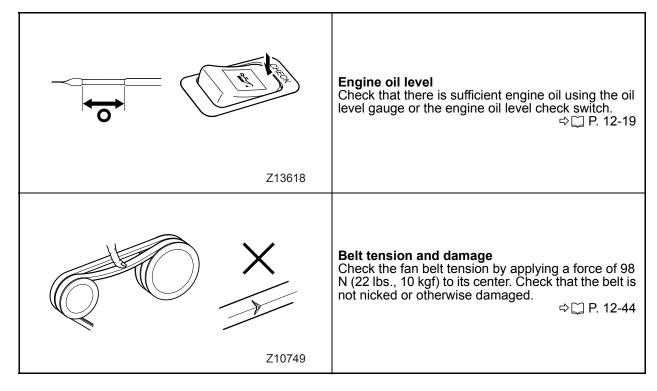

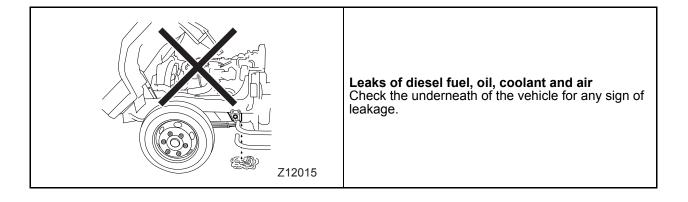


3 In the driver's seat

Start the engine and perform the following checks while allowing it to warm up.

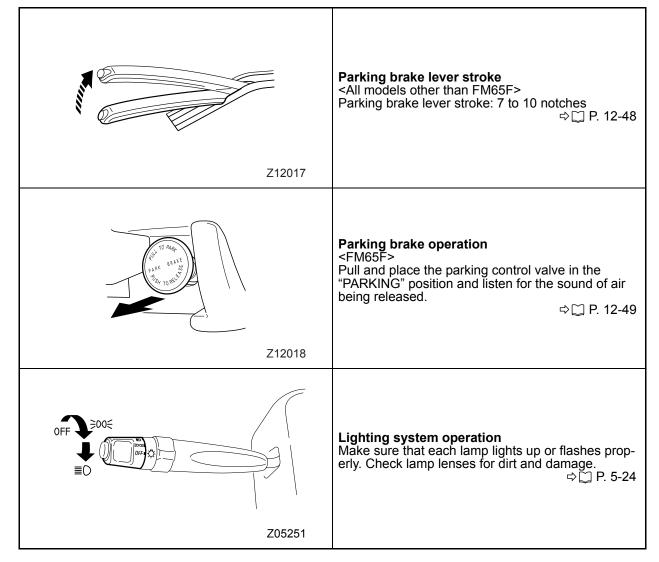

www.Manualslib.com manuals search engine


12-11

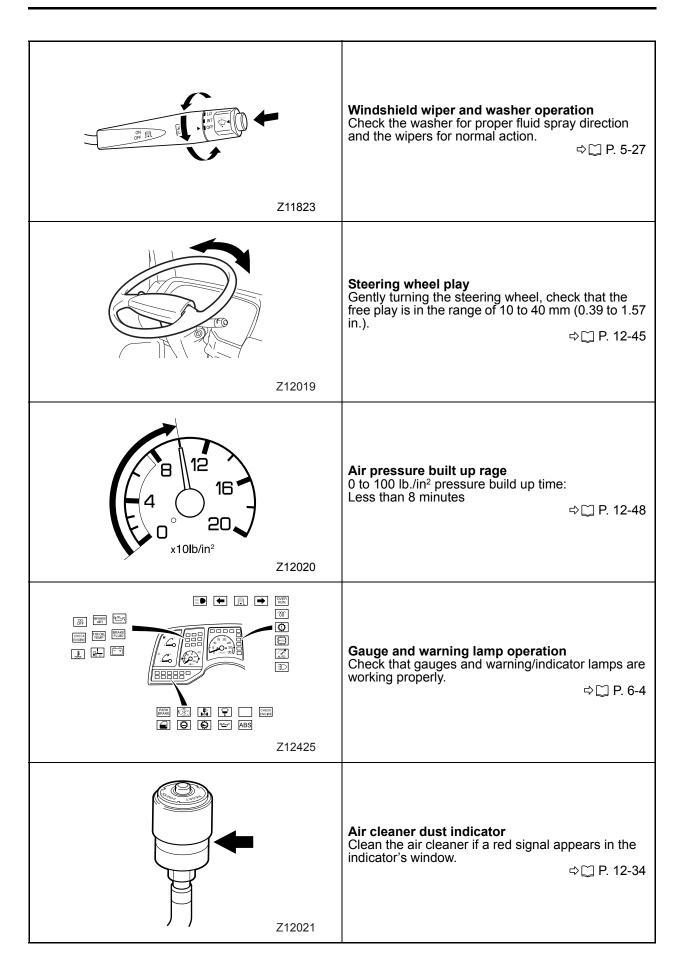


0

(


0

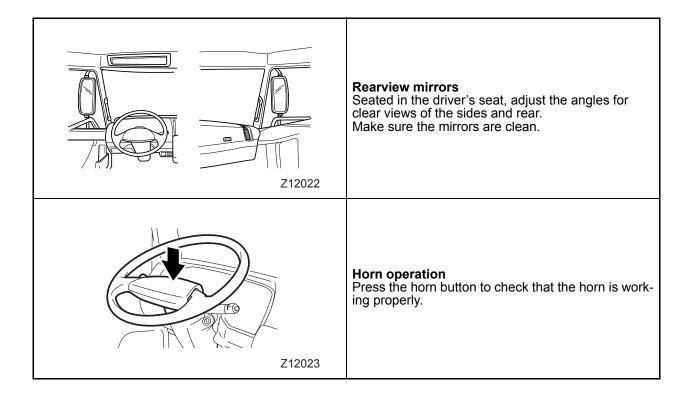

4 While walking around the vehicle

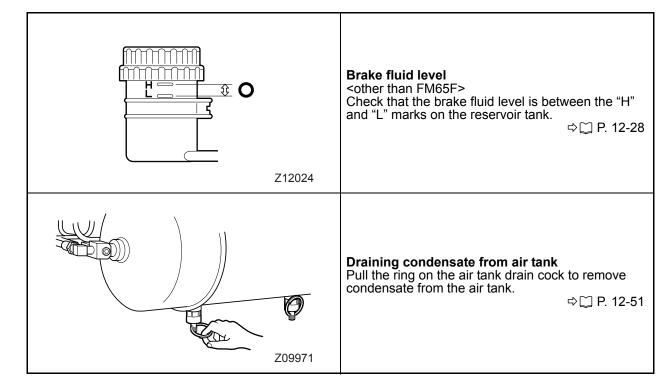

12-13

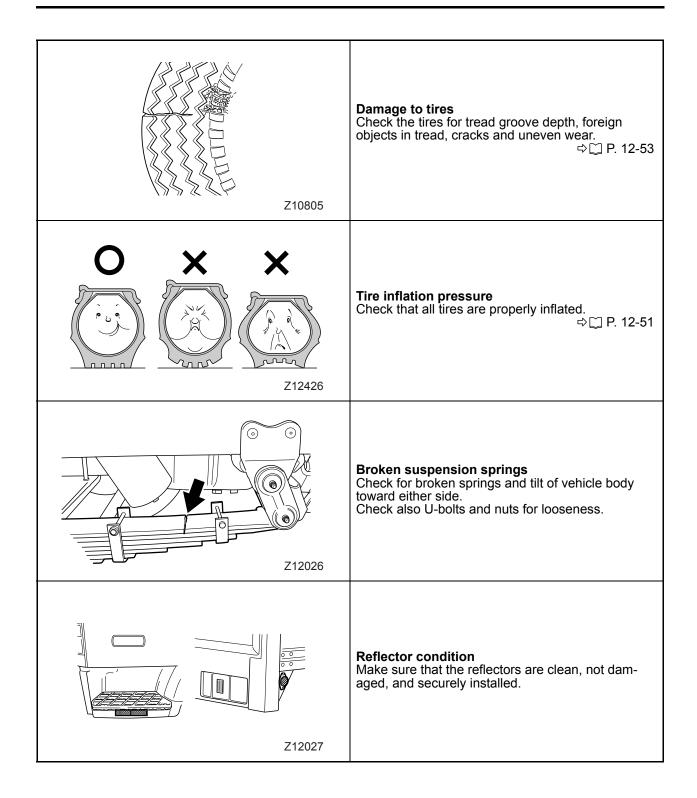


0

٠

5 While driving at slow speeds

Perform the following checks while driving in a safe place at speeds lower than 20 km/h (12 MPH).

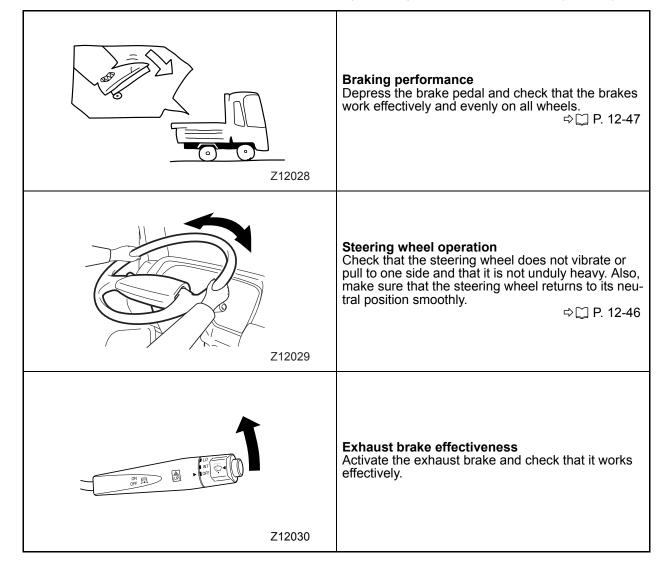

Lubrication

Application and replacement of lubricants at the specified intervals is vital to the vehicle's performance, longevity, and safety. Following the maintenance schedule will give optimum results.

⇔∏ P. 15-2

- If the vehicle is often used in demanding conditions, for example, on unpaved roads, near the coast, or in cold regions, lubricants should be applied and replaced more quickly than specified in the maintenance schedule. Consult an authorized dealer for lubricant application and replacement intervals most appropriate to your driving conditions.
- Use only the lubricants specified. ⇒ □ P. 14-3
- Special lubricants must be used if the vehicle is used at temperatures below –23°C (–10°F). For details, refer to an authorized dealer.

- Apply and replace lubricants regularly. Use of lubricants beyond their designed service life could cause bearings or other components to seize up and cause an accident.
- Any checking, application, or replacement of lubricants should be carried out with the vehicle parked on level ground.
- Wipe all lubricant inspection windows and filling ports carefully to prevent the entry of mud, trash, water, or other contaminants.
- Never flush waste oil into the sewers or onto the ground. Take it to a gas station or authorized dealer.

Greasing


1 Grease fittings


Remove all dust and dirt from the grease fittings before using them. Always use the recommended grease.


Wipe away any grease that sticks to wires or rubber hoses and any grease that overflows from the grease nipples.


	Every 10,000 km (6,000 miles) Every 30,000 km (18,000 miles) for the greasing points marked ★.
--	------------------------------------------------------------------------------------------------------

 \bigcirc

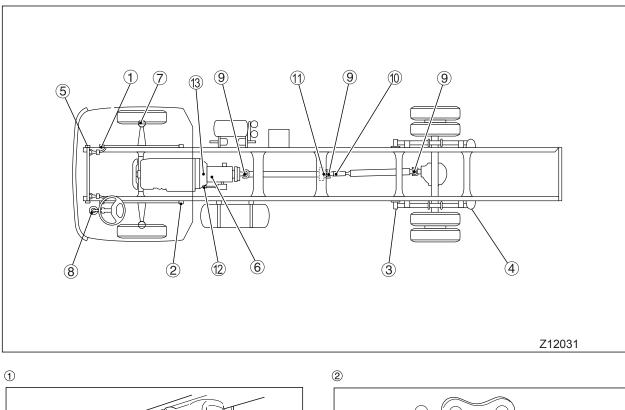


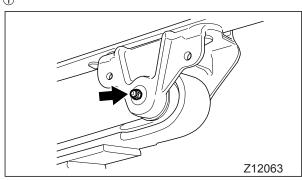

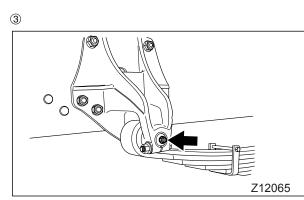

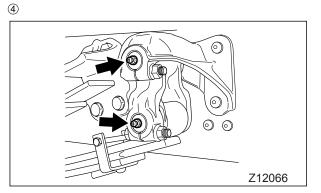





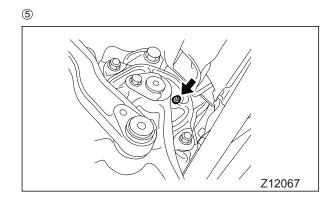

⑦ <Other than FM65F>


0

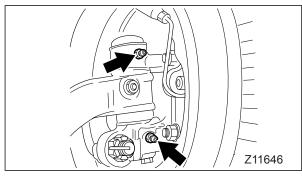

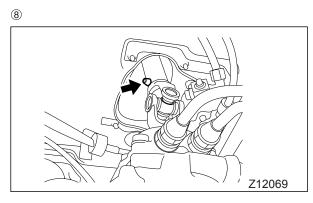


©




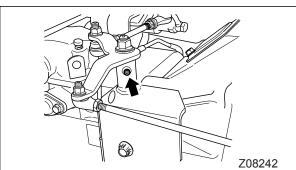





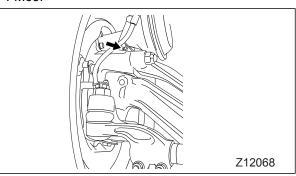




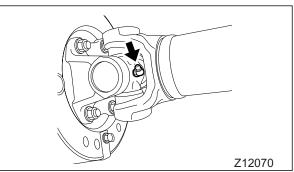

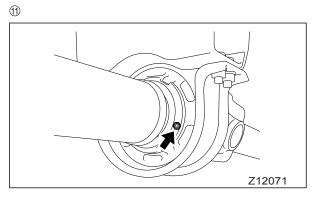

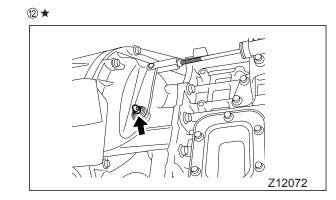

13 ★

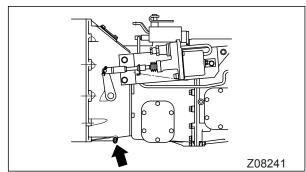

Recommended lubricant: Chassis grease NLGI No. 1 (Li soap)

- ① Front spring, front end (two points each for left and right spring front ends)
- ② Front spring, rear end (two points each for left and right spring rear ends)
- ③ Rear spring, front end (two points each for left and right spring front ends)
- Rear spring, rear end (two points each for left and right spring rear ends)
- ⑤ Cab hinge (two points each for left and right hinges)
- ⑥ Transmission control select shaft <9-speed transmission vehicles>

Recommended lubricant: Wheel bearing grease NLGI No. 2 (Li soap)

- Kingpin top and bottom sections
 (two points each for left and right kingpins)
- ⑧ Steering shaft
- 9 Propeller shaft universal joint
- 10 Propeller shaft slip joint
- ① Propeller shaft center bearing
- ② *Clutch fork shaft (two points each for left and right sides) <Manual transmission vehicles>
- ③★Clutch shifter


<9-speed transmission vehicles>


The point marked \star should be greased every 30,000 km (18,000 miles).


NOTE:

The greasing points for the propeller shaft varies depending on vehicle model.

When greasing the propeller shaft center bearing, pump in grease until it starts to come out of the escape valve behind the grease fitting.

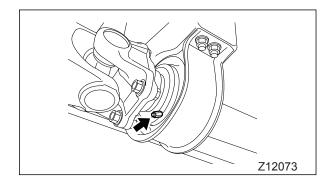

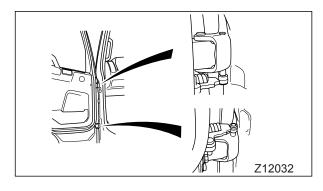

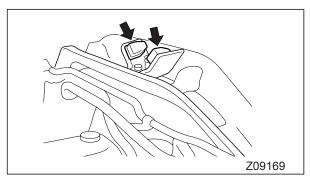

2 Door hinge (two points each for left and right hinges)

Apply to rotating and sliding sections.

Greasing intervals	Every 10,000 km (6,000 miles)
--------------------	----------------------------------

Recommended lubricant: Chassis grease NLGI No. 1 (Li soap)

3 Cab rear mount cushion (two inside points each for left and right cushions)

Greasing intervals	Every 30,000 km (18,000 miles)
--------------------	-----------------------------------

Recommended lubricant: Chassis grease NLGI No. 1 (Li soap)

1 Engine oil

Performance, life, and startability of the engine depend to a large degree on the engine oil. Always use oil of the specified type and viscosity.

Oils and fluids


Inspection intervals	At the time of preoperational check
Replacement intervals	Every 10,000 km (6,000 miles)

The first engine oil replacement during the run-in period should be performed at the first 4,000 km (2,500 miles).

Replace the engine oil earlier if the engine is frequently used at high speeds or under high loading.

Recommended oil:

Engine oil API classification CD, CD/SF, CE, CE/SF, CF-4 or JASO classification DH-1 SAE10W-30, 15W-40, 20W-20, -30, -40

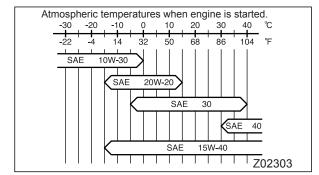



Engine oil with an API classification of CC cannot be used. Be sure to use engine oil with a classification of CD or higher.

Quantity required:


	Liters (qts)
Oil pan	Approx. 11 (11.6)
Oil filter	Approx. 2.3 (2.4)


Use the oil level gauge to check the engine oil level. You can also use the oil level check switch. Although the oil check switch method is quick and simple, it does not provide an accurate measurement. Use the oil level gauge if you require an accurate measurement.


NOTE:


Check the engine oil level with the vehicle parked on a level place and the engine stopped. A correct engine oil level cannot be determined when the vehicle is tilted, or if the engine is running or the time after stopping the engine is too short. Let the engine stand at least 30 minutes after stopping it before checking the oil level.

- 1.1 Engine oil level check using oil level check switch (simple method)
- 1. Turn the starter switch to "ON".
- Press the "CHECK" side of the oil level check switch and keep it pressed. The oil level is sufficient if the diamonal amp comes on and the diamonal amp goes out. If the diamonal amp does not come on and the diamonal amp remains illuminated, the engine oil level is lower than the normal level. After checking the level with the warning lamps, release the oil level check switch.
- Add engine oil if the level is lower than the normal level.
 ⇒ □ P. 12-21

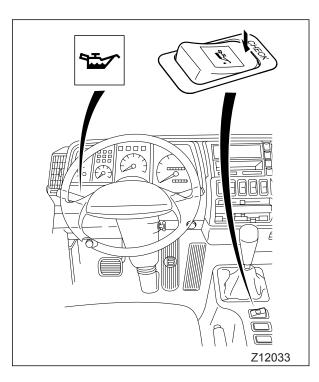

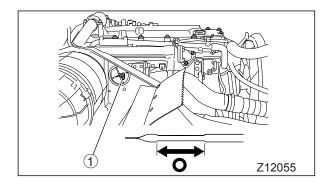

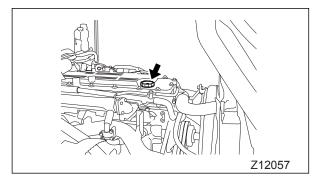

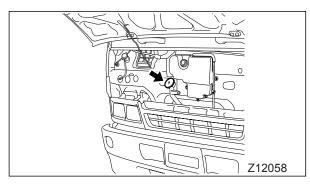

1.2 Engine oil level check using oil level gauge ⇔ [`] P. 12-5

- 1. Tilt the cab.
- 2. Remove oil level gauge ① and wipe off oil with a cloth.
- 3. Fully insert the oil level gauge in the crankcase, and gently draw it out.
- The oil level marked on the oil level gauge 4. should be within the area shown in the illustration. If necessary, replenish with the recommended engine oil. If the drained oil is heavily contaminated, change the engine oil.
- 5. After the check, insert the oil level gauge into position and secure it properly.

1.3 Adding oil

There are two engine oil filter ports. One is behind the front panel and the other on the engine. You may use either of them.

To access the first filler port, open the front panel.

⇔∭ P. 12-3 To access the second filler port, tilt the cab. ⇔ 💭 P. 12-5

NOTE:

If you use the filler port behind the front panel, the oil will enter the oil pan directly, allowing the oil level to be checked earlier.


- 1. Remove the oil filler cap and add oil as necessary.
- 2. Clean the area around oil filler cap to prevent dust and dirt from entering the engine.
- 3. If you use the filler port on the engine and check the oil level immediately after adding oil, the reading may be lower than the actual level because all oil added may not have yet reached the oil pan. Wait for at least 6 minutes after addina oil.


In the case of overfilling, loosen the drain plug on the oil pan to allow the necessary amount of engine oil to drain out.


4. Install the oil filler cap.

WARNING /!\

Take care not to spill engine oil as engine oil on the exhaust manifold or other hot sections of engine could catch fire. Wipe clean the oil if spilt.

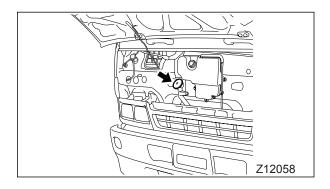

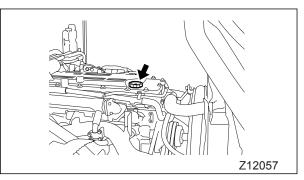

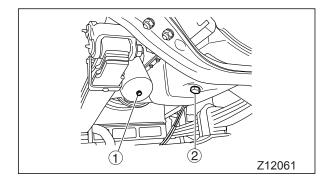

- The added oil should be of the same grade and viscosity as the oil originally placed in the engine. Otherwise, engine malfunction may result.
- Take care not to add more than the specified quantity of oil.
- The engine can be severely damaged if the correct engine oil level is not maintained.

1.4 Replacement

To access the filler port behind the front panel, open the front panel. $\Rightarrow \square P. 12-3$ To access the filler port on the engine, tilt the cab. $\Rightarrow \square P. 12-5$

NOTE:

If you use the filler port behind the front panel, the oil will enter the oil pan directly, allowing the oil level to be checked earlier.

WARNING

If you remove oil immediately after operating the vehicle, it will be extremely hot. Take care to avoid being scalded.

- 1. Clean the surfaces around oil filler cap and remove the oil filler cap.
- 2. Place a receiver under the oil filter. Loosen oil filter ter drain plug ① to let the oil flow out of the filter.
- 3. Remove drain plug ② from the oil pan to remove the oil.
- 4. Tighten the oil pan drain plug and the oil filter drain plug.

Tightening torque		
Oil pan drain plug 69 N·m (51 ft.lbs., 7 kgf·m)		
Oil filter drain plug	7.8 ± 2 N·m (5.8 ± 1.4 ft.lbs., 0.8 ± 0.2 kgf·m)	

- 5. Carefully pour fresh engine oil through the oil filler.
- 6. Check the oil level using the oil level gauge if you use the filler port on the engine, wait for more than 6 minutes and check the oil level.
- Let the engine idle allowing oil to circulate throughout the engine parts. Then, stop the engine and wait for more than 30 minutes before checking the oil level again. Also, check for possible oil leaks.
- 8. After adding oil to the correct level, ensure that the drain plug, oil filler cap, and oil level gauge are securely installed.

www.Manualslib.com manuals search engine

WARNING <u></u>

Take care not to spill engine oil as engine oil on the exhaust manifold or other hot sections of engine could catch fire. Wipe clean the oil if spilt.

- Take care not to add more than the specified quantity of oil. The engine can be severely damaged if the correct engine oil level is not maintained.
- If the engine is frequently run at high speeds or under heavy loads, the engine oil will deteriorate quickly and must be replaced sooner than specified.

2 Manual transmission gear oil

Inspection intervals	Every 10,000 km (6,000 miles)
Replacement intervals	Every 50,000 km (30,000 miles)

The first transmission gear oil replacement during the run-in period should be performed at first 4,000 km (2,500 miles).

Recommended oil:

<6-speed transmission>

Gear oil

API classification GL-3, SAE80 (general) or SAE90 (warm regions)

API classification GL-4, SAE90 (tropical regions)


Long period of high-speed driving: Engine oil API classification CC, CC/SF, SAE30, 40


<9-speed transmission> Gear oil API classification GL-4, SAE90 Engine oil API classification CD, SAE30, 40 or 50

Quantity required:

Liters (qts)

Model	Туре	Qua	ntity
Other than FM65F	6-speed	Approx. 6.7 (7.1)	Add approx. 0.5 (0.5)
FM65F	6-speed	Approx. 8.1 (8.6)	if vehicle has PTO
	9-speed	Approx.	8.5 (9.0)

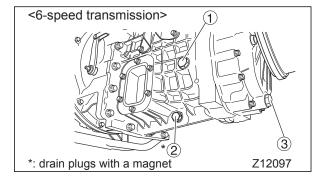

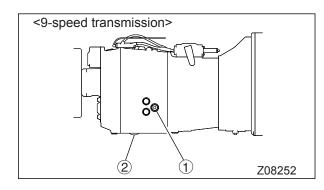

WARNING

Do not check or replace the gear oil immediately after operating the vehicle since the engine, transmission, exhaust pipe, and other components will be extremely hot.

2.1 Check

- 1. Remove inspection plug ① and make sure that oil is topped off.
- 2. If insufficient, add oil through the inspection plug hole until it is full to the brim.

The added oil should be of the same grade and viscosity as the oil originally placed in the transmission. Otherwise, malfunction of the transmission will result.

3. Install the inspection plug.

Inspection plug	6-speed	69 ± 15 N·m (51 ± 11.7 ft.lbs., 7 ± 1.5 kgf·m)
tightening torque	9-speed	32 to 37 N·m (24 to 27 ft.lbs., 3.3 to 3.8 kgf⋅m)

2.2 Replacement

The gear oil is extremely hot immediately after the vehicle has been operated. Take care to avoid being scalded when draining hot oil. Give the oil time to cool before draining it.

1. Remove the inspection plug ① and drain plug ② to let the oil flow out. The 6-speed transmission has an additional drain plug ③, which should also be removed.

NOTE:

Oil removal is quicker if performed not so long after the vehicle has been stopped and while the oil is still warm.

2. For a drain plug fitted with a magnet, wipe off any metal particles sticking to the magnet and install the drain plug.

Drain plug	6-speed	69 ± 15 N·m (51 ± 11.7 ft.lbs., 7 ± 1.5 kgf·m)
tightening torque	9-speed	40 to 47 N·m (30 to 35 ft.lbs., 4.1 to 4.8 kgf·m)

- 3. Add oil through the inspection plug hole until it reaches the bottom of the hole.
- 4. Install the inspection plug.

Inspection plug	6-speed	69 ± 15 N·m (51 ± 11.7 ft.lbs., 7 ± 1.5 kgf·m)
tightening torque	9-speed	32 to 37 N·m (24 to 27 ft.lbs., 3.3 to 3.8 kgf⋅m)

3 Automatic transmission fluid

Inspection intervals		Every 10,000 km (6,000 miles)
Replace- ment inter-	Other than FM65F	Every 80,000 km (48,000 miles)
vals	FM65F	Every 40,000 km (24,000 miles)

Whenever replacing automatic transmission fluid, also replace the filters at the same time. On a new vehicle (excluding FM65F), only replace the filters at the first 8,000 km (5,000 miles). On a new vehicle (FM65F), only replace the main filter (continue to use the lube filter) at the first 8,000 km (5,000 miles).


Recommended fluid:


Automatic transmission fluid DEXRON III type

Quantity required for replacement:

Liters (qts)

Model		Quantity
Other than	LCT1000	Approx. 7 (7.5)
FM65F	LCT2400	Approx. 10 (10.6)
FM65F	MD3060	Approx. 18 (19)

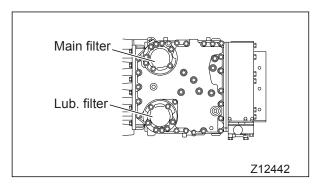

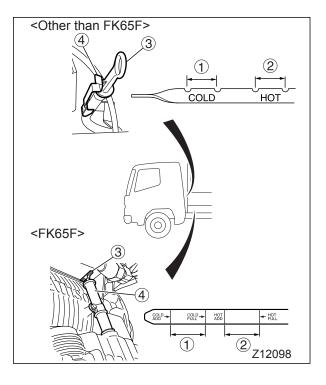

3.1 Check and replacement

Refer to the separate Allison Automatic Transmission Operator's Manual. In the FM65F model, the automatic transmission fluid level can be checked using the range selector lever.

- ① COLD RUN band
- ② HOT RUN band

Check the automatic transmission fluid level. Add fluid, as required, through the dipstick tube.

4 Axle housing gear oil

Inspection intervals	Every 10,000 km (6,000 miles)
Replacement intervals	Every 60,000 km (36,000 miles) or every 12 months

The first axle housing oil replacement during the run-in period should be performed at first 4,000 km (2,500 miles).

Recommended oil: Gear oil API classification GL-5 Below 40°C: SAE90 Above 40°C: SAE140 or 85W-140

Use oil conforming to GL-5, SAE140 or SAE85W-140 if the vehicle is to be driven under heavy load conditions as for example driving up long uphill grades. Remember, however, that this oil is to be used only when the temperature is above $10^{\circ}C$ ($50^{\circ}F$).

Quantity required (guideline):

Liters (qts)

Model	Quantity
Other than FM65F <9-speed transmission>	Approx. 6.5 (6.9)
FM65F <9-speed transmission>	Approx. 10 (10.6)



Do not check or replace the gear oil immediately after operating the vehicle since the real axle and gear oil will be extremely hot.

4.1 Check

- 1. Remove inspection plug ① and make sure that the oil is topped off.
- 2. If insufficient, add oil through the inspection plug hole until it is full to the brim.

The added oil should be of the same grade and viscosity as the oil originally placed in the differential gears. Otherwise, malfunction of the rear axle will result.

3. Install the inspection plug.

	98 to 115 N·m (72 to 87 ft.lbs.,
tightening torque	10 to 12 kgf·m)

4.2 Replacement

WARNING /

The gear oil is extremely hot immediately after the vehicle has been operated. Take care to avoid being scalded when draining hot oil. Give the oil time to cool before draining it.

NOTE:

Oil removal is quicker if performed not so long after the vehicle has been stopped and while the oil is still warm.


- 1. Remove the inspection plug and drain plug 2 to let the oil flow out.
- 2. After the oil has flown out completely, install drain plug 2.

Drain plug	98 to 115 N·m (72 to 87 ft.lbs.,
tightening torque	10 to 12 kgf·m)

3. Add oil through the inspection plug hole until it reaches the bottom of the hole.

4. Install the inspection plug.

Inspection plug tightening torque	98 to 115 N·m (72 to 87 ft.lbs., 10 to 12 kgf·m)
-----------------------------------	-----------------------------------------------------

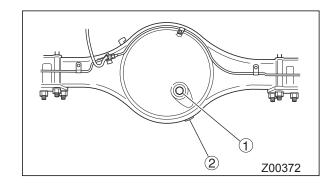

5 Brake fluid and clutch fluid

Fluid	Inspection intervals	Replacement intervals
Brake fluid	At the time of pre- operational check and every 10,000 km (6,000 miles)	Every 60,000km (36,000 miles) or every 12 months
Clutch fluid	At the time of pre- operational check and every 10,000 km (6,000 miles)	Every 60,000 km (36,000 miles) or every 12 months

Have the brake and clutch fluid replacement performed by an authorized dealer.

Recommended fluid:


Brake fluid SAE J1703, FMVSS No. 116, type DOT3

WARNING /!

- Be sure to use the recommended brake fluid.
- Use only one brand of recommended brake fluid. Mixing of different brands or types of fluid will change the properties of the fluid possibly resulting in a lower fluid boiling point and damaged brake components.

If you wish to change the brand of brake fluid, replace all the existing fluid in the brake system with the new brand fluid.

- Never allow engine oil, diesel fuel, gear oil, automatic transmission fluid, or any other mineral oil to mix with the brake fluid. When mixed with the brake fluid even very small in amounts, such oils will cause the rubber parts of the brake system to swell, and could cause brakes to become sluggish or to drag. Also, do not use containers which have been used for mineral oil for brake fluid.
- Because brake fluid is highly hygroscopic, it should be kept in a dry place both during refilling and storage. If brake fluid absorbs moisture, the boiling point is lowered, a condition which could result in vapor lock. This is very dangerous. Do not open the reservoir tank cap when checking the brake fluid.
- Brake fluid dissolves paint. If you spill the fluid, wipe it clean or flush it off with water. If not cleaned off, brake fluid can cause discoloration, corrosion, or cracks in the paintwork.
- If the brake fluid is used over long periods, its boiling point drops significantly due to the moisture it has absorbed, thereby increasing the likelihood of dangerous vapor lock. Be sure to replace the brake fluid every 60,000 km (36,000 miles) or 12 months, whichever is sooner.

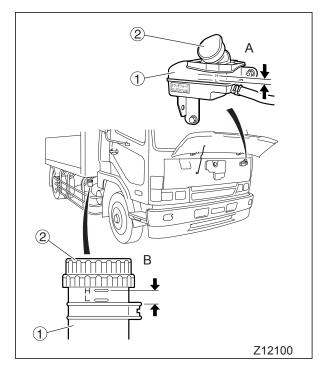

The reservoir tank design varies from model to model.

- Other than FM65F "A" and "B" Tank "A" is for clutch fluid, and tank "B" for brake fluid.
- FM65F
 - "A" only

This tank contains clutch fluid.

5.1 Check

The fluid level should be between the "H" and "L" lines on reservoir tank .

Also check the inside of the reservoir tank for foreign matter. If there is sediment in the reservoir tank, have an authorized dealer check and clean it.

Do not open cap ② of reservoir tank for inspection purposes.

5.2 Adding fluid


- If the fluid level is lower than the "L" line, clean the surfaces around cap of reservoir tank, open the cap, and add the recommended brake fluid up to the "H" line.
- 2. Close the cap firmly.

WARNING <u>/</u>

- The container used for adding brake fluid should be a clean one free of moisture, mineral oil, and dust.
- If the fluid level is unusually low, there is a fluid leak in the brake line. In this case, have your vehicle inspected at an authorized dealer.
- Be extremely careful not to let dust and other foreign matter enter the reservoir tank, as foreign matter in the tank could cause a failure of the brake system. If you see foreign matter in the reservoir tank, have it checked and cleaned by an authorized dealer.
- Be careful not to exceed the "H" line when adding brake fluid.

After the brake fluid has been added, push the inside rubber of the cap back as illustrated before refitting the cap.

1: After adding
 2: Before adding

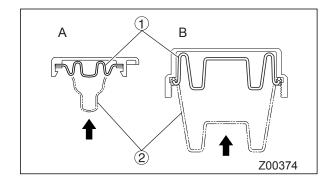



Inspection intervals	Every 10,000 km (6,000 miles)
Replacement intervals	Every 60,000 km (36,000 miles) or every 12 months

Have the power steering fluid replaced by an authorized dealer. At the time of fluid replacement, the filter in the power steering fluid tank must also be replaced.

Recommended fluid: Automatic transmission fluid DEXRON, DEXRON II or DEXRON III type

When adding power steering fluid, be sure to use fluid of the same brand as the existing fluid. Mixing two or more different fluids will change their properties and could cause a failure.

6.1 Checking and adding fluid


- Stop the engine with the front wheels in the straight-ahead position.
 Prevent the vehicle from moving by fully setting the parking brake and blocking the wheels with chocks.
- Check the fluid level in power steering fluid tank

 located in the rear of the cab. The fluid level should be between the "MAX" and "MIN" lines. If necessary, tilt the cab to make it easier to check the level and add power steering fluid.
- If the fluid level is lower than the recommended range, clean the surfaces around fluid tank cap
 ②. Open the tank cap and add fluid as necessary.
- 4. Install the cap on the fluid tank.

WARNING /!

- Close the tank cap firmly; otherwise power steering fluid will leak and could catch fire. Also, wipe clean spilled fluid.
- If the fluid level is far below the specified range, fluid may be leaking. Have your vehicle inspected at an authorized dealer.

- Use a clean container when adding the power steering fluid. Foreign matter in the fluid could result in a failure.
- Avoid adding fluid to a level above the specified range.
- Insufficient oil can make the steering heavy or noisy and can damage power steering components.

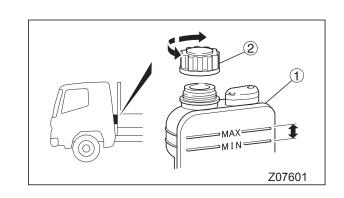

Filter elements

1 Engine oil filter replacement

Replacement intervals	Every 20,000 km (12,000 miles)
-----------------------	-----------------------------------


The first oil filter replacement during the run-in period should be performed at the initial 10,000 km (6,000 miles) point.


WARNING /!

- Do not replace the oil filter immediately after operating the vehicle since the engine, transmission, exhaust pipe, engine oil, and other items will be extremely hot. If you do not observe this instruction, you could get burned. Replace the oil filter only after waiting until all these parts have sufficiently cooled down.
- Spilled engine oil should be wiped off clean. Oil remaining on the engine surface could catch fire.

- Oil filter element must not be cleaned and reused.
- Replace the oil filter element once every two engine oil changes.
- When the
 → warning lamp lights up, the oil filter element is clogged. Replace the ele- ment immediately regardless of the sched- uled replacement intervals. If the buzzer sounds simultaneously, engine oil pressure is excessively low.

www.Manualslib.com manuals search engine

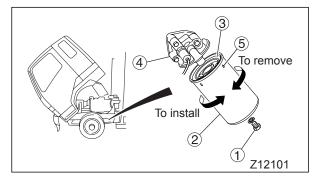

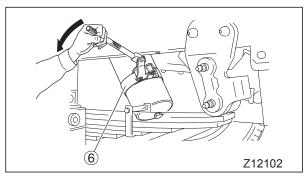

Replace the oil filter element as follows:

- 1. Place a suitably sized pan under the oil filter, and loosen drain plug ① to let the oil in the filter flow out.
- 2. Turn filter element assembly ② in the direction of the arrow to remove it. If the assembly is hard to turn, use a filter wrench ⑥ (available from an authorized dealer).
- Replace the filter element assembly with a new one. The replacement part should be a genuine part.
- 4. Install the filter element assembly using this procedure:

Apply a thin coat of engine oil to the gasket surface ③ of the filter element assembly. Turn the assembly clockwise by hand until the gasket contacts the sealing surface of the filter head ④. From this point, give the filter element assembly an additional 1-1/8 to 1-3/8 clockwise turns using the mark ⑤ on it as a reference.

- 5. When only the filter element is replaced without replacing engine oil, add approx. 2.3 liters (2.4 qts) of engine oil through the oil filler.
- 6. Crank the engine. $\Rightarrow \square P. 5-9$
- 7. Start the engine and check for oil leaks.
- 8. Stop the engine and, after letting it cool down for 30 minutes or more, check the oil level.

2 Fuel filter replacement


Replacement intervals	Every 30,000 km (18,000 miles) or every 6 months
-----------------------	--------------------------------------------------------


WARNING /


- Fuel is highly flammable and should be kept away from hot objects and open flames owing to the risk of fire or explosion. Wipe up any fuel that spills into the engine compartment.
- Keep cigarettes and other sources of heat away from the vehicle while replacing the fuel filter. They are dangerous because they could cause the fuel to ignite.
- After replacing the fuel filter, confirm that no fuel is leaking out. Leaking fuel could cause a fire or explosion.
- Use only the fuel filter specified for your vehicle. Use of other filters could cause fuel to leak and cause a fire or explosion.


Always replace with a new, genuine fuel filter element. Do not use the filter element beyond the recommended replacement intervals. Failure to observe these may damage the fuel injection parts.

The fuel filter is mounted on the left-hand side of the vehicle.

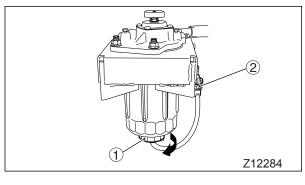

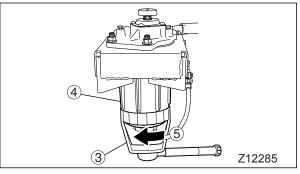

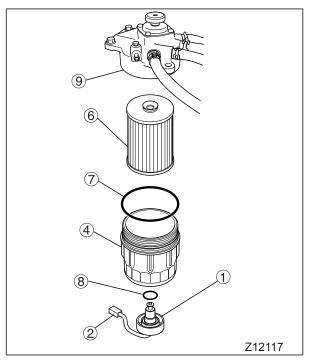

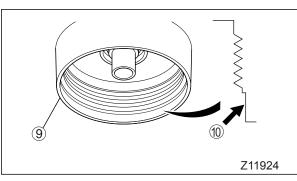

- 1. Apply the parking brake securely. Prevent the vehicle from moving by blocking the wheels with chocks.
- 2. Clean the fuel filter and the surrounding area to prevent dirt from entering the fuel system.
- 3. Place a can under the fuel filter to catch fuel.
- 4. Disconnect the connector 0 of the sensor 0.
- 5. Loosen the sensor in the arrow direction shown in the drawing and drain the fuel from the case. After draining, retighten the sensor.
- 6. Put the connector and its harness in the special tool ③ (separately sold).

When replacing the fuel filter, be sure to use the special tool to avoid damaging the filter. If you do not have the special tool, please contact an authorized dealer.


- 7. Remove the filter case ④ using the special tool, by turning it in the direction of the arrow ⑤.
- 8. Remove the element (6) and the sensor from the filter case.
- 9. Replace the O-ring ⑦ and O-ring ⑧ with new ones. Apply a thin coat of engine oil to each of the new O-rings and install the O-ring ⑦ on the filter case and the O-ring ⑧ on the sensor.



Use the O-rings that are supplied with the new replacement element.

- 10. Clean the surfaces ⁽¹⁾ of the filter head ⁽²⁾ and filter case ⁽⁴⁾ that will come in contact with the Oring ⁽⁷⁾.
- 11. Install the element with the hole of its end facing upward. Be sure to use a genuine replacement element.

- When installing the filter case, be careful not to let the O-ring twist and be damaged.
- Do not reuse the element.

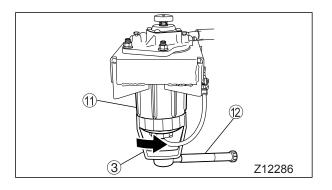

12. Install the filter case by turning it in the direction of the arrow (1). Tighten the filter case using the special tool and a torque wrench (1) to within the following torque range.

	30 ± 2 N·m (22 ± 1.5 ft.lbs., 3 ± 0.2 kgf·m)
--	-------------------------------------------------

WARNING <u>/</u>

- If the fuel filter is tightened to an inappropriate torque, fuel could leak and the filter itself could become damaged, possibly resulting in a fire and/or explosion.
- Be careful not to damage the filter case, as this could cause fuel leakage. When tightening the fuel filter case, be sure to use the special tool to avoid damaging the case.

13. Install the sensor to the filter case.

	5 ± 1 N·m (3.7 ± 0.7 ft.lbs., 0.5 ± 0.1 kgf·m)
--	---------------------------------------------------


14. Connect the connector to the sensor.

15. Bleed the fuel system. ⇒ □ P. 13-17

16. Start the engine to test for fuel leakage.


3 Air cleaner cleaning and replacement

Inspection intervals	At the time of preopera- tional check
Cleaning intervals	Every 10,000 km (6,000 miles) and whenever the dust indicator signals clogging
Replacement intervals	Every 50,000 km (30,000 miles)

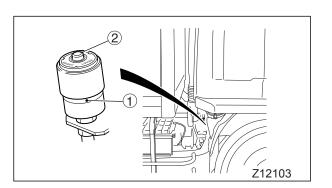


3.1 Dust indicator

The dust indicator signals when the air cleaner element needs to be cleaned. Check the dust indicator at the time of pre-operational check. When a red signal appears in window ①, the air cleaner element is clogged. Clean the element regardless of the scheduled cleaning intervals. After cleaning, press reset button ② to clear the red signal.

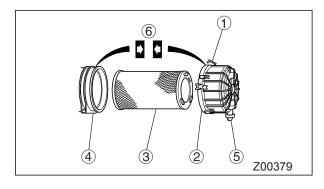



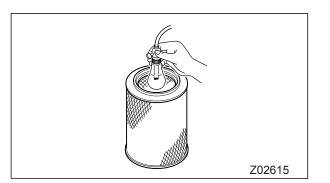

3.2 Remove and installation

- 1. Undo clamps ① and remove cover ②. Pull out straight outer element ③ to remove.
- 2. Install the element by reversing the order of removal. Fasten the clamps with makes (6) on the case and cover aligned.

Install the element correctly.

If the packing is broken or the clamps are loose, the engine will suck in dust and premature piston and cylinder liner wear could result.

3.3 Cleaning

WARNING /

When cleaning air cleaner element, wear goggles and a mask to protect your eyes and respiratory organs from dust. And, use a dust collector to prevent dust from dispersing into the surroundings.

1. From the inside of the element, blow compressed air evenly up and down along the pleats of the filer paper.

- Keep the air pressure under 700 kPa (1000 psi, 7 kgf/cm²).
- Do not strike the element or hit it against another object.
- If the element is contaminated with oily soot or dust, replace it regardless of the scheduled replacement time.
- 2. Place a light in the element and check the filer paper for damage or places where it has worn thin. Also check the packing for damage.
- 3. Clean the inside of cover ⁽²⁾ and case ⁽⁴⁾ with a rag.
- 4. Check that vacuator valve (5) is not plugged with dust. Clean it if necessary.

3.4 Replacement

Replace the element with new one every 50,000 km (30,000 miles).

4 Replacement of PCV (Positive Crankcase Ventilation) valve element

Replacement intervals	Every 10,000 km (6,000 miles)
-----------------------	----------------------------------

On a new vehicle, the valve element should be replaced for the first time at 4,000 km (2,500 miles).

WARNING

Do not try to replace the PCV valve element immediately after the engine has stopped as it is extremely hot and can cause burns. Allow the engine to cool down sufficiently before beginning replacement.


The valve element is not designed for washing and reuse.


- 1. Apply the parking brake firmly. Chock the wheels to prevent the vehicle from moving.
- 2. Tilt the cap. ⇔ □ P. 12-5
- 3. Wipe sand, dust and other impurities from the cap ① to prevent them from entering the system when the cap is removed.
- 4. Turn the cap in the direction of the arrow ② as illustrated and remove it.
- 5. Pull the valve element ③ straight up and remove it.
- 6. Replace the O-ring ④ on the cap with a new one. Lightly coat the new O-ring with engine oil before installing it onto the cap.


Be sure to use the O-ring supplied with the new valve element.

- 7. Install the new valve element. Always use a genuine part.
- 8. Install the cap, turning it by hand in the direction of the arrow (5). Continue to turn the cap until it slightly lifts up and comes to a stop.

Install the cap carefully so that the O-ring will not be twisted and damaged.

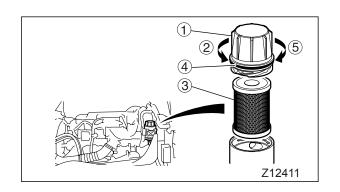

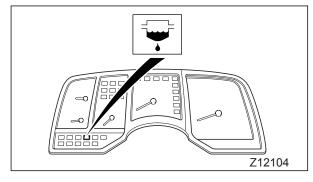

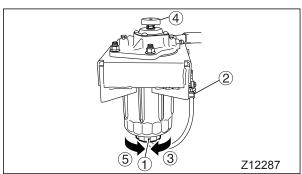

Draining water from fuel filter

If the rightarrow warning lamp lights up, there is water in the fuel filter in an amount exceeding the limit. Drain the water as follows:

WARNING <u>/</u>

- Fuel is highly flammable and should be kept away from hot objects and open flames owing to he risk of fire or explosion. Wipe up any spilt fuel.
- Keep cigarettes and other sources of heat away from the vehicle while draining water from the fuel filter. They are dangerous because they could set fire to the fuel.
- Be careful not to injure yourself on the edges of nearby components while draining water from the fuel filter.
- 1. Prepare a receiver for water.
- Disconnect the connector ② from the sensor ①, and turn the sensor in the direction of the arrow ③ to loosen it; the water will flow from the pipe at the end of the sensor.

Operating priming pump ④ helps quicken the draining.

3. When fuel begins to flow out, tighten the sensor in the direction of the arrow (5).

After tightening the sensor, connect the connector.

Tightening	5 ± 1 N·m (3.7 ± 0.7 ft.lbs.,
torque	0.5 ± 0.1 kgf·m)

- 4. Bleed the fuel system. ⇔ 💭 P. 13-17
- 5. Start the engine and check that fuel does not leak.

WARNING /!

• The drain contains not only water but also fuel.

Be sure to wipe clean the surfaces around the fuel filter to remove all splashed fuel. Fuel remaining on the surfaces could cause a fire.

• Make sure fuel does not leak from the filter or from related parts. Any fuel leakage could cause a fire.

Engine coolant – check and replacement

Inspection intervals	At the time of preopera- tional check	
Replacement intervals	Every 24 months	

If the coolant becomes very dirty, replace it immediately regardless of the specified replacement intervals.

1 Recommended coolant

Use a coolant containing the FUSO DIESEL LONGLIFE COOLANT additive and soft water in the specified proportions.


Having both corrosion preventive and anti-freezing properties, the additive protects the cooling system all year around.

Replace and top off the coolant only with water containing FUSO DIESEL LONGLIFE COOLANT or an equivalent.

2 Water used with coolant

Use soft water with the properties shown in the following table. Do no use hard water from wells and rivers as it is liable to form scales and cause corrosion.

Total hardness	300 ppm or less
Sulfate SO ₄ ⁻	100 ppm or less
Chloride Cl ⁻	100 ppm or less
Total dissolved solids	500 ppm or less
рН	6 to 8

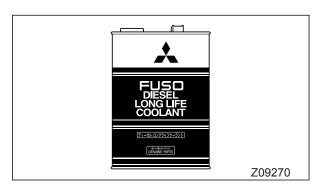

3 Coolant additives

To prevent the cooling system freezing up and minimize corrosion, use FUSO DIESEL LONGLIFE COOLANT or an equivalent. FUSO DIESEL LONGLIFE COOLANT is an ethylene-glycol-based antifreeze (SAE J814-C) with both anti-freeze and anti-corrosion properties. Dilute it with soft water to the specified concentration.

DANGER /!

- FUSO DIESEL LONGLIFE COOLANT IS TOXIC. IF A PERSON HAS ACCIDEN-TALLY SWALLOWED IT, FORCE HIM/HER TO VOMIT AND CONSULT A DOCTOR IMMEDIATELY. IF IT SPLASHES IN THE EYES, IMMEDIATELY FLUSH THE EYES WITH WATER FOR MORE THAN 15 MIN-UTES, AND SEEK MEDICAL ATTENTION.
- SHOULD FUSO DIESEL LONGLIFE COOL-ANT COME IN CONTACT WITH YOUR SKIN, IMMEDIATELY WIPE IT OFF, AND THEN THOROUGHLY WASH YOUR SKIN WITH LOTS OF CLEAN WATER AND SOAP.
 IF YOU FEEL UNWELL OR PAIN ON YOUR SKIN, IMMEDIATELY SEEK MEDICAL ATTENTION.
 - IN THE EVENT OF CONTACT WITH YOUR CLOTHES, IMMEDIATELY FLUSH FUSO LONGLIFE COOLANT WITH WATER AND SOAP.
- DO NOT USE FUSO DIESEL LONGLIFE COOLANT IN A CLOSED OR POORLY VENTILATED SPACE. SHOULD YOU INHALE A LARGE AMOUNT OF GAS OF FUSO DIESEL LONGLIFE COOLANT, MOVE TO A PLACE WITH FRESH AIR AND KEEP YOURSELF WARM AND AT REST. IF YOU FEEL NAUSEOUS OR OTHERWISE ABNORMAL, IMMEDIATELY SEEK MEDI-CAL ATTENTION.
- CLOSE THE CAP OF THE FUSO DIESEL LONGLIFE COOLANT CONTAINER IMME-DIATELY AFTER USING THE PRODUCT.
- DO NOT STORE FUSO DIESEL LONGLIFE COOLANT WHERE CHILDREN COULD REACH AND ACCIDENTALLY DRINK IT.
- FUSO DIESEL LONGLIFE COOLANT IS FLAMMABLE; AVOID EXPOSING IT TO OPEN FLAME.
- WHEN HANDLING **FUSO** DIESEL LONGLIFE COOLANT. WEAR AN ORGANIC GAS MASK. PROTECTION **OIL-RESISTANT** GOGGLES, GLOVES, AND/OR PROTECTIVE APRON AS NECES-SARY.

Do not use methanol-based or methoxypropanol-based antifreeze products since these can severely damage the engine. If a different additive has been used and the FUSO DIESEL LONGLIFE COOLANT is to be used, be sure to thoroughly flush the cooling system. Use the following table to determine the correct concentration of FUSO DIESEL LONGLIFE COOL-ANT according to the lowest temperature at which your vehicle is to be operated.

FUSO DIESEL LONGLIFE COOLANT concentration (in volume percentage)

Lowest temper- ature °C (°F)	-10 (14) or higher	–15 (5)	-20 (-4)	-25 (-13)	-30 (-22)	-35 (-31)	-40 (-40)
Con- centra- tion (%)	30	35	40	45	50	55	60

See the instructions on adding coolant. ⇔ □ P. 12-41

Coolant quantity:	Approx. 25 liters (26 qts)
-------------------	----------------------------

NOTE:

Vehicles are shipped with a 50% concentration of FUSO DIESEL LONGLIFE COOLANT and can therefore be used at temperatures down to $-30 \,^{\circ}$ C ($-22 \,^{\circ}$ F).

Use FUSO DIESEL LONGLIFE COOLANT at a concentration of between 30% and 60%. The proper concentration under normal temperatures is 30%. At a concentration below 30%, this additive performs poorly as an anticorrosive, while at a concentration exceeding 60%, it performs poorly as an antifreeze.

4 Check

NOTE:


- Always check the coolant level before starting the engine when the coolant temperature is low. If checked when hot, the coolant level will be high due to expansion.
- Deposition may occur in the reserve tank but this will not cause any problem.
- 1. Open the front panel. ⇔ □ P. 12-3
- The coolant level in reservoir tank ① should be between the "FULL" and "LOW" lines. If the level is below the "LOW" line, you must add coolant. See the next page for the method.
- 3. Check for coolant leaks from the radiator and radiator hoses.

If you find water on the ground from which your vehicle has been moved after parking, coolant is probably leaking.

If the coolant level is abnormally low and quickly drops again when coolant has been added, coolant may be leaking from the cooling system. Have the vehicle inspected by an authorized dealer.

4. Close the front panel.

⇔ 💭 P. 12-3

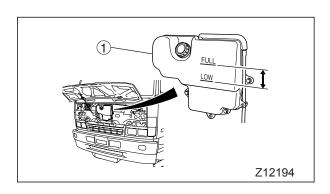

5 Adding coolant

Coolant should normally be added into the reservoir tank. Illumination of the <u>k</u> warning lamp indicates insufficient coolant or engine overheating. If the warning lamp indicates insufficient coolant, you must add coolant into the radiator as well.


- When adding coolant, use new coolant additive of the same brand and concentration as the additive that is already in the vehicle.
- Adding water only reduces the concentration of the FUSO LONGLIFE COOLANT, degrading both the additive's antifreezing and corrosion-preventive capacities. Any additional coolant should contain the FUSO LONGLIFE COOLANT at the same concentration as the original coolant.
- 5.1 Ordinary refilling (to reservoir tank)


Add coolant only through the reservoir tank. Do not open the radiator cap at the top of the radiator to add coolant.


- 1. If the coolant level in the reservoir tank ① is lower than the "LOW" line as a result of the above check, remove cap ② from reservoir tank and add coolant up to the "FULL" line.
- 2. Refit cap securely after adding coolant.
- 5.2 Refilling when <u>k</u> warning lamp illuminates (Adding coolant into radiator)
- Check the water temperature gauge. If the needle points in the red zone, the engine has overheated. Let the engine run slightly faster than the normal idling speed to cool down the engine. ⇔ □ P. 13-7 Stop the engine when the needle moves to near the center of the scale.

If the needle is elsewhere other than in the red zone, it indicates insufficient coolant.


- Stop the engine and proceed to the next step.
- 2. Tilt up the cab. ⇔ 💭 P. 12-5
- Check whether coolant is leaking from the radiator, radiator hose, and any other parts. Also check the fan belt for breakage and slackness.
 ⇔ □ P. 12-44
- 4. Open the radiator cap ② and add coolant into the radiator until coolant reaches the base of the filler port.

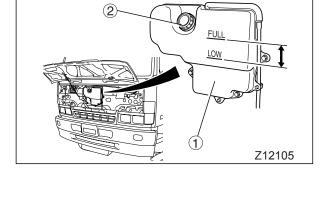


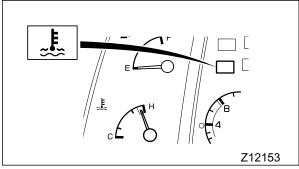

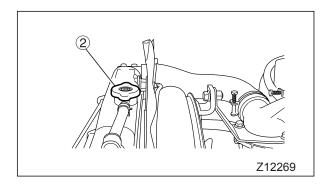

 $(\blacklozenge$

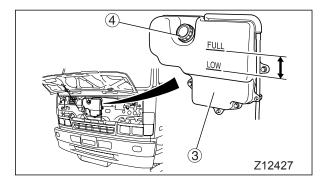

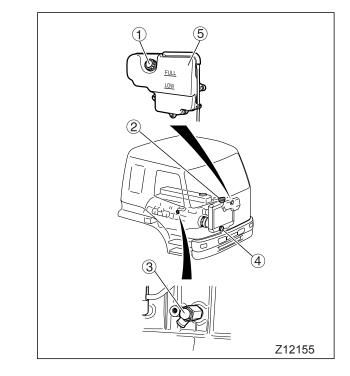

WARNING

Make sure that the engine has cooled thoroughly before removing the radiator cap. Put a cloth on the cap and hold the cap over the cloth to slowly open the cap. Doing otherwise is dangerous as you could be scalded by extremely hot coolant or steam.

- 5. Make sure that the coolant level does not drop and then refit the radiator cap firmly.
- 6. Lower the cab.
- Open the front panel. Remove the cap ④ from the reservoir tank ③ and add coolant up to the "FULL" line.
- 8. Refit the cap securely after adding coolant.

6 Replacement

Be sure to flush the cooling system when replacing the coolant.

WARNING /!

- Do not replace the coolant immediately after operating the vehicle since the engine, radiator, coolant, and other items will be extremely hot.
- The coolant you are replacing may be extremely hot. Be very careful not to burn yourself.
- Before removing the radiator cap, grip it in a cloth and loosen it slowly to release the pressure. Do not remove the radiator pressure cap when the coolant is hot since coolant may gush out and scald you.
- 1. Open the front panel and remove reservoir tank cap ①.
- 2. Tilt the cab and remove radiator cap 2.
- Open engine drain cock ③ and radiator drain cock ④ to drain the coolant. Also drain the coolant in reservoir tank ⑤.
- 4. After the coolant has been completely drained, close both engine and radiator drain cocks.

Engine drain cock tightening torque	7 N·m (5 ft.lbs., 0.7 kgf·m)
-------------------------------------	------------------------------

5. Flush the cooling system.

Pour soft water (preferably after heating moderately) through the radiator cap opening and start the engine.

Run the engine at a medium range RPM until the water temperature exceeds 85°C (185°F), and continue running the engine for about 10 minutes more from that point. Stop the engine and discharge the water. Remember that the water is very hot.

Repeat the above procedure until the water is free of dirt.

If the radiator tubing is blocked or coolant is more contaminated than usual, have your vehicle inspected at an authorized dealer.

- Pour coolant (soft water plus additives) into the radiator up to a level slightly lower than the filler opening. If coolant is poured to the top of the opening, it will overflow as it becomes warm and expands during engine operation.
- With radiator cap left removed, run the engine for a while in order to remove air from the cooling system.
- Stop the engine, and add more coolant if necessary.

If air is not completely removed from the cooling system, this may lead to reduced cooling efficiency and engine parts failure. After replacing the coolant, drive the vehicle and then check the coolant level in the radiator.

- 9. Screw the radiator cap down tightly.
- 10. Lower the cab.
- 11. Fill the reservoir tank with the coolant (additives plus soft water) to the "FULL" line, then replace the cap.
- 12. Briefly run the engine to make sure that there are no coolant leaks.
- 13. Make sure that the coolant level in the reservoir tank is between the "FULL" and "LOW" lines. Add coolant if necessary.
- 14. Close the front panel. Make sure that the panel is locked.
- 15. Clean the radiator core and intercooler. If the front of the radiator core or intercooler is plugged with mud or dust, cooling efficiency will be reduced and the parts will be rusted. Clean the radiator core at regular intervals.

⇒ 💭 P. 12-65

Belt – check and adjustment

An excessively loose or tight belt could cause an improperly charged battery, malfunction of the alternator or air compressor. Always keep belts adjusted to the proper tension.

intervale	At the time of pre-operational check and every 10,000 km (6,000 miles)
-----------	------------------------------------------------------------------------------

WARNING /!

Always stop the engine before inspecting or adjusting belts. Ensure that the engine cannot be started while you are performing checks or adjustments.


- Prevent the belt from any contact with oil or grease during check and adjustment. If soiled with oil or grease, the belts will slip and this will shorten their service life.
- If a belt needs to be replaced owing to damage, replace both belts at the same time.


1 Check


- Fully set the parking brake and block the wheels with chocks to prevent the vehicle from moving. Then tilt the cab.
 ⇒ □ P. 12-5
- Press the belt with an approximately 98 N (22 lbs., 10 kgf) force at the point midway between the pulleys, and measure the amount of deflection.
- 3. If the deflection is not as specified below, the tension of the belt must be adjusted.


Belt tension [Amount of deflection when the belt is pressed with a 98 N (22 lbs., 10 kgf) force at the point midway between the pulleys]			
1	Fan belt	10 to 15 mm (0.39 to 0.59 in.)	
2 Air conditioner compressor belt		7 to 10 mm (0.28 to 0.39 in.)	

4. Also, check the belts for damage.

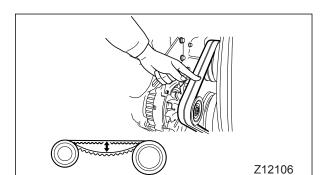

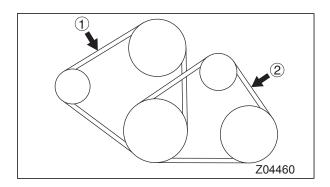

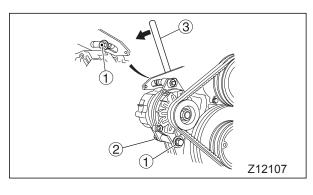

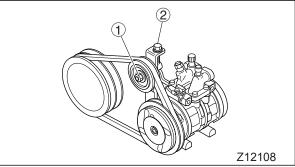

2 Adjustment

2.1 Fan belt

- 1. Loosen both the upper and lower alternator mounting bolts ① and nut ②.
- 2. Using an iron bar ③ or similar tool, pry the alternator outward to adjust the tension of the belt.
- 3. After the belt has been adjusted to the proper tension, tighten the mounting bolts and nut.

2.2 Air conditioner compressor belt

After slightly loosening pulley mounting nut ①, turn adjusting bolt ② to adjust tension. Turn it clockwise to increase tension. After performing the adjustment, fully tighten the pulley mounting nut.


Steering wheel – check

The steering wheel is a safety-critical part of the vehicle. If an inspection reveals any abnormality, contact an authorized dealer and have the abnormality rectified before you again drive the vehicle. Driving the vehicle with the abnormality unrectified could result in a serious accident.

intervale	At the time of pre-operational check and every 10,000 km (6,000 miles)
-----------	------------------------------------------------------------------------------

WARNING /!

Perform the checks in a safe place that provides good visibility all around. During the checks, be sufficiently attentive to surrounding traffic conditions.

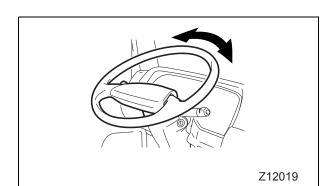

1 Steering wheel play

- 1. Place the steering wheel in its straight-ahead (neutral) position.
- 2. Turn the steering wheel clockwise and counterclockwise to the point where a resistance is first felt for each direction, and measure the amount of the steering wheel movement between these points (steering wheel play).

NOTE:

The above check must be performed with the engine running.

Steering wheel play	10 to 40 mm (0.39 to 1.57 in.)
---------------------	-----------------------------------

 If the amount of play is not within the range indicated above, have your vehicle inspected by an authorized dealer.

2 Steering wheel looseness

Move steering wheel up and down and also right and left to check for excessive looseness. If anything abnormal is found during the check, have your vehicle inspected by an authorized dealer.

3 Steering wheel operation

- While driving slowly [approx. 10 km/h (6 MPH)] in a safe place, make sure that the steering wheel is neither too heavy nor too light to turn. Also check for abnormal sound or irregular resistance during operation.
- If any abnormal condition is encountered during the above check, call an authorized dealer for inspection.

Service brakes – check


The service brakes are safety-critical parts of the vehicle. If an inspection reveals any abnormality, contact an authorized dealer and have the abnormality rectified before you again drive the vehicle. Driving the vehicle with the abnormality unrectified could result in a serious accident.

1 Checking sound of air discharged from the brake valve

Inspection intervals	Every 10,000 km (6,000 miles)
----------------------	----------------------------------

Fully depress brake pedal and then release it. The pedal should return all the way, and simultaneously the sound of discharged air should be heard from the brake valve.

If anything abnormal is detected during the above check, call an authorized dealer.

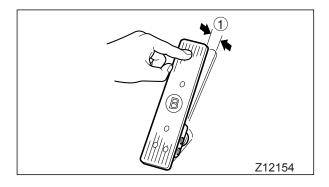

2 Brake pedal play

Inspection intervals	Every 10,000 km (6,000 miles)
Brake pedal play ①	10.0 to 15.5 mm (0.39 to 0.61 in.)

To check the pedal play, use your finger to press the brake pedal to the point where resistance is felt and measure the distance that the pedal has moved. If the pedal play is not as specified, have the brake system inspected by an authorized dealer.

Set the parking brake firmly and block wheels with chocks for added safety.


3 Braking performance


Inspection intervals	At the time of pre-operational check and every 10,000 km (6,000 miles)
-------------------------	------------------------------------------------------------------------------


WARNING

Perform brake tests in a safe place that allows for good visibility all around. During the tests, be attentive to surrounding traffic conditions.

Perform braking tests in a safe place. After checking that warning lamp BRAKE or BRAKE is not illuminated, drive the vehicle at a low speed to make sure that braking power is sufficient and even. If braking seems in any way abnormal, operating the vehicle could be dangerous. Ask an authorized dealer for a more thorough inspection.

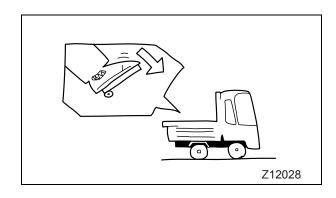

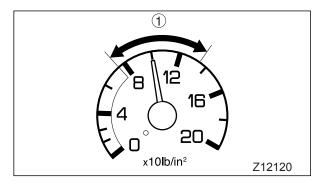

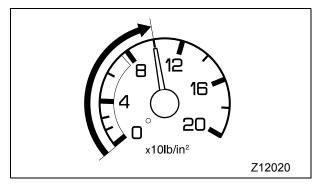

Air pressure – check

Inspection intervals	At the time of pre-operational check
----------------------	--------------------------------------


Use the air pressure gauge to check compressed air pressure. The gauge should indicate a pressure in range \bigcirc .

Also, make sure that the air pressure builds up at the proper rate. This can be checked as follows:

- 1. Set the parking brake and stop the engine.
- 2. Open the drain cock to release all compressed air from the air tank.
- Start the engine and run it at idling speed while timing how long it takes for the pressure to reach 100 lb./in². The time should be as indicated below.

Air pressure buildup time [until 100 lb./in² is reached Within 8 minutes from 0 lb./in²)]

Never operate the vehicle when the air pressure gauge needle is in the red zone. Doing so is dangerous as braking power is insufficient.

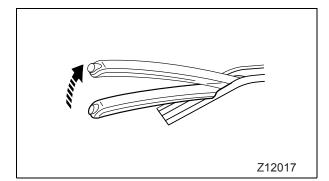

Parking brake – check


1 Parking brake lever stroke check

<Other than FM65F>

intervale	At the time of pre-operational check and every 10,000 km (6,000 miles)
-----------	------------------------------------------------------------------------------

- 1. Depress the brake pedal firmly so that the vehicle cannot move.
- Gently pull up parking brake lever from the fully returned position while counting the clicks until it cannot be moved any more with a 300 N (66 lbs., 30 kgf) force (click are generated by notches).
- 3. The lever stroke is normal if the number of clicks is from 7 to 10.
- 4. Make sure that the lever is locked securely in the pulled up position.

Parking brake lever stoke	7 to 10 notches
---------------------------	-----------------

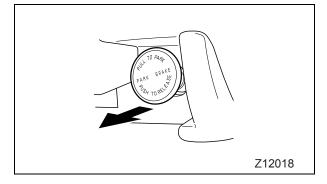

2 Parking brake operation

<FM65F>

intonyala	At the time of pre-operational check and every 10,000 km (6,000 miles)
-----------	------------------------------------------------------------------------------

Pull and place the parking control valve in the "PARKING" position and listen for the sound of air being released.

3 Parking brake effectiveness

Inspection intervals	Every 10,000 km (6,000 miles)
----------------------	----------------------------------

Stop the vehicle on a dry downgrade, set the parking brake and check to see if the parking brake can hold the vehicle. If an appropriate downgrade is not available, drive the vehicle at a low speed and activate the parking brake to make sure that it exhibits satisfactory braking action.

If parking brake performance is in any way abnormal, vehicle operation could be dangerous. Contact an authorized dealer.

WARNING /

Perform brake tests in a safe place that allows for good visibility all around. During the tests, be attentive to surrounding traffic conditions.

Clutch – check


<Manual transmission vehicles>

Inspection intervals	Every 10,000 km (6,000 miles)
----------------------	----------------------------------

Before performing the following inspections, make sure that warning lamp BRAKE is not illuminated.

1 Clutch pedal play

Clutch p	edal play
Other than 9-speed transmission vehicles	32 to 44 mm (1.26 to 1.73 in.)
9-speed transmission vehicles	35 to 47 mm (1.38 to 1.85 in.)

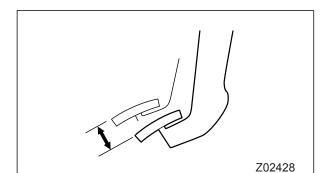


To check clutch pedal play, use your finger to press the clutch pedal to the point where resistance is felt and measure the distance over which the pedal has moved. If the degree of play is not as specified above, adjustment is necessary. Have the clutch inspected and, if necessary, adjusted by an authorized dealer.

NOTE:

Clutch pedal play increases as the clutch disc wear. Unless adjustments are made, the clutch will eventually start slipping and render the vehicle undriveable.

2 Clutch operation

Make sure that the clutch pedal operates without unusual noise or excessive resistance. Check also that depressing the clutch pedal allows you to move the gearshift lever easily to the various gear positions, and that the clutch engages smoothly without slipping when the clutch pedal is released slowly.

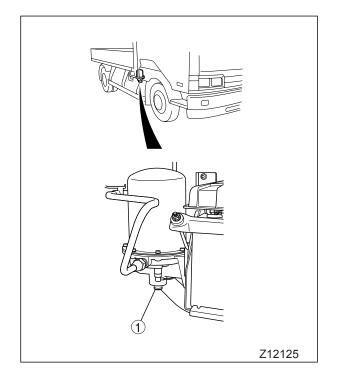

Inspection intervals	Every 10,000 km (6,000 miles)
Overhaul intervals	Every 60,000 km (36,000 miles)
Replacement intervals	Every 24 months


Air drier – check


The air drier contains a desiccant that removes moisture from compressed air.

As part of pre-operational checks, open the drain cock of the air tank. If a large amount of condensate drains out, the desiccant has become ineffective and must be replaced.

If the condensate coming out from the exhaust port 1 of the air drier contains an abnormal quantity of oil, have the vehicle inspected by an authorized dealer.

Replacing the desiccant involves some disassembly. This operation should be performed by an authorized dealer.

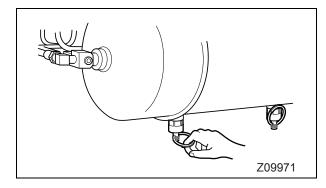


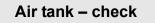


	At the time of pre-operational check
--	--------------------------------------

Pull ring on the drain cock to discharge any condensate from the air tank.


Under ordinary conditions, almost no condensate should be discharged; however, a small amount of water may be discharged if the air tank undergoes a temperature drop of more than $16^{\circ}C$ (28.8°F). (This can happen when you open the drain cock in the early morning after you have stopped and parked the vehicle during the day time on the preceding day.)

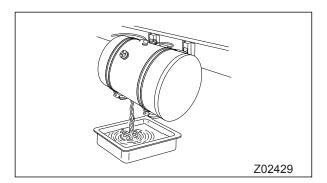

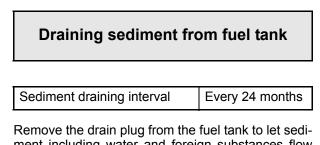


Remove the drain plug from the fuel tank to let sediment including water and foreign substances flow out of the tank.


Tires – check

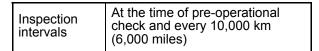

1 Checking inflation pressure

- Check the inflation pressure when the tires are cold before starting driving. Make sure that the tire air valve caps are securely fitted.
- You can roughly judge the air pressure from the form of the tire tread, but need to use an air gauge for precise measurement. An FK model vehicle uses low-profile tires whose air pressure must be checked using an air gauge.
- ① Properly inflated
- 2 Excessively inflated
- ③ Insufficiently inflated

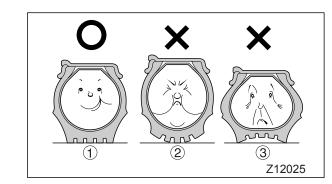

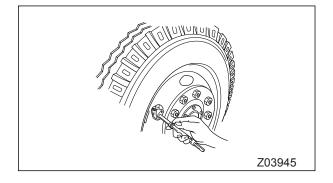

Standard tire inflation pressure

Tire size	Model	Pressure kPa (psi, kgf/cm ²)
225/70R 19.5	FK	Front: 660 (95, 6.75) Rear: 660 (95, 6.75)
11R22.5 – 14PR	FM	Front: 720 (105, 7.50) Rear: 720 (105, 7.50)

If the tires appear incorrectly inflated, make any air pressure adjustments necessary before driving.


WARNING <u>/</u>!

- Excessively high or low tire pressures not only give a poor ride but can also cause damage to the cargo or, more dangerously, to the tires themselves. Note that if the tire pressure is too low, the tires will overheat and could burst dangerously.
- It is not necessary to increase tire pressures for high-speed driving.
- The inner and outer tires on dual wheels should be inflated to the same pressure.
- Tires should be handled with care due to their high internal air pressure.
- There is a plate affixed to the driver's door indicating the standard inflation pressures.

- Your vehicle's tires will heat up during use, with a corresponding increase in air pressure. This is normal; do not release air from the tires when they are hot. Always check tire pressures before driving, when the tires are cold.
- Pay particularly close attention to the air pressure in new tires. New tires tend to stretch slightly as they settle, with a corresponding decrease in air pressure.
- Never fail to install tire valve caps after checking or adjusting the air pressure. Unless the valve caps are replaced, foreign bodies may interfere with the valves and cause air to leak out.

NOTE:

- The tire inflation pressures will be higher just after vehicle operation than before vehicle operation. The increases in pressure are not abnormal; they occur because the air in the tires expands as the tires get hot while the vehicle is moving. Do not release air from the tires at this time. The pressures will return to normal as the tires cool down.
- Tire pressure drops naturally as time passes. You should therefore check the tire pressure regularly at least once a month using an air gauge.

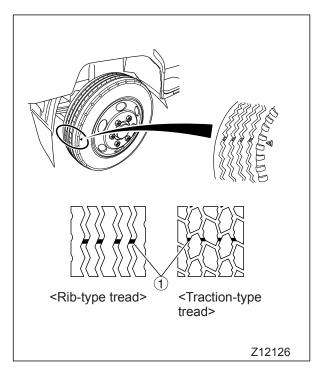

2 Checking tread depth

Check that the tread is sufficiently deep around its entire circumference.

Tire groove depth	Normal roads: 1.6 mm (2/32 in.)
depth	Freeways: 3.2 mm (4/32 in.)

Tire tread depth should be checked with a gauge. However, tread wear indicators on the tires also enable the tread depth to be checked.

When the tread wears down, wear indicator 1 (interrupted sections of the grooves) appear across the tire at the locations corresponding to the \bigtriangleup marks.

Replace the tire as soon as the wear indicator show up as continued use is dangerous.

WARNING

Tires with insufficient tread depth can skid on slippery road surfaces and can hydroplane when used on wet road surfaces at high speeds. Worn tires should be replaced as soon as possible.

NOTE:


Hydroplaning can occur when driving on a wet roads at high speeds. When a vehicle hydroplanes, tires ride up on and slide over a film of water, causing the driver to lose control of both steering and braking.


3 Checking for cracks, damage, and objects embedded in tread


Check both the tread and the sides of each tire for cracks, damage, and excessive or unusual wear. Check also for metal pieces, nails, and stones that might be embedded in the tread or caught between the tires of dual wheels.


WARNING <u>/</u>

Severely damaged or worn tires are susceptible to puncture during use and should be replaced as soon as possible.

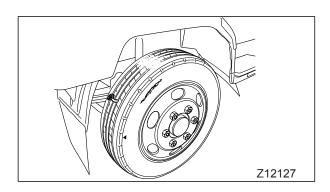

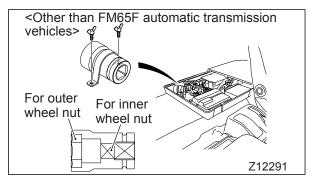

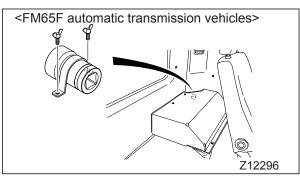

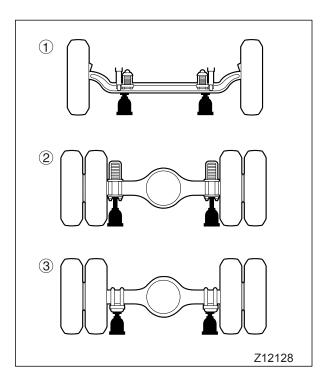

Tires – replacement

1 Preparation of tire replacement

- Park the vehicle on a flat, hard surface. Firmly set the parking brake. In a manual transmission vehicle, put the gearshift lever in the neutral position. In an automatic transmission vehicle, put the range selector lever in the "P" position <other than FM65F> or "N" position <FM65F>.
- If you get a flat tire while on the road and need to change it on the spot, pull up your vehicle in a safe place where it will not block traffic, and cause your hazard warning lamps to flash and use a red or white flag or cloth to give warning passing vehicles.
- 3. Have all passengers get out of the vehicle.
- 4. Block the tire with a chock diagonally opposite to the tire to be replaced.

Example:

Block the left front tire if the right rear tire is to be replaced.

5. Prepare a replacement tire.

NOTE:

- Your vehicle is not provided with a replacement tire as standard equipment.
- Specified tire types FK: 225/70R 19.5 FM: 11R 22.5 – 14PR
- 6. A socket wrench for removing and replacing wheel nuts is stored in the box under the bed.

2 Tire removal

 Set the jack below the jacking point nearest the tire to be removed. Jack up the vehicle until the tire is just about in contact with the ground.

Front wheel jacking point

① Below the front axle.

Rear wheel jacking point

- ② Rear leaf spring models: Below the rear axle housing
- ③ Rear air suspension models: Below the rear leaf springs

WARNING <u>/</u>

- Apply the jack only to designated jacking points. Applying the jack elsewhere could damage the vehicle and cause the jack to slip out of position.
- Never rock or climb below the vehicle when it is jacked up since movement of the jack could result in a serious injury or in damage to the vehicle. Never start the engine when the vehicle is jacked up.
- It is dangerous to leave the vehicle jacked up for long periods. If you need to raise the vehicle for an extended period, support it with bricks or wooden beams.

NOTE:

A socket wrench turning tool for use in jacking up the vehicle or loosening/tightening the wheel nuts is not included in the onboard tools.

2. Using socket wrench ① included in the onboard tool set, slightly loosen the wheel nuts. Do not remove the nuts.


On the right-hand side of the vehicle, turn the wheel nuts in the direction of arrow @. On the left-hand side of the vehicle, turn the wheel nuts in the direction of arrow ③.


Fit the socket wrench securely on the wheel nut. If fitted improperly, the wrench will slip off the nut, and could cause injury.


NOTE:

The wheel nuts on the right-hand wheel are marked with "R" and have right-hand threads. Those on the left-hand wheel are marked with "L" and have lefthand threads.

- 3. Jack up the vehicle until the tire is just clear of the ground.
- 4. Remove the wheel nuts and then the tire.
- 5. To remove the rear dual wheel tires, first loosen the outer wheel nuts ① and remove outer tire ②; then, lower the jack, loosen inner wheel nuts ③, and jack up the vehicle again to remove inner tire ④.

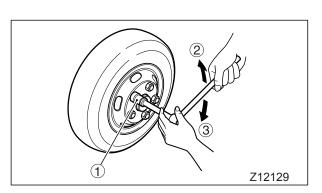

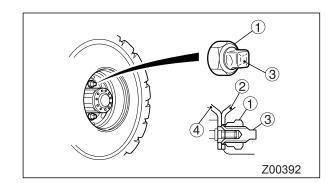


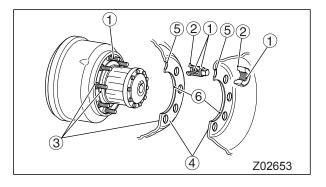


3 Mounting the tire

- 1. Clean the following sections before mounting the wheel. If they are dirty, the wheel nuts could become loose during driving.
- ① Threads on wheel bolts and nuts
- ② Spherical surface of wheel nuts
- ③ Disc wheel mounting surface
- ④ Disc wheel mating surface
- 5 Wheel nut contact surface on disc wheel
- ⑥ Disc wheel inside surface

If wheel bolt or nut threads are damaged or the disc wheel is cracked or otherwise damaged, replace the wheel with a new genuine part. A damaged wheel could work loose and cause a serious accident while the vehicle is in motion.

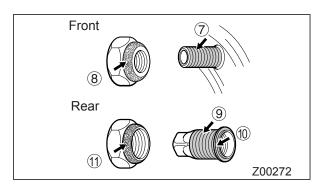

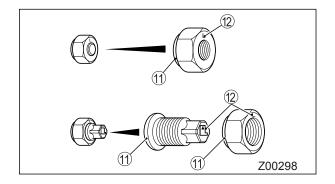

2. Apply a thin coat of chassis grease or wheel bearing grease to threads ⑦ on wheel bolts and nuts and to the spherical surfaces ⑧ of the nuts. On dual wheels, also apply grease to the external threads ⑨ of the inner wheel nuts, the spherical surfaces ⑩ of the inner wheel nuts, and the spherical surfaces ⑪ of the outer wheel nuts.

WARNING <u>/</u>

Never use a grease that contains molybdenum disulfide.


3. Mount the wheel so that the wheel bolts line up with the bolt holes in the disc wheel. Then, tighten the wheel nuts to hold the disc wheel in position. The spherical end (1) of the wheel nut should be directed toward the disc wheel.


When mounting the wheel, take care not to damage the threads of the wheel bolts and inner wheel nuts.

NOTE:

The wheel bolts and nuts on the right-hand wheels have right-hand threads, and those on the left-hand wheels have left-hand threads.

The bolts and nuts have stamped marks ⁽¹⁾ for easy identification; an "R" mark for right-hand wheels and an "L" mark for left-hand wheels.

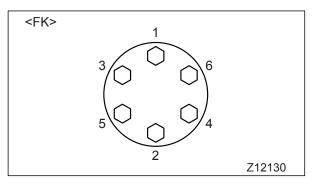

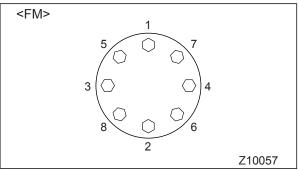

- 4. Lower the vehicle gently until the tire makes contact with the ground.
- 5. Tighten the wheel nuts in the order shown in the illustration, repeating the tightening cycle 2 to 3 times. Finally, tighten the nuts to the following torque.

Wheel nut tightening torque		
FK	370 to 410 N·m (275 to 304 ft.lbs., 38 to 42 kgf·m)	
FM	400 to 440 N·m (297 to 325 ft.lbs., 41 to 45 kgf·m)	

WARNING /!

Do not jump or jerk on the wrench handle when tightening the nut by using your own weight. Doing so can overtighten the nut. Overtightening the nuts could overstrain the bolts or deform the disc wheel's surface.

The wheel nuts must be tightened to the specified torque. Unless the nuts are tightened correctly, the wheel may work loose while the vehicle is in motion, resulting in a serious accident.

6. In the case of the rear dual wheels, first mount the inner wheel, then raise the vehicle again to mount the outer wheel in the same way.


NOTE:

When installing dual wheels, make sure that the air valve of the inner wheel is not lined up with the air valve of the outer wheel.

 If only the outer wheel of the dual wheels is replaced, retighten the inner wheel nuts to the specified torque before mounting the outer wheel.

WARNING <u>/</u>!

- As the vehicle is driven after a wheel has been replaced, the wheel nuts loosen up somewhat during the early stages of driving due to "wear-in". Therefore, it is necessary to retighten the wheel nuts to the specified torque after driving 50 to 100 km (30 to 60 miles). Thereafter, retighten the nuts at regular intervals.
- Do not paint disc wheel mounting surfaces ③, dual wheel mating surfaces ④, wheel nut seating surfaces ⑤, and wheel hub mounting surfaces as resulting thicker paint film could cause the wheel nuts to loosen up.

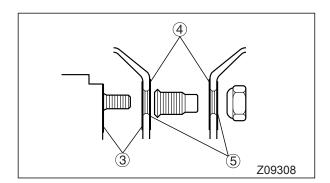

Wheel nuts - check and retightening

Inspection intervals	Every 10,000 km (6,000 miles)
-------------------------	-------------------------------

With a new vehicle, perform out the first inspection after 4,000 km (2,500 miles).

WARNING /!

After changing a tire, the wheel nuts will loosen somewhat during the initial stages of driving due to "wear-in". Therefore, retighten the wheel nuts to specification after you have driven 50 to 100 km (30 to 60 miles).

Using a torque wrench, check for loose wheel nuts and tighten as necessary.

Wheel nut tightening torque		
FK	370 to 410 N⋅m (275 to 304 ft.lbs., 38 to 42 kgf⋅m)	
FM	400 to 440 N·m (297 to 325 ft.lbs., 41 to 45 kgf·m)	

WARNING <u>/</u>


A loose wheel nut could cause broken wheel bolts or a cracked disc wheel, resulting in a tire coming loose or falling off. Since this could cause a serious accident and render the vehicle undriveable, be sure to check the wheel nuts regularly.

Retightening wheel nuts on rear dual wheels

- 1. Loosen outer wheel nuts ①.
- 2. Retighten inner wheel nuts 2 to specification.
- 3. Tighten outer wheel nuts to specification.

WARNING

In the case of dual wheels, one often retightens outer wheel nuts while forgetting to retighten inner wheel nuts. Always follow the above procedure to tighten all the nuts.

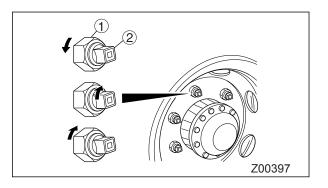

Tire rotation

The amount of wear on a tire depends on its position on the vehicle. To equalize wear and extend life as much as possible, rotate the tires at regular intervals.

Tire rotation intervals	Every 10,000 km (6,000 miles)
-------------------------	----------------------------------

Tire rotation pattern


- Plan the rotation pattern of tires so that their rotating directions are reversed.
- Use a tire of the same type on a single axle. If different type tires are mounted on an axle, the vehicle tends to pull to one side during braking, and could cause you to lose directional control of the vehicle.
- Be sure to use the following type of tires. FK: 225/70R 19.5 FM: 11R 22.5 – 14PR


- Be sure to use the specified type of tires. Mixing bias and radial tires results in poor steering and should be avoided at all costs.
- As the vehicle is driven after a wheel has been replaced, the wheel nuts loosen up somewhat during the early stages of driving due to "wear-in". Therefore, it is necessary to retighten the wheel nuts to the specified torque after driving 50 to 100 km (30 to 60 miles) Thereafter, retighten the nuts at regular intervals.


- Break in new tires by driving 200 km (125 miles) or longer at 60 km/h (37 MPH) or slower. After the break-in driving period, check the tire pressure of each of the new tires.
- If using different tread patterns on the front and rear wheels, select tires with a ribbed tread for the front wheels and tires with a traction-type tread for the rear wheels.


NOTE:


When tires are new, they tend to generate heat and wear more quickly.

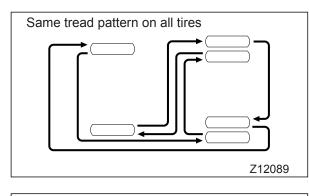

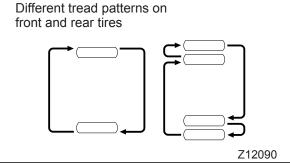

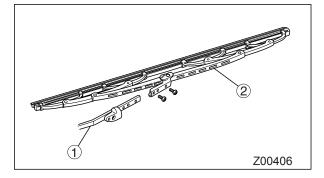

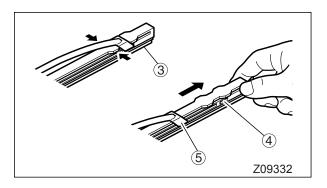

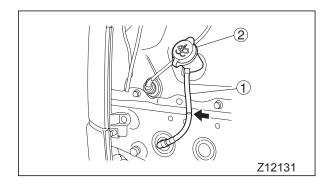

Wiper blade – replacement

1 Replacing wiper blade

Raise wiper arm ① and then loosen the two screws. Replace wiper blade ② with a new genuine wiper blade.

- Do not bring the wiper arms back into position or operate the wipers without wiper blades, as this could scratch the windshield.
- Never operate the wipers and washer with the wiper arms raised. The arms could be damaged.

2 Replacing blade rubber only

- Raise the wiper arm. Pinch both sides (indicated by arrows) of blade rubber ③ with your fingers and then pull the blade rubber so that claws ⑤ are unhooked from grooves ④ in the blade rubber.
- 2. Slide out the blade rubber.
- 3. Replace the old blade rubber with a new genuine wiper blade rubber.

To install, reverse the removal procedure. Make sure that the claws fit into the grooves in blade rubber.

Windshield washer – fluid level check and refilling

Inspection intervals
intorvale

1 Fluid level check

- 1. Open the front panel. $\Rightarrow \square P. 12-3$
- 2. Check the amount of remaining washer fluid using fluid level check hose ①.
- 3. If the fluid level has dropped to the lower part of the hose or is not visible at all, add washer fluid.

2 Refilling

- 1. Open tank cap ② and add fluid until the level nears the upper part of the hose.
- 2. Close the tank cap.
- 3. Close the front panel. ⇔ 💭 P. 12-3

Substituting soapy water for washer fluid could result in clogged washer nozzles or spots on painted surfaces.

NOTE:

When it is very cold, the ratio of windshield washer fluid to water should be increased in order to prevent the mixture from freezing up.

Washer fluid tank capacityApprox. 5.5 liters (5.8 qts)


Battery – check and cleaning


DANGER /!

- BATTERY POSTS, TERMINALS AND RELATED ACCESSORIES CONTAIN LEAD AND LEAD COMPOUNDS. WASH HANDS AFTER HANDLING.
- NEVER TOUCH THE BATTERY FLUID. BATTERY FLUID IS DILUTE SULFURIC ACID AND CAN HARM MOST THINGS IT TOUCHES, INCLUDING HUMAN SKIN AND CLOTHING. IF YOU GET IT ON YOUR SKIN OR CLOTHING, FLUSH IT OFF WITH SOAP AND WATER.
- IF YOU GET BATTERY FLUID IN YOUR EYES, QUICKLY FLUSH IT OUT WITH PLENTY OF WATER AND SEEK MEDICAL ATTENTION.

WARNING /!

- The battery generates flammable hydrogen gas and should be kept away from open flame and spark.
- When removing the battery, always disconnect the negative (-) terminal first and reconnect it last. A spark can occur if a tool touches the positive (+) terminal and frame with the negative (-) terminal connected.
- When handling the battery, wear safety goggles to protect your eyes.
- Perform all battery checks with the engine turned off.

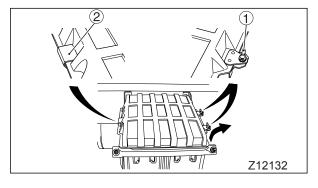

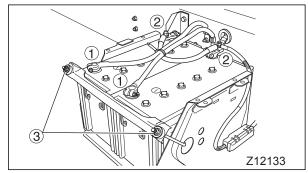

- Whenever fluid has been added, either charge the battery or run the vehicle for a while. It is especially important in cold weather as the battery can freeze up and be damaged.
- If you do not use the vehicle for an extended period, remove the battery.

Inspection intervals	Every 20,000 km (12,000 miles)
----------------------	-----------------------------------

- 1 Removal and installation of battery cover
- 1. Remove the wing bolts ① that hold the battery cover and then raise the cover slightly.
- Slide the cover toward the front of the vehicle until it disengages from the stopper ⁽²⁾ to remove the cover.
- 3. Follow the removal procedure in reverse to reinstall the battery cover. Make sure that the cover is held in position securely.

2 Removal/installation of battery

Follow the instructions below when removing and installing the battery for charging or replacing with a new one.

When disconnecting the battery cables, disconnect the (-) cable first. When connecting the battery cables, connect the (-) cable last. If you accidentally touched the (+) terminal and the vehicle body with a tool with the (-)cable connected to the battery, a dangerous short circuit could occur.

- 1. Remove the battery cover.
- Loosen the connector nut on the negative (–) terminal ① and disconnect the cable. In the same way, disconnect the cable from the positive (+) terminal ②.
- 3. Undo the battery holding screws ③ to remove the battery.
- When reinstalling the battery, carry out these steps in reverse, connecting the negative (–) cable last.

WARNING <u>/</u>

Be sure to observe the following instructions when storing a battery.

- Select a storage place where the battery fluid will not freeze.
- The storage place must be free of any heat source and well ventilated.
- The battery must be kept out of reach of children.
- The battery must be placed with the terminals facing upward. Do not place the battery on its side. Doing so could cause battery fluid leakage and a fire.

Install the battery securely in position. If it is left loose, shocks and vibrations from road surface could damage the battery case and electrode plates, shortening battery life.

3 Inspecting the battery

The battery's charge level is indicated by color of the indicator on the top surface.

The battery is correctly charged when the indicator is blue. If the indicator is white, the battery is not correctly charged and the battery fluid level should be checked as follows:


- If the battery fluid level is below the "LOWER LEVEL" line ①, remove the 6 vent plugs ② and add distilled water via the vent plug holes until the battery fluid level is between the "UPPER LEVEL" ③ and "LOWER LEVEL" ① lines. Replace the vent plugs and then charge the battery.
- If the battery fluid level is correct, or between the "UPPER LEVEL" and "LOWER LEVEL" lines, simply recharge the battery.

Replace the battery if the indicator does not turn blue after charging.

WARNING <u>/</u>

Do not use the battery with the fluid below the "LOWER LEVEL" line. The battery would deteriorate rapidly, and it could overheat or explode.

Do not add distilled water above the "UPPER LEVEL" line. Too much fluid will overflow from the battery and contact external parts.

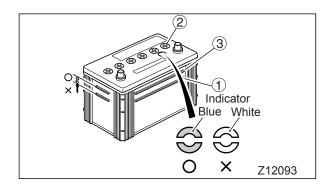

4 Cleaning the terminals

Clean the battery terminals if they become dirty or corroded.

Use warm water to remove any white powder caused by corrosion.

If a terminal is seriously corroded, remove the battery cable and clean the terminal with a wire brush or sandpaper.

After cleaning, apply a thin coat of grease to the terminals.

NOTE:

Follow the correct procedure when jump starting a vehicle with a dead battery by connecting it to a live battery using a booster cable. $\Rightarrow \square P. 13-16$

Air filters – cleaning

Remove and clean the air filters with water or compressed air to eliminate dust and dirt at regular intervals (6 months or so).

Clogged filters may cause inefficient heating or airconditioning, and even malfunction of the blower motor.


WARNING

When cleaning the air filters, wear a dust mask to avoid inhaling dust. Dust inhalation can have adverse health effects.

Clean the air filters at shorter intervals if your vehicle is used frequently in dusty areas.

1 Outside air filter


 Remove the air filter by bending its frame inward to disengage the lugs and pulling the filter downward.

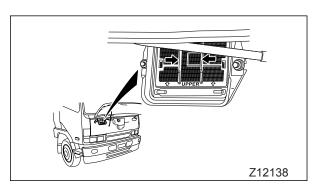

2. To install the air filter, fit the top end into position, then press lugs ① into the catches.


2 Inside air filter

Pull tabs 2 to slide out the air filter. To install, press the air filter all the way into position.

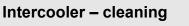

If the front of the intercooler is heavily clogged with dust or mud, the engine performance may be affected. Clean it from time to time by using a soft brush or something also appropriate.

The intercooler could be damaged if a bristle brush or an object with a sharp point is used for its cleaning.

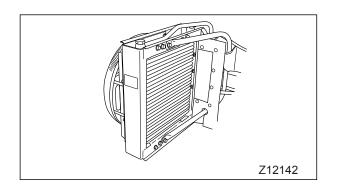


Transmission oil cooler – cleaning

<FM65F automatic transmission vehicles>


If a large amount of dirt or mud adheres to the front of the oil cooler, it will reduce the oil cooler's cooling performance and cause rust.

Form time to time, wash with water the front of the oil cooler and the cover that's attached to it.

The oil coolers are located on both sides of the vehicle.

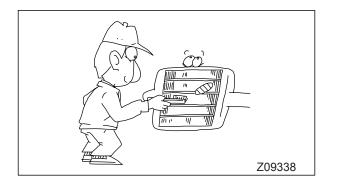

Z00640

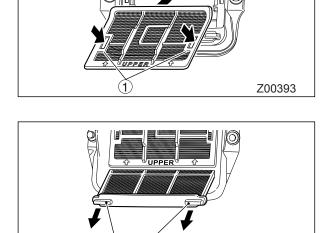

- Do not use a hard brush or sharp implement for cleaning. Doing so could result in damage to the oil cooler.
- Try not to splash water on the motor of the oil cooler's electric cooling fan.
- Do not use a high-pressure cleaning equipment. Damage to the oil cooler may result.

Cleaning your vehicle

WARNING /!


- Some cleaning fluids are poisonous or flammable. Carefully follow the safety precautions shown on the container.
- Use solvent-based cleaning materials only in a well ventilated area. Open the windows when using solvent-based cleaning materials in the cab.
- The following materials could injure you or damage the vehicle, and should not be used: Acetone, lacquer thinner, enamel thinner, nail enamel remover, and other volatile solvents; laundry soap, bleach, deoxidant, and other detergents; carbon tetrachloride, gasoline, benzene, naphtha, and other petrochemicals.

1 Exterior cleaning

- 1.1 Cleaning glass surfaces
- Keep the vehicle's windows and windshield clean at all times. Use glass cleaner and wipe it off with a sponge or soft cloth.
- When cleaning the windshield or other items on the front of the vehicle, hold the hand grips ① securely and stand on the front bumper steps ②.

The front bumper steps may be slippery when wet. Take great care when washing the vehicle and in rainy or snowy conditions.

Never apply rubbing compound to glass since it leaves scratches.

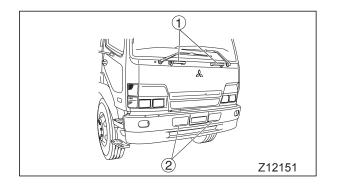

1.2 Washing the vehicle


Washing is necessary not only to keep your vehicle looking its best, but also to help minimize corrosion. Using a hose, wash the mud and dirt off the body surfaces. Wash not only the surfaces around the cab, but also the wheel housings and the underside of the chassis.


Especially, after you have driven in a coastal area or on salted road in the winter, your vehicle should be given a thorough washing.


WARNING /!


When washing the underside of the vehicle, be careful not to hurt yourself on the edges of panels and other parts.

- Wash the vehicle with luke-warm or cold water. Do not use very hot water.
- Avoid leaving the vehicle in direct sunlight.
- Avoid splashing water on the air intake port or the area where it connects to the engine. Especially when the vehicle is washed with the cab tilted, avoid allowing water to enter the engine through the air intake port.
- Do not use concentrated soap or synthetic detergents.
- Rinse the detergent off with water. Take care that none remains on the paintwork since it could discolor the paint.
- Cleaning plastic parts with thinner or gasoline could result in cracking or discoloration.
- Do not use a vehicle-cleaning brush to clean the plastic lenses of the turn-signal lamps and parking lamps. A brush could scratch the lenses. Wash the lenses with water, then wipe them with a soft cloth.
- In cold weather, the key holes and rubber parts of the door sometimes freeze, making it hard to open the door. After washing, remove moisture on and around the doors. Applying silicone with antifreeze capabilities is one solution to this problem.
- Do not clean the interior by splashing water on it as this could damage relays, the computer, and other electrical devices.

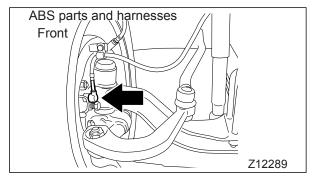

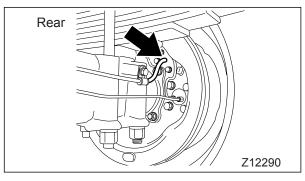

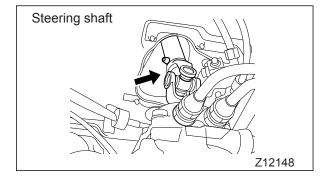

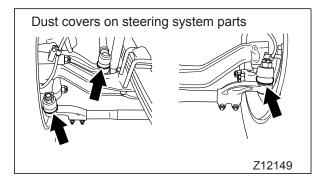

1.3 Precautions when using a high-pressure cleaner

When washing the inside of the engine compartment or underside of the vehicle, be careful not to direct water or steam from a high-pressure cleaner toward the following parts. Doing so could cause a malfunction and damage to components.

- Connectors on the alternator, starter, and other electrical components and connectors of electrical wiring to them
- ABS devices behind tires and electric wiring to them
- Steering shaft
- Dust covers on steering system parts
- Transmission oil cooler <FK65F automatic transmission vehicles>

1.4 Waxing

Wax the vehicle once or twice a month or whenever the wax on the vehicle ceases to repel water. Apply wax out of direct sunlight and only when the vehicle's paintwork is cooler than human body temperature.

1.5 Dirt caked on paintwork

The following contaminants can cause corrosion, discoloration, or staining of the vehicle if not washed off: calcium chloride and other salts; road chemicals, oil; tar; tree sap; bird droppings; and industrial soot.

If you cannot easily clean off these contaminants, use a synthetic cleaner that does not scratch or otherwise damage painted surfaces.

1.6 Small chips and scratches

Chips, cracks, and scratches caused by grit thrown up off the road should be fixed as soon as possible. If the body metal is visible, corrosion will quickly set in and require expensive treatment. Your dealer can supply touch-up paint for small chips and scratches.

2 Interior cleaning

- Dirt can leave marks or stains and should be cleaned off as soon as possible.
- Clean the interior of the vehicle with a sponge or soft cloth. Remove stubborn dirt with a soft brush.
- Use the appropriate cleaning technique for each interior item to avoid discoloration and stains.
- Do not water-wash the floor with the floor mat left in place as this could cause the floor to rust and could also damage the relays and computer.
- If you wish to wash the floor mat, remove it from the vehicle. After washing, allow the felt lining on the back to dry completely. The floor mat can be removed by removing the scuff plates ①.

WARNING <u>/!</u>

When refitting the floor mat after cleaning, make sure it does not interfere with the accelerator and brake pedals.


2.1 Cleaning interior trim

- Keep the vehicle's interior trim clean at all times.
- 1. Clean out all dust on the trim with a vacuum cleaner or soft brush.
- 2. Wipe vinyl trim areas carefully with cloth dampened with water.
- 3. Wipe dirt and marks off the trim with a commercially available cleaner.

2.2 General dirt

A multi-purpose powder-type cleaner is recommended for cleaning general dirt. Soapsuds are also usable.

- 1. Clean out all loose dust with a vacuum cleaner or soft brush.
- Dilute the cleaner in water to the specified concentration. The best results can usually be obtained with a thinner solution. When soapsuds are used, apply them with a sponge or soft cloth.

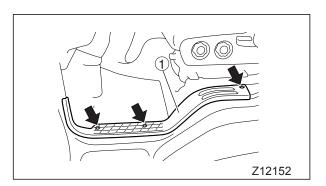

- 3. Wipe up any remaining cleaner with a towel or other absorbent cloth.
- 4. Finish cleaning by gently wiping the surface with a dry soft cloth to polish it.

2.3 Grease and oil

Use this method to remove contamination by grease, oil, butter, margarine, shoe polish, white coffee, chewing gum, beauty cream, vegetable oil, wax, crayon, tar, and asphalt.

- Wipe off the contamination, then apply a fabric cleaning solution.
- Shoe polish, wax, crayon, tar, and asphalt can stain the trim if not cleaned off quickly. Carefully use cleaner because it dissolve these contaminants and can cause a smudge.

2.4 Organic contaminants

Use this method to remove marks resulting from tomato ketchup, black coffee, egg, fruit, fruit juice, milk, cold drinks, wine, vomit, urine, and blood.

- 1. Wipe off the smudge, then wipe the area again with a damp sponge.
- 2. If the area is stained, apply a multi-purpose foam-type cleaner.
- If the smell of vomit or urine lingers, dissolve 5 ml (0.17 fl oz.) of baking soda in 250 ml (8.5 fl oz.) of luke-warm water and use the solution to clean the affected area.
- 4. If necessary, lightly wipe the area with a fabric cleaning solvent.

2.5 Other contaminants

Use this method to remove contamination by candy, ice cream, mayonnaise, and chili sauce.

- 1. Carefully clean off the contamination, then wash the area with water and dry it.
- 2. If any spot remains, clean with a fabric cleaning solvent.

2.6 Cleaning vinyl surfaces

- Vinyl can usually be cleaned with warm water and mild soap, e.g., saddle soap.
- Apply a little soapy water and leave it for several minutes. Then, rub the area hard with a cloth wet in water. Repeat this process until the area is completely clean.
- Tar, asphalt, and shoe polish can leave stains if not cleaned off quickly.
 With a clean cloth impregnated with vinyl cleaner, wipe the area clean.

2.7 Cleaning seat belts

- Keep your vehicle's seat belts clean and dry at all times. Clean them with mild soap and lukewarm water. Never use gasoline, thinner, or other flammable liquids since these will weaken the webbing.
- Do not bleach or re-dye the webbing since this would seriously weaken it.

13. Useful advice for emergencies

13-1

Possible failures, causes and remedies	13-2
Stopping your vehicle in an emergency	13-6
If the engine overheats	13-7
When a fuse has blown	13-8
When a lamp has burn out	13-10
When braking is sluggish	13-13
If parking brake cannot be released normally	13-14
If the engine stalls while the vehicle is in motion	13-15
If a tire goes flat while the vehicle is in motion	13-15
When the battery has run down	13-16
When the fuel has run out (Bleeding the fuel system)	13-17
Towing	13-18

 $\mathbf{\bullet}$

•

Possible failures, causes and remedies

Performing daily checks and good maintenance are keys to preventing mechanical failures and the resultant accidents. Be sure to check and service your vehicle regularly.

Should your vehicle suffer a mechanical failure or malfunction, the measures needed to correct the problem can be found using the following chart.

If you are unable to correct the problem yourself or the problem persists after you have attempted to repair it, contact an authorized dealer for technical assistance.

The engine does not start.

The starter does not turn over or turns over too slowly.

Possible cause	Remedy	Ref. page
The starter switch fuse or high-current fuse is blown.	Replace the blown fuse or high-current fuse with a new one of the specified amperage.	13-8
Battery has run down.	Charge or replace the battery.	12-61
Battery cable is disconnected, loose or corroded.	Remove corrosion and connect the cable correctly.	13-16
Connection to ground terminal is open.	Connect securely.	-
Engine oil viscosity is too high.	Replace the oil with an oil of proper viscosity.	12-19

The starter turns over normally.

Possible cause	Remedy	Ref. page
Fuel has run out.	Refuel and bleed the system.	13-17
Air is present in the fuel system.	Bleed the system.	13-17
The fuel filter is clogged.	Replace the filter element.	12-32
Fuel is frozen.	Heat the fuel pipe with hot water [60°C (140°F) or lower].	-
The air cleaner is clogged.	Clean or replace the element.	12-34
The engine preheating time is insufficient.	Follow the preheating instructions.	5-6
The engine preheating circuit fuse is blown.	Replace the fuse.	13-8
There is malfunction in any of the fuel injection system components.	Have the vehicle inspected by an authorized dealer.	_

The engine starts but stalls immediately.

Possible cause	Remedy	Ref. page
Idling speed setting is too low.	Have the vehicle inspected by an authorized dealer.	5-5
The fuel filter is clogged.	Replace the filter element.	12-32
The air cleaner is clogged.	Clean or replace the air cleaner element.	12-34

13-3

Engine stalls when the cold start switch is "ON".

Possible cause	Remedy	Ref. page
Carbon deposit on exhaust brake valve	Have the vehicle inspected by an authorized dealer.	-

The engine does not stop.

 \bigcirc

Possible cause	Remedy	Ref. page
The starter switch is faulty.	Have the vehicle inspected by an authorized dealer.	_
There is a fault in the fuel injection system.	Have the vehicle inspected by an authorized dealer.	_

Black smoke is emitted in exhaust.

Possible cause	Remedy	Ref. page
The air cleaner is clogged.	Clean or replace the air cleaner element.	12-34

The engine overheats.

Possible cause	Remedy	Ref. page
The front of the intercooler or radiator is plugged with dust and dirt.	Clean.	12-65
The coolant level is too low.	Add coolant.	12-38
The radiator cap is not closed completely.	Install the cap firmly.	-
The fan belt is loose.	Adjust the belt tension.	12-44
The coolant is contaminated.	Flush the cooling system and replace the coolant.	12-38

Engine oil pressure does not build up.

Possible cause	Remedy	Ref. page
Insufficient quantity of engine oil.	Add engine oil.	12-19
Engine oil viscosity is not adequate.	Replace the engine oil with one of a proper viscosity.	12-19

Fuel consumption is excessive.

Possible cause	Remedy	Ref. page
There is a fuel leak.	Check the fuel system and retighten connec- tions as necessary.	-
The air cleaner is clogged.	Clean or replace the air cleaner element.	12-34
Tire pressure is too low.	Adjust to the adequate inflation pressure.	12-51
The clutch is slipping. <manual transmission="" vehicles=""></manual>	Adjust the play.	12-49

 \bigcirc

Engine oil consumption is excessive.

Possible cause	Remedy	Ref. page
The wrong oil is being used.	Replace the engine oil with a proper one.	12-19
There is too much oil.	Adjust the quantity to the proper level.	12-19
There is an oil leak.	Check the oil circuit and retighten connec- tions as necessary.	-
Engine oil replacement intervals are too long.	Change the engine oil at prescribed intervals.	12-19
The oil filter is clogged.	Replace the filter element.	12-31

Drive power is insufficient.

Possible cause	Remedy	Ref. page
The parking brake is activated.	Release the parking brake completely.	5-22
The air cleaner is clogged.	Clean or replace the air cleaner element.	12-34
The fuel filter is clogged.	Replace the filter element.	12-32
The clutch is slipping. <manual transmission="" vehicles=""></manual>	Adjust play.	12-49
Air is present in the fuel system.	Bleed the fuel system.	13-17
The front of the intercooler or radiator is plugged with dust and dirt.	Clean.	12-65

The clutch disengages incompletely. < Manual transmission vehicles>

Possible cause	Remedy	Ref. page
Clutch fluid is insufficient.	Add clutch fluid.	12-28
Clutch pedal play is excessive.	Adjust.	12-49

Braking is sluggish.

Possible cause	Remedy	Ref. page
Air pressure is insufficient.	Increase the engine speed to boost air pres- sure.	12-48
Brake fluid is insufficient <other fm65f="" than="">.</other>	Add brake fluid.	12-28
There is an air leak.	Check the air circuit and retighten connec- tions as necessary.	-
Brake linings are excessively worn.	Have the vehicle inspected by an authorized dealer.	_

The vehicle pulls to one side during braking.

Possible cause	Remedy	Ref. page
Tires are not uniformly inflated.	Inflate tires properly.	12-51
Tires wear unevenly.	Change the tires.	12-51
Cargo is heavier on one side than the other.	Load cargo evenly.	7-14

Steering is difficult.

 \bigcirc

Possible cause	Remedy	Ref. page
Cargo is over-loaded on the front side.	Load cargo evenly.	7-14
Power steering fluid is insufficient.	Add power steering fluid.	12-30
Front tire pressure is insufficient.	Inflate tires to recommended pressures.	12-3

The steering wheel vibrates.

Possible cause	Remedy	Ref. page
Wheel nuts are loose.	Tighten the wheel nuts to specification.	12-58
Tires are not uniformly inflated.	Inflate tires properly.	12-51
Tires wear unevenly.	Replace tires.	12-54

The steering wheel does not return to the straight ahead position smoothly.


Possible cause	Remedy	Ref. page
Parts are insufficiently greased.	Grease parts.	12-15

The lamp does not light up.

Possible cause	Remedy	Ref. page
The bulb is burnt out.	Replace the bulb.	13-10
The fuse is blown.	Replace the fuse with one of the correct amperage.	13-8
There are open wiring and/or poor connection to ground.	Have the vehicle inspected by an authorized dealer.	_

The battery frequently runs down.

Possible cause	Remedy	Ref. page
The battery terminals are loose or corroded.	Scrape off corrosion and tighten down terminals.	12-61
The drive belt is loose.	Adjust the belt tension.	12-44
The battery is short of electrolyte.	Add battery electrolyte.	12-61
The life of the battery has expired.	Replace the battery.	12-61
Idling speed setting is too low.	Have the vehicle inspected by an authorized dealer.	5-5
Vehicle is used only at nighttime.	Charge the battery.	12-61
Switches are left on.	Be sure to turn off the switches.	_
The alternator is faulty.	Have the vehicle inspected by an authorized dealer.	-

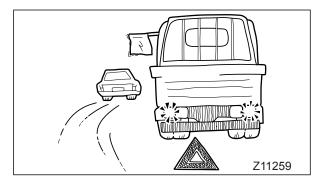

Stopping your vehicle in an emergency

Should a mechanical failure occur, do not panic. Simply slow your vehicle while paying attention to the vehicles behind you, and pull off the road at a place where you do not hinder the flow of traffic.

WARNING /

- Stopping your vehicle in a tunnel could be dangerous. Wherever possible, drive out of the tunnel before stopping the vehicle.
- Be sure to block the wheels with chocks after stopping the vehicle as mechanical failure may render the parking brake inoperative.

NOTE:

If the engine stops, it is not possible to move the vehicle using only the starter.

1 Marking your vehicle

After you have pulled off the road, alert other drivers as follows so that they do not run into your vehicle.

- Flash the hazard warning lamps.
- If your vehicle carries reflective triangles, erect them by the side of the road behind the vehicle.


2 Repair

Check the mechanical failure and if you judge it readily repairable, fix it while paying attention to the traffic. If you are unable to repair it, call an authorized dealer for help.

WARNING /!

Never attempt to perform repairs in a tunnel or on a freeway as doing so is very dangerous.

13-7

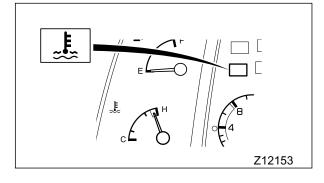

If the engine overheats

Your vehicle's engine is overheating if the \underline{k} warning lamp is illuminated and the needle of the water temperature gauge is in the red zone. If this happens, follow the steps indicated below. If the warning lamp is on but the water temperature gauge is not in the red zone, there is probably insufficient coolant. Check the coolant level and, if necessary, add coolant.

WARNING /!

Driving with an overheated engine can damage the engine or even cause a fire.

NOTE:

When the <u>k</u> warning lamp comes on, a buzzer sounds. The buzzer stops sounding when you stop the vehicle and apply the parking brake.

1. Pull off the road and stop the vehicle at a safe place, and use the idle adjusting volume or accelerator pedal to keep the engine running slightly faster than the normal idling speed so that the engine will cool down.

Be sure to stop the engine only after letting it run at a speed slightly above the idling RPM until the coolant cools down. Turning off the engine immediately after stopping will cause the coolant temperature to rise quickly and may cause the engine to seize up.

- 2. When the gauge's needle stays near the center of the scale, stop the engine and wait until the coolant temperature has dropped further.
- 3. Check the radiator piping for coolant leakage. If there is any leakage, contact an authorized dealer for assistance.
- Check the fan belt for breakage and slackness.
 ⇒ □ P. 12-44
- 5. Check the coolant level. If necessary, add coolant into both the radiator and reservoir tank.

⇔∏ P. 12-41

WARNING /!

Open the radiator cap only after the coolant temperature has dropped sufficiently. If the cap is opened while the engine is still hot, boiling coolant could gush out, burning you severely.

To open the radiator cap, hold it with a cloth and turn it slowly.





Quickly adding cold water when the engine has overheated could cause the engine block to crack. Add water little by little. $\Rightarrow \square P. 12-65$

 Check for dust and any other matter on the front surfaces of the radiator and intercooler. Remove them if present and clean the surfaces.

NOTE:

If the engine overheats frequently during normal driving, contact an authorized dealer for assistance.

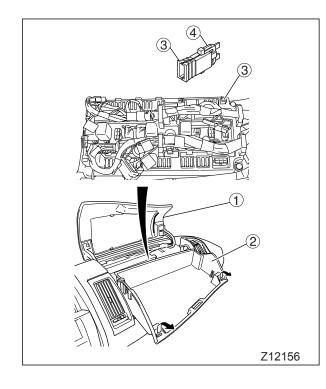

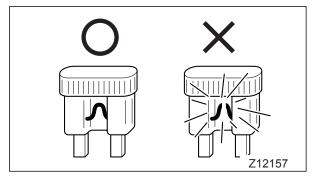



When a fuse has blown

- If a lamp fails to illuminate or electrical equipment does not function, a fuse may have blown. Check and replace fuses as necessary.
- Before checking or replacing fuses, turn the starter switch to the "LOCK" position and push all switches to the "OFF" position.

1 Replacing fuses in fuse box

- 1. The fuse box is under the glove compartment. To gain access to the fuse box, open glove compartment cover ① and then remove tray ② by raising it from the front.
- The circuit protected by each fuse and its amperage (A) are indicated on the reverse side of glove compartment cover.
- 3. If a fuse is blown, replace it with a new fuse of the specified amperage.
- 4. To remove a blown fuse, use fuse puller ③ located on the vehicle's door side of the fuse box. Pinch and pull fuse ④ with the puller.

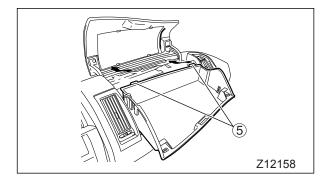

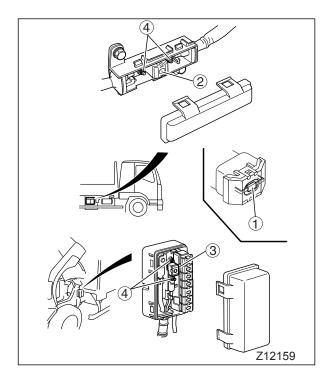

5. To reinstall the tray, fit the tabs (5) at its fore end into slots, and then push down its end.

WARNING /

Use genuine fuses of the specified amperages. A fire could result if a fuse of incorrect amperage is used.

- If the cause of a blown fuse cannot be determined or the same fuse blows frequently, have your vehicle inspected at an authorized dealer.
- Use care not to splash water on or around the glove compartment. Should water be splashed over the glove compartment, check the inside of the compartment for water.

2 Replacing high-current fuses


- There are high-current fuses (40 A, 50 A, 140 A) between the battery and fuse box, and between the battery and alternator. These protect circuits in the same way that ordinary fuses do. If a high-current fuse is blown, most of the vehicle's electrical circuits become inoperative.
- Check for a blown high-current fuse by looking into the inside through inspection window ①.
 If it is blown, immediately call an authorized dealer and have them check your vehicle.
- For high current fuses ② and ③, first remove their mounting nuts ④ and then remove the fuses.

For other fuses, simply pull them off.

WARNING A

Replacement high-current fuses should always be genuine ones and of appropriate amperage. Using a high-current fuse of incorrect amperage could cause a fire.

Close the cover completely to prevent rain water from entering the fuse box.

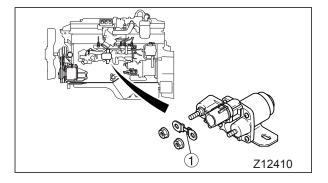

3 Replacing engine preheating circuit fuse

If the $\,\,\mathfrak{W}\,$ indicator lamp does not light up in cold weather, check whether glow relay fuse () is blown or not.

If the fuse is blown, first disconnect the negative cable from the battery and then replace the fuse with a genuine one (127 A).

WARNING

- Electricity is always present at one end of the glow relay. To be safe, always disconnect the negative cable from the battery before replacing the fuse.
- Use genuine fuses of the specified amperages. A fire could result if a fuse of incorrect amperage is used.

Use only a genuine fuse of the specified amperage.

When a lamp has burn out

Whenever replacing a lamp, be sure to place the starter switch in the "LOCK" position and all other switches in the "OFF" position.


Use a lamp of the specified voltage and wattage shown in the following table. If a wrong lamp is used, an excess of current flowing through the wiring could blow a fuse or cause the wiring to overheat and could possibly cause a fire.

Do not clean front turn signal lamps, side turn signal lamps and parking lamps with alcohol and thinner, because they are made of plastic lenses. When refilling clutch fluid, do not allow it to adhere to them because it causes color change and cracks. When the fluid adheres, immediately wipe it off or wash it with water.

NOTE:

Inside lenses in lamps such as headlamps temporarily fog during driving in the rain or vehicle wash. Just as in the case of window glass fogging in the rain, fogging is formed by difference of the temperature between inside and outside of the lamp. No functional problem develops and fogging will disappear by itself.


13-11

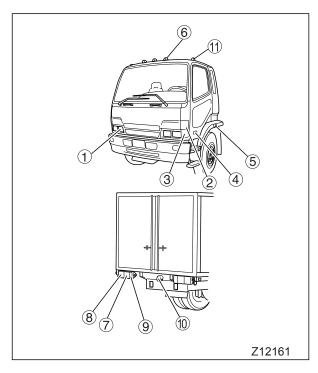



 $(\mathbf{\Phi})$


Ref. No.	Lamp		Bulb wattage	Q'ty
(1)	Headlamp (sealed beam)	Outer	12V-40/60W	2
U		Inner	12V-50W	2
2	Front turn signal lamp (front)		12V-21W	2
3	Parking lamp		12V-5W	2
4	Front side turn signal lamp <fk></fk>		- 12V-10W	2
5	Front side turn signal lamp <fm></fm>			
6	Identification lamp		12V-7.5W	3
7	Stop/tail lamp		12V-21/5W	2
8	Rear turn signal lamp		12V-21W	2
9	Backup lamp		12V-21W	2
10	License plate lamp		12V-7.5W	1
1)	Clearance and side marker lamp		12V-7.5W	2
-	Interior lamp		12V-10W	2
-	Spotlights		12V-8W	2

Blown bulbs should be replaced as soon as possible.

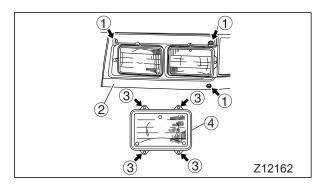

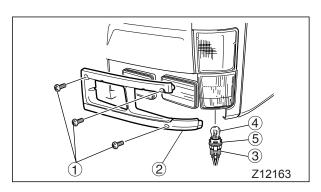

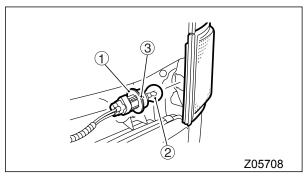

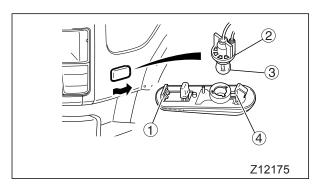

1 Replacing headlamp <sealed beam>

- 1. Remove screws ① (at 3 places).
- 2. Remove the decoration plate 2.
- 3. Remove screws 3 (at 4 places).
- 4. Remove lamp cover ④ and unplug the connector on the back side of the lamp.
- 5. Connect a new headlamp to the connector on the back side of the lamp.
- 6. Install the headlamp by reversing the order of removal.

- If you replace the headlamps yourself, have an authorized dealer perform aiming adjustments as soon as possible.
- Do not disturb the settings of the aiming adjustment screws. Doing so alters the directional focus of the headlamps and this could be hazardous to approaching motorists.

2 Replacing of parking lamp

- 1. Remove screws ① at 3 places and then remove decoration plate ②.
- 2. Remove socket ③ by turning it counterclock wise.
- 3. Push bulb ④ and turn counterclockwise to remove it.
- 4. Install the lamp by reversing the order of removal.
- 5. If the packing (5) is dirty, clean it.

3 Replacing front turn signal lamp

1. Open the front panel. $\Rightarrow \square P. 12-3$


- Copen the nonc panel.
 Remove socket ① by turning it counterclockwise.
- 3. Push bulb ② and turn counterclockwise to remove it.
- 4. Install the lamp by reversing the order of removal.
- 5. If the packing ③ is dirty, clean it.


4 Replacing front side turn signal lamp <FK>

- 1. Push the bottom of the lamp rearward to release the tab ①. Then remove the lamp unit.
- 2. Turn the socket ② counterclockwise and remove it.
- 3. Remove the bulb ③ by pressing it and turning it counterclockwise. Then, fit a new bulb.
- 4. Refit the lamp unit in the vehicle body by fitting the clip ④ first and then pressing lightly the tab into place.

After installation, make sure that the lamp unit is securely retained.

www.Manualslib.com manuals search engine

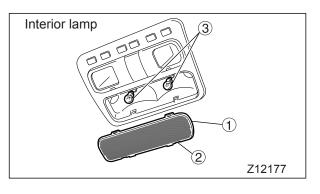

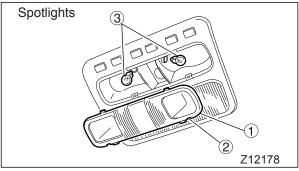

5 Interior lamp

- Insert a flat-blade screwdriver into slit ② in lens
 ① of the interior lamp and pry off the lens.
- 2. Turn bulb ③ counterclockwise while pressing it and remove it.
- 3. Insert a new bulb and fit the lens in position.

6 Replacing other lamps

- 1. Loosen the screw that secures the lens then remove the lens.
- 2. Turn the bulb counterclockwise while pressing it and remove it.
- 3. Insert a new bulb and turn it clockwise.
- 4. Fit the lens, ensuring that the packing is correctly positioned. If the packing is incorrectly installed or twisted, water can enter the lamp and shorten its life.

When braking is sluggish

Depress the brake pedal harder than usual, downshift to use engine braking and activate exhaust braking to stop the vehicle. Apply the parking brake when necessary. After the vehicle has been brought into a stop, check parts, then call an authorized dealer.

WARNING

- Activating the parking brake while driving could cause the vehicle to topple over.
- The brake system is of a dual circuit design, one circuit for the front wheels and the other for the rear wheels. Even if one circuit fails, you can stop the vehicle with the other intact circuit. However, under these circumstances, braking power is very much reduced. Never continue driving with one circuit inoperative, as it is very dangerous.

If parking brake cannot be released normally

<FM65F>


In the event of a fault in the brake lines, the resulting drop in air pressure may make it impossible to release the parking brake using the parking control valve. If this occurs, you can release the parking brake using the following method to prepare the vehicle for towing by a professional towing service.


WARNING <u>/</u>!

- Remember that the service brakes do not function. Be sure to chock all the wheels before releasing the parking brake to prevent any movement of the vehicle which could be dangerous.
- Avoid releasing the parking brake unless the vehicle is on level ground.


A vehicle with its parking brake released by this emergency procedure must be towed by only a tow vehicle specially designed for the purpose.

1. Remove the release bolt ①, nut ②, and washer ③ from the rear brake chamber.

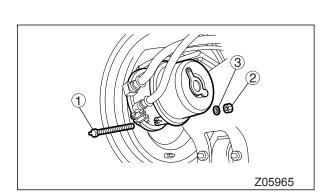

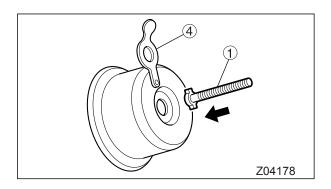

- 2. Remove the plastic cap ④ from the brake chamber.
- Insert the release bolt head-first into the hole in the brake chamber. Push the release bolt until it stops.
- 4. Give the release bolt 1/4 of a turn clockwise, then check that it cannot be pulled out.

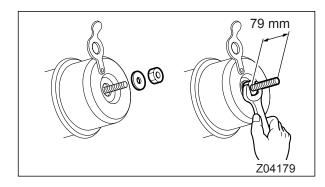

5. Fit the washer and nut onto the release bolt. Then, turn the nut down the bolt using a wrench with a face-to-face dimension of 19 mm (3/4 in.). The parking brake will be completely released when the nut's top surface is 79 mm (3.11 in.) from the bolt's free end.

To avoid damaging the brake chamber, do not turn the nut further than 79 mm (3.11 in.) from the bolt's free end.

If the engine stalls while the vehicle is in motion

The vehicle will be set into the following very dangerous condition. Pull the vehicle over when safe to do so and try to start the engine.

- The brake booster becomes inoperative because no compressed air is supplied, and braking power is significantly reduced.
- The power assistance then becomes unavailable, making steering extremely difficult. Additional force must be used when turning the steering wheel.


WARNING /!

The brakes completely cease to function as soon as the available compressed air is used up.

If a tire goes flat while the vehicle is in motion

Avoid sudden braking. Hold the steering wheel firmly, and gradually slow down before pulling over at a safe place.

To replace the tire, select a flat surface where your vehicle will not hinder traffic.

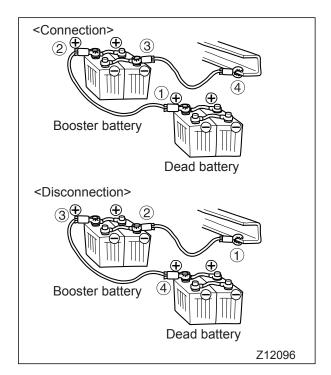

When the battery has run down

Perform the following procedure to start your engine by connecting your battery to the well charged battery of another vehicle with booster cables.

- Use booster cables able to handle large currents.
- Use a booster battery of the same voltage as your vehicle's battery.
 Your vehicle's electrical system operates on a 12 V power supply. Confirm that the vehicle giving the boost also has a battery or batteries connected for 12 V power supply.
- 1. Stop the engine of the vehicle giving the boost.
- Connect one end of the red booster cable to the positive (+) terminal ① of the dead battery. Connect the other end of the red booster cable to the positive (+) terminal ② of the booster battery.
- 3. Connect one end of the black booster cable to the negative (–) terminal ③ of the booster battery and connect the other end of the black booster cable to a section of frame ④ on the vehicle with the dead battery at a point as far away as possible from the battery.

WARNING <u>/</u>

- Check the battery's fluid level before connecting booster cables. If the fluid is below the "LOWER LEVEL" line, add battery fluid or distilled water. If the battery was charged with an excessively low fluid level, it would deteriorate rapidly and could overheat or explode.
- Be careful not to connect the booster cables in the wrong sequence. Sparks are often produced when you connect the booster cable to the vehicle's frame. Therefore, if the cable is connected to a section of the frame near the battery, the spark could set off the hydrogen given off by the battery to cause an explosion. Be sure to connect the cable end to a point as far away as possible from the battery. Also, keep cigarettes and open flames well away from the battery.
- Avoid getting the engine started by towing or pushing the vehicle unless absolutely necessary as doing so is quite dangerous. Note that it is not possible to push-start an automatic transmission vehicle.

- 4. After the above connections have been completed, start the engine of the vehicle with the booster battery and let it run at an RPM slightly higher than idling speed. Then, attempt to start the engine of the vehicle with the dead battery. If the engine starts with difficulty because of cold weather or a dead battery, let it draw a charge for several minutes from the vehicle from which you are receiving the boost before attempting to turn over the engine.
- 5. After the engine of the vehicle with the dead battery has been started, disconnect the booster cables by reversing the order of connection.

When the fuel has run out (Bleeding the fuel system)

When the vehicle runs out of fuel and the engine stalls, when the fuel filter element has been replaced, or when the water in the fuel filter has drained, air that has entered the fuel system prevents the engine from being started even after the engine is refueled.

In these cases, bleed the fuel system by performing the following steps.

WARNING <u>/!</u>

A fire could result if there is a fuel leak or if spilt fuel is not removed. Always wipe off spilt fuel after air bleeding. Also be sure to check for fuel leakage.

The fuel injection system may fail if the engine stops due to lack of fuel.

1. Loosen one of the air bleeder plugs ${\rm \textcircled{0}}$ of the fuel filter.

NOTE:


Use whichever of the two air bleeder plugs is the most convenient; both plugs provide the same effect.

2. Cover the pipe portion of the loosened air bleeder plug with a cloth and operate the priming pump ⁽²⁾ to pump out fuel.

NOTE:

Alternatively, connect a hose with an inside diameter of 8 mm (0.31 in.) to the pipe portion of the air bleeder plug in order to prevent fuel from splashing. Use a transparent hose so you can easily check for air bubbles in the fuel.

3. Fuel containing air bubbles will flow out of the pipe portion. Continue pumping until fuel no longer contains air bubbles.

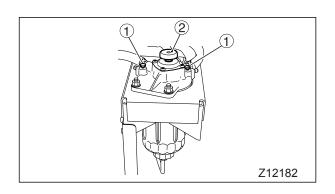

wownloaded from www.Manualslib.com manuals search engine

4. After making sure that there are no air bubbles in the fuel emerging from the air bleeder plug, fasten the plug tightly. Operate the priming pump again until you feel a large resistance (approx. 60 to 80 times).

Bleeder plug tightening torque	10 ± 2.0 N·m (7.2 ± 1.4 ft.lbs., 1 ± 0.2 kgf·m)
--------------------------------	----------------------------------------------------

- 5. Wipe thoroughly the spilled fuel and then start the engine.
- 6. Check for any fuel leakage.

Towing


If you are forced to tow the vehicle, take the following precautions:

 Disconnect either the propeller shaft or the rear axle shaft, whichever is easier. If you disconnect the rear axle shaft, cover the opening to prevent oil and grease from escaping.

Before towing an automatic transmission vehicle, disconnect the propeller shaft or rear axle shaft. Alternatively, tow the vehicle with its rear wheels off the ground. Towing the vehicle without taking these precautions would damage the automatic transmission.

- Before raising the front wheels for towing, remove the bumper and air scoop to prevent them from damaging.
- Attach the towing chain securely to the front axle.

- Do not attach the chain to the bumper since the bumper would be damaged upon raising the front wheels or towing.
- Before raising the front wheels or towing, confirm that the chain will not damage any parts of the vehicle. Remove the parts that may be damaged.
- Tow the vehicle only with a specially designed towing truck.
- If you disconnect the rear axle shaft to tow the vehicle, the axle housing gear oil may be depleted. Check the axle housing gear oil and add more if necessary.
 ⇒ □ P. 12-26

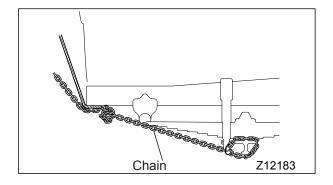

14. Service data

Recommended lubricants/hydraulic fluids and quantities	14-2
Service data	14-4

 $\mathbf{\bullet}$

•

14-2 Service data

•

Recommended lubricants/hydraulic fluids and quantities

1 Quantities of lubricants/hydraulic fluids

Units: liters (qts)

	Item			Quantity		
Engino	Oil pan		Apr	Approx. 11 (11.6)		
Engine	Oil filter		Арг	prox. 2.3 (2.4)		
	Other than FM65F	6-speed	Approx. 6.7 (7.1)	Add approx. 0.5 (0.5)		
Manual transmission	FM65F	6-speed	Approx. 8.1 (8.6)	if vehicle has PTO		
		9-speed	Approx. 8.5 (9.0)	-		
	Other than FM65F	LCT1000	Арг	prox. 7.0 (7.5)		
Automatic transmission		LCT2400	Аррг	ox. 10.0 (10.6)		
	FM65F	MD3060	Аррг	Approx. 18.0 (19.0)		
	Other than FM65F		App	Approx. 6.5 (6.9)		
Rear axle housing	FM65F		Appr	Approx. 10.0 (10.6)		
Power steering	- L		App	prox. 3.0 (3.2)		
Brake/clutch fluid			/	As required		

NOTE:

For more details including oil viscosity, see the "Recommended lubricants/hydraulic fluids" table.

The indicated oil and fluid quantities should be used only as a guide at the time of replacement. To ensure correct oil and fluid levels, use the oil level gauge, inspection plug holes, and level lines as appropriate.

•

2 Recommended lubricants/hydraulic fluids

Be sure to use the specified lubricants.

 $\mathbf{\bullet}$

۲

Parts	Cotogony	Classification	Viscosi	ty
Parts	Category	Classification	Atmospheric temperature	SAE viscosity number
			Below 0°C (32°F)	10W-30
		API CD, CD/SF,	Above –15°C (5°F)	15W-40
Engine	Manual transmission <6-speed> Manual transmission <9-speed> Gear oil Gear oil Gear oil Engine oil Engine oil Automatic	CE, CE/SF, CF-4 or JASO DH-1	–15 to 15°C (5 to 59°F)	20W-20
		JASO DH-1	–5 to 40°C (23 to 104°F)	30
			Above 30°C (86°F)	40
		API GL-3	General	80
	Gear oil	AIT GE-0	Warm region	90
		API GL-4	Tropical region	90
·	Engine oil	API CC or CC/SF	Long period of high-speed driving	30 or 40
	Gear oil	API GL-4	-	90
	Engine oil	API CD	_	30, 40 or 50
Automatic transmission	Automatic transmission fluid	DEXRON III	-	-
			Below 40°C (104°F)	90
Rear axel	Rear axel Gear oil		Above 40°C (104°F) Use oil conforming to GL-5, SAE140 or SAE85W-140 if the vehicle is to be driven under heavy load conditions as for example driving up long uphill grades. Remember, however, that this oil is be used only when the temperature is above 10°C (50°F)	140 or 85W-140
Power steering	Automatic transmission fluid	DEXRON, DEXRON II or DEXRON III type	-	-
Brake, Clutch	Brake fluid	SAE J1703, FMVSS No. 116 (Grade DOT3)	-	-
Chassis grease fittings		NLGI No. 1 (Li soap) Consis- tency 310 to 340		
Cab rear mount cushion	Chassis grease	(at 25°C or 77°F) Dropping point	_	-
Door hinge		130°Ċ (266°F) or higher		
Kingpin, steering shaft, wheel hub bearing, propeller shaft, clutch fork shaft, clutch shifter	Wheel bearing grease (Multipur- pose type grease)	NLGI No. 2 (Li soap) Consis- tency 265 to 295 (at 25°C or 77°F) Dropping point 185°C (365°F) or higher	_	_

 \mathbf{O}

 $\mathbf{\bullet}$

0

Service data

•

Desc	Standard value				
Engine idling speed		575 to 625 rpm			
Belt tension [amount of deflection	Fan belt		10 to 15 mm (0.39 to 0.59 in.)		
under a 98 N (22 lbs., 10 kgf) pressure at the point midway between pulleys]	Air conditioner com	pressor belt	7 to 10 mm (0.28 to 0.39 in.)		
Coolant quantity			Approx. 25 liters (26 qts)		
Clutch pedal play <manual transmission="" vehicles=""></manual>	Other than 9-speed vehicles	d transmission	32 to 44 mm (1.26 to 1.73 in.)		
	9-speed transmissi	ion vehicles	35 to 47 mm (1.38 to 1.85 in.)		
Brake pedal play			10.0 to 15.5 mm (0.39 to 0.61 in.)		
Air pressure buildup time [from 0 to	o 100 lb./in ² with the	engine idling]	Within 8 minutes		
Parking brake lever stroke <other t<br="">295 N (66 lbs., 30 kgf) force]</other>	Parking brake lever stroke <other fm65f="" than=""> [when pulled with a 295 N (66 lbs., 30 kgf) force]</other>				
Wheel nut tightening torque	FK		370 to 410 N·m (275 to 304 ft.lbs., 38 to 42 kgf·m)		
wheel hut lightening torque	FM		400 to 440 N·m (297 to 325 ft.lbs., 41 to 45 kgf·m)		
Tire tread greave depth	Normal roads		(1.6 mm 2/32 in.) minimum		
Tire tread groove depth	Freeways		(3.2 mm 4/32 in.) minimum		
Steering wheel play			10 to 40 mm (0.39 to 1.57 in.)		
	225/70R 19.5	Front	660 kPa (95 psi, 6.75 kgf/cm ²)		
Standard fire inflation processes	<fk></fk>	Rear	660 kPa (95 psi, 6.75 kgf/cm ²)		
Standard tire inflation pressure	11R 22.5 – 14 PR	Front	720 kPa (105 psi, 7.50 kgf/cm ²)		
	<fm></fm>	Rear	720 kPa (105 psi, 7.50 kgf/cm ²)		

•

15. Maintenance schedule

Maintenance schedule	 15-2
Lubrication schedule .	 15-8

 $\mathbf{\bullet}$

Regular maintenance is vital to maximizing your vehicle's performance, service life, and safety. Following the maintenance schedule will give optimum results. The preceding sections describe simple maintenance checks and procedures that can be carried out by the owner. If you have difficulty or your vehicle needs maintenance work that is not shown in this manual, please take the vehicle to an authorized dealer.

1 Maintenance schedule

For the replacement intervals of lubricants and fluids, see the section entitled "Lubrication schedule".

- *1: 30,000 km/18,000 miles or 6 months, whichever occurs first
 *2: 60,000 km/36,000 miles or 12 months, whichever occurs first
 *3: FK61F, FM61F, FM64F
 *4: FM65F
 *5: FM64F
 (E): Exhaust emission items
 (N): Noise control items

 \bigcirc

- N: Noise control items

	Т	ime of ma	inspec intena	tion ar	nd		
Item	sks	4,000 km/		spection interva			
	Pre-operational checks	New vehicle at 4,000 2,500 miles	Every 10,000 km/ 6,000 miles	Every 30,000 km/ 18,000 miles *1	Every 60,000 km/ 36,000 miles *2	Working procedures	Ref. page
ENGINE							
Air, fuel, oil or coolant leaks from engine	×		×			Check engine for air, fuel, oil and coolant leaks.	-
© ® Engine starting perfor- mance, speed, noise and exhaust gas conditions			×			Check for engine starting performance, idling speed, abnormal engine noise, black smoke or other abnormal exhaust gas during idling and acceleration. Check engine speed on tachometer.	-
Retightening, inlet and exhaust manifold bolts					×	Retighten. Checking of the tightening torque is unnecessary.	-
© Valve clearance		×			×	Check valve clearance with thickness gauge.	-
Oil filter replacement			12, On n also 1 10	Every 20,000 km/ 12,000 miles On new vehicle, also replace at the first 10,000 km/ 6,000 miles.		Replace element.	12-31
E Fuel filter replacement				×		Replace element.	12-32
(E) Draining water and sediment in fuel tank			Every	y 24 m	onths	Remove fuel tank drain plug and remove water and sediment.	12-51
Retightening the fuel tank bracket bolts			×			Check the bolts for looseness and retighten to a torque of 69 to 93 Nm (51 to 68 lb.ft, 7.0 to 9.5 kgm).	-
(E) Check fuel line outside the engine compartment			Every	y 24 m	onths	Check fuel line outside the engine compartment. Replace if necessary.	-
(\mathbb{E}) Belt tension and damage	×		×			Press midpoint of belt firmly with finger to measure deflection and check for belt damage.	12-44
Coolant level and leaks from cooling system	×					Check coolant level and if level is low, check for coolant leaks.	12-38

((

	Т		inspec intena		nd		
	cks	4,000 km/		Inspection interval			
Item	Pre-operational checks	New vehicle at 4,00 2,500 miles	Every 10,000 km/ 6,000 miles	Every 30,000 km/ 18,000 miles *1	Every 60,000 km/ 36,000 miles *2	Working procedures	Ref. page
Coolant replacement			Ever	y 24 m	onths	Replace with new coolant.	12-38
Radiator cap condition			×			Check radiator cap for sealing and mounting condition.	-
© Cooling system hose clamp position and clamping condition.			×			Check clamp position and clamping con- dition of cooling system hose.	_
© Turbocharger rotor play				Every 0,000 I 0,000 m	km/	Check rotor for excessive end play by using a dial indicator.	_
(E) N Cleaning the air cleaner element	×		×			Clean the air cleaner element. The element must be cleaned when the red dust indicator signal appears, irre- spective of the cleaning interval.	12-34
© N Air cleaner element replacement				Every),000 k 000 m	m/	Replace element.	12-34
(E) Damage of air intake sys- tem, looseness of clamp and loss of parts			×			Check air intake system for damage and inspect all parts for installation.	-
©® Exhaust system			×			Check the exhaust system for damage, corrosion and loose connection causing leakage.	-
© PCV (Positive Crankcase Ventilation) valve element replacement		×	×			Replace element.	12-36
Starter function					×	Operate starter switch and check the switch for proper function.	_
Alternator function					×	Check for function with a circuit tester.	-
POWER TRAIN	1	1	1	1	1		
Air or oil leaks from power train			×			Check power train for air and oil leaks.	-
Clutch pedal play			×			Press clutch pedal lightly and check that its play is adequate.	12-49
Clutch function			×			 Press the clutch pedal to check for unusual noise or stiffness. Also check if gear engages quietly. Check that clutch does not slip and engages smoothly. 	12-49
Manual transmission gearshift control looseness				×		In NEUTRAL position, check gearshift lever for looseness. With gearshift lever in each gear position, check all gears engage smoothly without excessive looseness. Also check that control cable is not damaged.	_
Automatic transmission range selector linkage condition *3				×		Shifting to each position must be correct and secure.	-

•

 $\mathbf{\bullet}$

 $\mathbf{\bullet}$

•

	Т	ime of ma	inspec intena		nd		
	cks	4,000 km/		Inspection interval			
Item	atal	New vehicle at 4,000 2,500 miles	Every 10,000 km/ 6,000 miles	Every 30,000 km/ 18,000 miles *1	Every 60,000 km/ 36,000 miles *2	Working procedures	Ref. page
		×	×			Check flange yoke bolts and center	
Propeller shaft couplings and bearings looseness		tio che	ew veh on at 4 2,500 ck only ness o	,000 ki miles, the lo	m/ ose-	 bearing bolts for looseness. Turn propeller shaft manually to check for loose spline coupling. Check for looseness between spider and needle roller bearing. 	-
FRONT AND REAR AXLES							
Axle shaft torsion and cracks					×	Remove axle shaft and check for torsion, bend, and cracks.	_
Front wheel hub bearing loose- ness				×		With front axle jacked up, move wheel up and down by holding tire's top and bot- tom to check for bearing looseness.	_
Rear wheel hub bearing damage					×	Disassemble rear wheel and check for hub bearing wear and damage.	-
Retightening wheel nuts		×	×			Check wheel nuts for looseness.	12-58
Disc wheel damage			×			Check disc wheel for corrosion, deformation and cracks.	_
Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc.	×		×			 Measure inflation pressure with a tire pressure gauge, and check that tire tread groove is deep enough. Check tire tread and side walls for cracks, damage, uneven, ridgy, and other abnormal wear. 	12-51
Tire rotation			×			Rotate all tires.	12-59
SUSPENSION SYSTEM		1	1	1			
Looseness, play and damage of suspension system				×		Check suspension system for looseness, play and damage.	-
Damage and looseness of leaf springs	×			×		Check leaf springs for damage and looseness.	12-13
Retightening U-bolts		×		×		Check U-bolts for looseness.	_
Air leak and damage of air spring *5		×	×			Check air spring for air leak and damage of diaphragm. Check the air spring height.	-
Air spring diaphragm replacement *5			Every	/ 36 m	onths	Check diaphragm and replace if necessary.	-
Oil leaks and damage of shock absorbers				×		Check for oil leaks from and damage of cylinders and other parts.	_
BRAKING SYSTEM							
Air pressure and its charging speed	×					After discharging air from air tank, start and run the engine at idle and measure time taken to charge air to specified pressure in air tank.	12-48
Air and fluid leaks from braking system			×			Check braking system for air and fluid leaks.	-

	Т	ime of ma	inspec intena		nd		
	cks	0 km/		spection interva			
Item	Pre-operational checks	New vehicle at 4,000 l 2,500 miles	Every 10,000 km/ 6,000 miles	Every 30,000 km/ 18,000 miles *1	Every 60,000 km/ 36,000 miles *2	Working procedures	Ref. page
Looseness, play and damage of braking system parts			×			Check braking system parts for loose- ness, play and damage.	_
Condensation in air tank	×					Open drain cock, and check for presence of condensation in air tank.	12-51
Operation of brake pedal			×			Depress the brake pedal and release it, checking for the sound of air being released from the brake valve and to ensure that the pedal returns normally without catching. Press the brake pedal with a finger to the point where resistance is felt and mea- sure the distance (play) over which the pedal has moved.	12-46
Foot brake effectiveness	×		×			While driving the vehicle at low speed, check braking effect and check for uneven braking.	12-47
Operation of exhaust brake	×		×			Check for exhaust brake operation.	_
Exhaust brake control cylinder packing replacement			Ever	y 12 m	onths	Check exhaust brake control cylinder packing, replace if necessary.	_
Operation of air drier			×			Open drain cock of air tank and make sure there is no drainage.	12-50
Check drain from air drier exhaust port			×			Check to see that oil is not discharged abnormally from exhaust port of air drier.	12-50
Air drier disassembly and check					×	Disassemble air drier and check every part of it. If more than 1/5 of the drying agent is discolored, replace drying agent.	12-50
Replacement of drying agent in air drier			Ever	y 24 m	onths	Disassemble air drier and replace drying agent and rubber parts.	12-50
Brake shoe clearance				×		Measure clearance with thickness gauge.	-
Brake lining wear				×		Check for lining wear.	_
Brake drum wear					×	Disassemble and check drum for wear, cracks and damage.	-
Parking brake effectiveness			×			On a slope, check that vehicle can be held stationary.	12-49
Parking brake operation *4	×		×			 Check for operation of parking brake control valve. Check operation when brake line air pressure is reduced. 	12-49
Parking brake lever stroke *3	×		×			With lever full pulled, check that lever is locked completely and that there is allowance in pulling stroke.	12-48
Parking brake drum and lining wear *3					×	Disassemble and check drum for wear, cracks and damage and lining for wear.	_
Damage on boot of brake cham- ber expander *4					×	Check boot at expander for damage.	_

۲

-

	Т		inspec intena		nd		
	cks	4,000 km/		spection interva			
Item	Pre-operational checks	New vehicle at 4,000 2,500 miles	Every 10,000 km/ 6,000 miles	Every 30,000 km/ 18,000 miles *1	Every 60,000 km/ 36,000 miles *2	Working procedures	Ref. page
Wheel cylinder piston cup and dust seal replacement *3			Every	/ 12 m	onths	Check wheel cylinder piston cup and dust seal; replace if necessary.	-
Brake booster packing, cup and rubber parts replacement *3			Every	/ 12 m	onths	Check brake booster packing, cup and rubber parts; replace if necessary.	-
Brake hose replacement			Every	y 12 m	onths	Check brake hose; replace if necessary.	_
Check valve packing and rubber parts replacement			Every	/ 12 m	onths	Check check valve packing and rubber parts; replace if necessary.	-
Brake valve packing and rubber parts replacement			Every	/ 12 m	onths	Check brake valve packing and rubber parts; replace if necessary.	_
Air compressor and pressure gauge hoses replacement			Every	/ 24 m	onths	Replace air compressor and pressure gauge hose.	-
Brake booster power cylinder packing replacement *3			Every	/ 24 m	onths	Replace brake booster power cylinder packing.	-
Brake fluid reservoir tank tube replacement *3			Every	/ 24 m	onths	Check and replace brake fluid reservoir tank tube.	-
Brake chamber packing and rub- ber parts replacement *4			Every	/ 24 m	onths	Replace brake chamber packing and rubber parts.	_
Replacement of rubber parts at brake chamber's wheel parking brake spring and expander *4			Every	/ 36 m	onths	Replace rubber parts at brake chamber's wheel parking brake spring and expander.	_
STEERING SYSTEM							
Fluid leaks from steering system			×			Check steering system for fluid leaks.	_
Steering wheel play	×		×			Turn steering wheel right and left to mea- sure play at steering wheel rim. Measure while engine is running.	12-45
Steering operating condition	×		×			Check steering wheel to see if it vibrates, pulls to one side or requires unusual steering effort.	12-45
Looseness and play of steering system (including hoses and pipes)			×			 Check steering system for looseness and play. Check power steering hoses and pipes for looseness. 	-
Wheel alignment					×	Measure toe-in, camber, caster and king- pin inclination angles.	-
Right and left turning angles and power steering function					×	 Check that stopper bolt is sufficiently tight without damage and that steering linkage operates smoothly until blocked by stopper bolt. Check that steering wheel does not contact other parts. 	_
Power steering booster and oil pump internal rubber parts replacement			Ever	y 48 m	onth	Replace internal rubber parts.	-
Power steering hose replacement			Ever	y 48 m	nonth	Replace power steering hose.	_

15-7

•

•

	Т	ïme of ma	inspec intena		nd		
ltem	sks	4,000 km/		Inspection interval			
	Pre-operational checks	New vehicle at 4,000 2,500 miles	Every 10,000 km/ 6,000 miles	Every 30,000 km/ 18,000 miles *1	Every 60,000 km/ 36,000 miles *2	Working procedures	Ref. page
CAB AND FRAME				•	•		
Looseness and damage of chas- sis and body			×			 Check frame, crossmembers and other parts for cracks and damage and check for loose rivets. Also, check for body damage and loose mounting bolts. 	_
Heater and defroster operation			×			Check operation and installation of defroster.	-
Condition of rearview mirrors and reflectors	×					Check reflecting condition, stains and damage.	12-12
Door lock function			×			Check door lock mechanism for proper functioning.	-
Seat belt mounting condition			×			Check seat belt for damage, buckle and retracting function and mounting condition.	-
ELECTRICAL SYSTEM							
Looseness and damage of elec- trical wiring and connections			×			Check wiring, connectors and battery terminals for looseness and corrosion.	-
Battery electrolyte level and specific gravity				Every),000 k 000 m	.m/	 Check electrolyte level. Measure electrolyte specific gravity with hydrometer. 	12-61
Operation and damage of light- ing system and turn signal lamps	×		×			Check operation, damage and installa- tion of an lighting units. Also check turn signal lamps operated by turn signal switch.	12-10
Operation of horn	×		×			Check operation, damage and mounting condition.	12-12
Operation and fluid level of wind- shield wiper and washer	×		×			Check operation, damage and mounting condition. Check fluid level in washer tank.	5-27, 12-11
Gauge and warning/indicator lamp function	×		×			Check function of gauges and warning/ indicator lamps.	12-11
Switch function					×	Check operation, damage and installa- tion of every switch.	-
OTHERS			•			·	
Road test of vehicle			×			Drive the vehicle to check for vehicle general operating condition.	_

۲

 \mathbf{O}

-

2 Lubrication schedule

- *1: 30,000 km/18,000 miles or 6 months, whichever occurs first
- *2: 60,000 km/36,000 miles or 12 months, whichever occurs first *3: FK61F, FM61F, FM64F

*4: 9-speed transmission vehicle (E): Exhaust emission items

Time of inspection and maintenance Inspection interval New vehicle at 4,000 km/ 2,500 miles Pre-operational checks Every 10,000 km/ 6,000 miles Item Every 30,000 km/ 18,000 miles *1 Every 60,000 km/ 36,000 miles *2 Ref. page E Engine oil contamination and oil level \times 12-19 E Engine oil replacement × × 12-28 Clutch reservoir tank fluid level \times × Clutch reservoir tank fluid replacement × _ Lubrication of clutch fork shaft × 12-15 Lubrication of clutch shifter *4 × Manual transmission oil level × 12-23 Every 50,000 km/ 30,000 miles Manual transmission oil replacement × Automatic transmission fluid level х Other than FM65F: Every 80,000 km (48,000 miles) FM65F: Every 40,000 km (24,000 miles) 12-25 Automatic transmission fluid replacement (Filter should also be replaced.) At initial 8,000 km (5,000 miles), only the fluid filter should be replaced. On FM65F, only the main filter should be replaced. (Do not replace the lub. filter.) Axle housing gear oil level × 12-26 Axle housing gear oil replacement \times \times Hub bearing grease and oil seal replacement × _ Brake reservoir tank fluid level *3 12-28 \times × Brake reservoir tank fluid replacement *3 × _ Power steering fluid level 12-30 × Power steering fluid replacement _ × Lubrication of propeller shaft (universal joint, slip 12-15 × joint, center bearing) Lubrication of cab rear mount cushion 12-19 \times Lubrication of king pins \times 12-15 Lubrication of chassis parts \times

www.Manualslib.com manuals search engine

16. Alphabetical index

www.Manualslib.com manuals search engine

۲

۲

0

9-speed transmission	5-15
Accelerator pedal	5-13
Air cleaner	12-34
Air conditioner	9-5
Air drier	12-50
Air filters	12-64
Air pressure	12-48
Air pressure gauge	6-3
Air suspension height control	
Air suspension seat	4-4
Air tank	12-51
Allison automatic transmission LCT 1000/2400 series	5-17
Allison automatic transmission MD3060P series	
Anti-lock brake system (ABS)	8-2
Ashtrays	10-2
Automatic transmission fluid	12-25
Axle housing gear oil	12-26
Battery	12-61
Battery has run down	13-16
Belt	12-44
Brake fluid	12-28
Brake pedal	5-14
Braking	7-7
Brightness control switch	5-28
Card holder	10-5
Center console box	10-5
Center seat	4-5
Central door locks	3-4
Chassis number	1-2
Cigarette lighter	
Cleaning your vehicle	12-66
Clutch	12-49
Clutch fluid	12-28
Clutch pedal	5-14
Coin hox	
Coin box	10-5
Cold start switch	
Cold start switch	5-4
	5-4 12-38
Cold start switch Coolant	5-4 12-38 5-29
Cold start switch Coolant Cruise control	5-4 12-38 5-29 10-6
Cold start switch Coolant Cruise control Cup holder	5-4 12-38 5-29 10-6 5-25
Cold start switch Coolant Cruise control Cup holder Dimmer switch	5-4 12-38 5-29 10-6 5-25 10-5
Cold start switch Coolant Cruise control Cup holder Dimmer switch Door pocket	5-4 12-38 5-29 10-6 5-25 10-5 3-5

Driver's seat	4-2
Dust indicator	12-34
Emergencies	13-1
Engine idling control volume	5-5
Engine number	1-2
Engine oil	12-19
Engine overheats	13-7
Entering and leaving the vehicle	3-4
Exhaust brake switch	5-26
Front panel	12-3
Fuel filter	12-32
Fuel gauge	6-4
Fuel has run out	13-17
Fuel tank	12-51
Fuels	1-5, 11-2
Fuse	13-8
Gearshift lever	5-14
Glove compartment	10-5
Greasing	
Handling of the new vehicle	1-7
Hazard warning lamp switch	5-25
Heater	
Height control switch	5-34
In cold weather	11-1
Indicator lamps	6-4
Intercooler	12-65
Interior lamp	10-3
Lamp	13-10
Lighting switch	5-24
Loading cargo	7-14
Lubrication	
Lubrication schedule	15-8
Maintenance	1-4
Maintenance schedule	15-2
Manual transmission gear oil	12-23
Mode button	5-21
New vehicle inspection	1-4
Obtaining service	
Oil filter	12-31
Oil level check switch	12-20
Overdrive switch	5-18
Overhead console pocket	10-5
Parcel box	
Parking	
Parking brake 5	

4

(\$

Parking brake control valve	5-23
Parking brake lever	5-23
Passenger's seat	4-4
Passing signal switch	5-25
PCV (Positive Crankcase Ventilation)	40.00
valve`	
Periodic inspection	
Pocket	
Power mode switch	
Power steering fluid	
Power take-off switch	
Power window lock switch	
Power window switches	
Powerline label	
Pre-operational check	
Refueling	
Reporting safety defects	
Seat belts	4-5
Seats	4-2
Service brakes	12-46
Service data	14-1
Speedometer	6-2
Spotlights	10-3
Starter key	3-2
Starter switch	5-3
Starting the engine	5-6
Steering wheel	4-9, 12-45
Stopping the engine	5-12
Sun visors	10-3
Tachometer	6-2
Tilting the cab	12-5
Tire chains	11-4
Tire rotation	12-59
Tires	12-51
Tires - replacement	12-54
Towing	13-18
Transmission oil cooler	
Turn signal lamp switch	5-25
Van body dome light switch	5-28
Vehicle identification number (VIN)	1-3
Warming up the engine	
Warning labels	
Warning lamps	
Water temperature gauge	
Wheel nuts	
Windshield washer	

Wiper and washer switch	. 5-27
Wiper blade	12-60

•

www.Manualslib.com manuals search engine

•

€

•

۲

17. MAINTENANCE RECORD

NOTE:

•

The symbols \bigcirc and \bigcirc prefixed to some check items stand for Exhaust Emission Control item and Noise Control item respectively.

New Vehicle: 4,000 km/2,500 Miles FREE INSPECTION AND SERVICE CERTIFICATE (NVI)

City, State:	Zip:
Vehicle identification number	
JL	
Date NVI was Performed:	
Vileage at time of NVI:	
Dealer Code of Servicing De	aler:
Dealer Reference R.O./Deale	er Claim No.:
	Dealer imprint / Dealership Name and Address
I certify the above id	entified truck has been thoroughly inspected and adjusted in accordance

Dealer Representive Signature

Date

(MFTA COPY)

1 FK/FM

 (\mathbf{b})

New Vehicle: 4,000 km/2,500 Miles FREE INSPECTION AND SERVICE CERTIFICATE (NVI)

	Zin
Vehicle identification number	Zip:
J L Date NVI was Performed:	
Mileage at time of NVI:	
Dealer Code of Servicing Deale	pr:
Dealer Reference R.O./Dealer	Claim No.:
	Dealer imprint / Dealership Name and Address
	tified truck has been thoroughly inspected and adjusted in accordance 0 miles free inspection and service" procedures prescribed by MFTA.

Dealer Representive Signature

Date

(DEALER COPY)

@ FK/FM

 (\mathbf{b})

New Vehicle: 4,000 km/2,500 Miles FREE INSPECTION AND SERVICE CERTIFICATE (NVI)

Owner's Name:	
Address:	
City, State:	Zip:
/ehicle identification number	
Date NVI was Performed:	
/lileage at time of NVI:	
Dealer Code of Servicing Dealer:	
Dealer Reference R.O./Dealer Claim No.:	
Dealer imprint / Deale	ership Name and Address
I certify the above identified truck has been t	horoughly inspected and adjusted in accordance
	horoughly inspected and adjusted in accordance and service" procedures prescribed by MFTA.
with the "4,000 km/2,500 miles free inspection	
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature	Date
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature (OWNE	and service" procedures prescribed by MFTA.
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature (OWNE NEW VEHICLE: 4, SERVICE 0	n and service" procedures prescribed by MFTA. Date ER COPY) 000 km / 2,500 miles
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature (OWNE NEW VEHICLE: 4, SERVICE 0	Date OND COPY) OND COPY OND OND COPY OND OND OND COPY OND COPY OND COPY OND COPY OND
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature (OWNE	Date OND COPY) OND COPY OND OND COPY OND OND OND COPY OND COPY OND COPY OND COPY OND
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature (OWNE NEW VEHICLE: 4, SERVICE (Dwner's name:	Date Date ER COPY) Date Date Date Date Date Date Date Date
with the "4,000 km/2,500 miles free inspection Dealer Representive Signature (OWNE NEW VEHICLE: 4, SERVICE 0 Dwner's name: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Address: Addres	Date ER COPY) 000 km / 2,500 miles OPERATIONS Date: Date: Power train Propeller shaft flange yoke bolts and center bearing bolts looseness Front and rear axle

ଞ FK/FM

10,000 km / 6,000 miles SERVICE OPERATIONS

۲

10,000 km / 6,000 miles SERVICE OPERATIONS

	Owner's name: Date:
Owner's name:	Address:
	Vehicle identification number:
	Lubrication
Date:	□
	Clutch reservoir tank fluid level
	Manual transmission oil level
Address:	Automatic transmission filter replacement [Replace at initial 8,000 km (5,000 miles). On FM65F, do not replace the lub. filter.]
	Axle housing gear oil level
	□ Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	Lubrication of king pins
	Lubrication of chassis parts
	Inspection and maintenance
Total mileage:	Engine
Total mileage.	Air, fuel, oil or coolant leaks from engine
	□ € ® Engine starting performance, speed, noise and exhaust gas conditions
Servicing dealer's name:	Retightening the fuel tank bracket bolts
	$\square \oplus \mathbb{N}$ Belt tension and damage
	□ Radiator cap condition
	□ (Ē) Cooling system hose clamp position and clamping condi- tion
	$\square \textcircled{E} \textcircled{N} Cleaning the air cleaner element$
Addroop	□ € N Damage of air intake system, looseness of clamp and loss of parts
Address:	□ €® Exhaust system
	□
	Power train
	Air or oil leaks from power train
	□ Clutch pedal play
	Clutch function
Signature:	Propeller shaft couplings and bearings looseness
	Front and rear axles
	Retightening wheel nuts
	□ Disc wheel damage
	 Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc.
	□ Tire rotation
	Suspension system
	Air leak and damage of air spring

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier
- $\hfill\square$ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- $\hfill\square$ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- $\hfill\square$ Operation and damage of lighting system
- $\hfill\square$ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

Road test of vehicle

20,000 km / 12,000 miles SERVICE OPERATIONS

۲

20,000 km / 12,000 miles SERVICE OPERATIONS

	Owner's name: Date:
Owner's name:	Address:
	Vehicle identification number:
	Lubrication
Date:	□
	□ Clutch reservoir tank fluid level
	□ Transmission oil/fluid level
Address:	□ Axle housing gear oil level
	□ Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	Lubrication of king pins
	Lubrication of chassis parts
	Inspection and maintenance
	Engine
	Air, fuel, oil or coolant leaks from engine
Total mileage:	EN Engine starting performance, speed, noise and exhaust gas conditions
0	E Oil filter replacement
	Retightening the fuel tank bracket bolts
	EN Belt tension and damage
Servicing dealer's name:	Radiator cap condition
	E Cooling system hose clamp position and clamping condi- tion
	EN Cleaning the air cleaner element
	□ ⓒ N Damage of air intake system, looseness of clamp and loss of parts
	EN Exhaust system
Address:	E PCV valve element replacement
	Power train
	Air or oil leaks from power train
	Clutch pedal play
	Clutch function
	Propeller shaft couplings and bearings looseness
	Front and rear axles
Signature:	Retightening wheel nuts
	Disc wheel damage
	Tire inflation pressure, cracking, tread groove depth, abnor- mal wear, etc.
	□ Tire rotation
	Suspension system
	Air leak and damage of air spring
	Braking system
i i i i i i i i i i i i i i i i i i i	Air and fluid leaks from braking system
	Looseness, play and damage of braking system parts
	Continued on reverse side

- $\hfill\square$ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- $\hfill\square$ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- $\hfill\square$ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

Road test of vehicle

30,000 km / 18,000 miles or 6 months SERVICE OPERATIONS

٠

30,000 km / 18,000 miles or 6 months SERVICE OPERATIONS

Ourser's name:	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number	er:
	Lubrication	
Date:	□	nt
	Clutch reservoir tank flui	d level
	Lubrication of clutch fork	shaft
	Lubrication of clutch shif	ter
Address:	□ Transmission oil/fluid lev	/el
	Axle housing gear oil lev	/el
	Brake reservoir tank fluid	dlevel
	Power steering fluid level	el
	Lubrication of propeller s (universal joint, slip joint	
	Lubrication of cab rear n	nounting pads
	Lubrication of transmissi	ion gearshift control
	Lubrication of king pins	
	Lubrication of chassis particular	arts
Total mileage:	Inspection and maintenar	nce
	Engine	
	□ Air, fuel, oil or coolant le	aks from engine
Servicing dealer's name:	•	formance, speed, noise and exhaust
	□ ⓒ Fuel filter replacemer	nt
	Retightening the fuel tan	ik bracket bolts
	□ ^(E) Belt tension and da	image
	Radiator cap condition	
	□	clamp position and clamping condi-
Address:	$\square \otimes \mathbb{R}$ Cleaning the air cle	eaner element
	loss of parts	ake system, looseness of clamp and
	□ EN Exhaust system	
	□ [©] PCV valve element re	eplacement
	Power train	
	Air or oil leaks from pow	er train
Signature:	Clutch pedal play	
	Clutch function	
	Manual transmission gea	
		range selector linkage condition
	Propeller shaft couplings	s and bearings looseness
	Front and rear axles	
	Front wheel hub bearing	
	Retightening wheel nuts	
	Disc wheel damage	
	☐ Tire inflation pressure, o mal wear, etc.	cracking, tread groove depth, abnor-
	1	Continued on reverse side

□ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- □ Retightening U-bolts
- □ Air leak and damage of air spring
- Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Brake shoe clearance
- Brake lining wear
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

Road test of vehicle

40,000 km / 24,000 miles SERVICE OPERATIONS

 \bigcirc

40,000 km / 24,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number	er:
	Lubrication	
Date:	🗆 🗈 Engine oil replacemer	nt
	Clutch reservoir tank fluid	d level
	□ Manual transmission oil	level
	Automatic transmission f	luid and filter replacement <fm65></fm65>
Address:	□ Axle housing gear oil lev	el
	□ Brake reservoir tank fluid level	
	Power steering fluid leve	1
	□ Lubrication of propeller s	
	(universal joint, slip joint,	
	Lubrication of king pins	
	Lubrication of chassis pa	arts
	Inspection and maintenan	ice
	Engine	
	□ Air, fuel, oil or coolant lea	aks from engine
Total mileage:	□ € N Engine starting per gas conditions	formance, speed, noise and exhaust
	□ ^(E) Oil filter replacement	
	Retightening the fuel tan	k bracket bolts
Servicing dealer's name:	□ EN Belt tension and da	mage
	Radiator cap condition	
	E Cooling system hose tion	clamp position and clamping condi-
	□ ĒN Cleaning the air cle	aner element
	□ € N Damage of air inta loss of parts	ke system, looseness of clamp and
Address:	□ [©] [®] Exhaust system	
	□	
	Power train	
	□ Air or oil leaks from powe	er train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings	and bearings looseness
Signature:	Front and rear axles	
	Retightening wheel nuts	
	□ Disc wheel damage	
		cracking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of a	air spring

Braking system

- □ Air and fluid leaks from braking system
- Looseness, play and damage of braking system parts
- Operation of brake pedal
- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

Road test of vehicle

50,000 km / 30,000 miles SERVICE OPERATIONS

 \bigcirc

50,000 km / 30,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number:	
	Lubrication	
Date:	□	
	Clutch reservoir tank fluid le	evel
	Manual transmission oil rep	blacement
	Automatic transmission flui	d level
Address:	Axle housing gear oil level	
	Brake reservoir tank fluid le	evel
	Power steering fluid level	
	Lubrication of propeller sha (universal joint, slip joint, ce	lft enter bearing)
	Lubrication of king pins	
	Lubrication of chassis parts	3
	Inspection and maintenance	9
	Engine	
	Air, fuel, oil or coolant leaks	s from engine
Total mileage:	□ € ® Engine starting perfor gas conditions	mance, speed, noise and exhaust
	Retightening the fuel tank to	pracket bolts
	□ ⓒ� Belt tension and dama	age
Servicing dealer's name:	Radiator cap condition	
	E Cooling system hose classical tion E	amp position and clamping condi-
	E E Air cleaner element re	placement
	EN Damage of air intake loss of parts	system, looseness of clamp and
	EN Exhaust system	
Address:	□	acement
	Power train	
	□ Air or oil leaks from power	train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings and a standard stan	nd bearings looseness
	Front and rear axles	
Signature:	Retightening wheel nuts	
~	□ Disc wheel damage	
	Tire inflation pressure, crac mal wear, etc.	cking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of air	spring
	1	

Braking system

0

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- $\hfill\square$ Operation and damage of lighting system
- $\hfill\square$ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

Road test of vehicle

60,000 km / 36,000 miles or 12 months SERVICE OPERATIONS

۲

60,000 km / 36,000 miles or 12 months SERVICE OPERATIONS

- · ·	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification numb	per:
	Lubrication	
Date:	 Engine oil replaceme Clutch reservoir tank flu 	
	Lubrication of clutch fork shaft	
A	□ Lubrication of clutch sh	
Address:	□ Transmission oil/fluid le	
	Axle housing gear oil re	
	 Hub bearing grease an Brake reservoir tank flu 	-
	□ Drake reservoir tank nu □ Power steering fluid rep	
	□ Lubrication of propeller	
	(universal joint, slip join	
	□ Lubrication of cab rear	mounting pads
	Lubrication of transmiss	•
	Lubrication of king pins	
	□ Lubrication of chassis p	parts
Total mileage:	Inspection and maintena	ince
	Engine	
	□ Air, fuel, oil or coolant le	eaks from engine
		erformance, speed, noise and exhaust
Servicing dealer's name:	gas conditions	
	□ Retightening intake and	d exhaust manifold bolts
		•
	□ (Ē) Oil filter replacemen □ (Ē) Fuel filter replaceme	
	\Box Retightening the fuel ta	
	$\Box \in \mathbb{R}$ Belt tension and d	
	□ Radiator cap condition	
Address:	tion	e clamp position and clamping condi-
	$\Box \in \mathbb{N}$ Cleaning the air cl	
	loss of parts	take system, looseness of clamp and
	□ € ® Exhaust system	
	□	replacement
Signature:	□ □ Starter function	
	Power train	
	□ Air or oil leaks from pov	wer train
	□ □ Clutch pedal play	
	□ Manual transmission ge	earshift control looseness
		range selector linkage condition
	□ Propeller shaft coupling	
	Front and rear axles	-
	□ Axle shaft torsion and c	cracks
	□ Front wheel hub bearin	
		Continued on reverse side

- □ Rear wheel hub bearing damage
- Retightening wheel nuts
- Disc wheel damage
- □ Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc.
- □ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- □ Damage and looseness of leaf springs
- □ Retightening U-bolts
- $\hfill\square$ Air leak and damage of air spring
- □ Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- Exhaust brake control cylinder packing replacement
- $\hfill\square$ Air drier disassembly and check
- Brake shoe clearance
- Brake lining wear
- Brake drum wear
- Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke
- □ Parking brake drum and lining wear
- Damage on boot of brake chamber expander
- Wheel cylinder piston cup and dust seal replacement
- □ Brake booster packing, cup and rubber parts replacement
- □ Brake hose replacement
- Check valve packing and rubber parts replacement
- □ Brake valve packing and rubber parts replacement

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)
- □ Wheel alignment
- Right and left turning angles and power steering function

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- □ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function
- Switch function

Others

Road test of vehicle

70,000 km / 42,000 miles SERVICE OPERATIONS

۲

70,000 km / 42,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number	:
	Lubrication	
Date:	Engine oil replacement	
	Clutch reservoir tank fluid	
	□ Transmission oil/fluid level	
Address:	Axle housing gear oil level	
Address.	□ Brake reservoir tank fluid l	evel
	Power steering fluid level	
	Lubrication of propeller sha (universal joint, slip joint, c	
	Lubrication of king pins	
	Lubrication of chassis part	S
	Inspection and maintenanc	e
	Engine	
	□ Air, fuel, oil or coolant leak	s from engine
Total mileage:	□ € N Engine starting perfo gas conditions	rmance, speed, noise and exhaust
	□ Retightening the fuel tank	bracket bolts
	$\square \oplus \mathbb{N}$ Belt tension and dam	lage
	Radiator cap condition	
Servicing dealer's name:	E Cooling system hose c tion	lamp position and clamping condi-
	$\square \in \mathbb{N}$ Cleaning the air clear	ner element
	E E Damage of air intake loss of parts	e system, looseness of clamp and
	□ € N Exhaust system	
	E PCV valve element repl	lacement
Address:	Power train	
	☐ Air or oil leaks from power	train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings a	and bearings looseness
	Front and rear axles	
	Retightening wheel nuts	
Signature:	Disc wheel damage	
	☐ Tire inflation pressure, cra mal wear, etc.	acking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	Air leak and damage of air	spring
	Braking system	
	□ Air and fluid leaks from bra	aking system
	Looseness, play and dama	
	Operation of brake pedal	
	1	Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

0

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- $\hfill\square$ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

□ Road test of vehicle

80,000 km / 48,000 miles SERVICE OPERATIONS

۲

80,000 km / 48,000 miles SERVICE OPERATIONS

Dwner's name:	Owner's name: Date:
	Address:
	Vehicle identification number:
	Lubrication
Date:	Engine oil replacement
	Clutch reservoir tank fluid level
	Manual transmission oil level
	Automatic transmission fluid and filter replacement
Address:	Axle housing gear oil level
	Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	□ Lubrication of king pins
	□ Lubrication of chassis parts
	Inspection and maintenance
	Engine
	□ Air, fuel, oil or coolant leaks from engine
otal mileage:	□ E N Engine starting performance, speed, noise and exhaust gas conditions
	□
	Retightening the fuel tank bracket bolts
ervicing dealer's name:	□ E N Belt tension and damage
	□ Radiator cap condition
	Cooling system hose clamp position and clamping condition
	$\square \oplus \mathbb{R}$ Cleaning the air cleaner element
	EN Damage of air intake system, looseness of clamp and loss of parts
\ddress:	□ Ē® Exhaust system
	□
	Power train
	☐ Air or oil leaks from power train
	□ Clutch pedal play
	□ Clutch function
	Propeller shaft couplings and bearings looseness
Signaturo:	Front and rear axles
signature:	□ Retightening wheel nuts
	□ Disc wheel damage
	☐ Disc wheel damage ☐ Tire inflation pressure, cracking, tread groove depth, abnor-
	mal wear, etc.
	□ Tire rotation
	Suspension system
	□ Air leak and damage of air spring
	I

Braking system

- □ Air and fluid leaks from braking system
- Looseness, play and damage of braking system parts
- Operation of brake pedal
- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- $\hfill\square$ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

90,000 km / 54,000 miles or 18 months SERVICE OPERATIONS

٠

90,000 km / 54,000 miles or 18 months SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number:	
	Lubrication	
Date:	E Engine oil replacement	
	Clutch reservoir tank fluid le	vel
	Lubrication of clutch fork sha	aft
Address:	Lubrication of clutch shifter	
Address.	□ Transmission oil/fluid level	
	Axle housing gear oil level	
	□ Brake reservoir tank fluid lev	vel
	Power steering fluid level	
	Lubrication of propeller shaf (universal joint, slip joint, cer	nter bearing)
	Lubrication of cab rear mour	
	Lubrication of transmission g	gearshift control
	Lubrication of king pins	
	Lubrication of chassis parts	
Total mileage:	Inspection and maintenance	
	Engine	
	☐ Air, fuel, oil or coolant leaks	from engine
Servicing dealer's name:	□ (Ē) Engine starting perforn gas conditions	nance, speed, noise and exhaust
	E Fuel filter replacement	
	Retightening the fuel tank br	acket bolts
	$\square \oplus \mathbb{N}$ Belt tension and damage	ge
	Radiator cap condition	
	□ (Ē) Cooling system hose cla tion	mp position and clamping condi-
Address:	$\square \oplus \mathbb{R}$ Cleaning the air cleane	r element
	loss of parts	system, looseness of clamp and
	□ E N Exhaust system	
	E PCV valve element replace	cement
	Power train	
	Air or oil leaks from power tr	ain
Signature:	Clutch pedal play	
	Clutch function	
	Manual transmission gearsh	ift control looseness
	Automatic transmission range	e selector linkage condition
	Propeller shaft couplings an	d bearings looseness
	Front and rear axles	
	Front wheel hub bearing loo	seness
	Retightening wheel nuts	
	Disc wheel damage	
	Tire inflation pressure, crac mal wear, etc.	king, tread groove depth, abnor-
	1	Continued on reverse side

□ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- □ Retightening U-bolts
- □ Air leak and damage of air spring
- Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- Operation of air drier
- □ Check drain from air drier exhaust port
- □ Brake shoe clearance
- Brake lining wear
- Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

 $igodoldsymbol{ heta}$

100,000 km / 60,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number	:
	Lubrication	
Date:	Engine oil replacement	
	Clutch reservoir tank fluid	level
	Manual transmission oil re	placement
	Automatic transmission flu	iid level
Address:	□ Axle housing gear oil level	
	Brake reservoir tank fluid l	evel
	Power steering fluid level	
	Lubrication of propeller sh (universal joint, slip joint, c	
	Lubrication of king pins	
	Lubrication of chassis part	s
	Inspection and maintenanc	e
	Engine	
	☐ Air, fuel, oil or coolant leak	s from engine
Total mileage:		rmance, speed, noise and exhaust
	□ ⓒ Oil filter replacement	
	Retightening the fuel tank	bracket bolts
Servicing dealer's name:	□ E N Belt tension and dam	
	Radiator cap condition	-
		lamp position and clamping condi-
	E N Air cleaner element r	eplacement
		e system, looseness of clamp and
Address:	□ EN Exhaust system	
	E PCV valve element rep	lacement
	Power train	
	Air or oil leaks from power	train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings a	and bearings looseness
Signature:	Front and rear axles	
	Retightening wheel nuts	
	□ Disc wheel damage	
		acking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of air	- spring
	I I	

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- Operation of brake pedal
- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- $\hfill\square$ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

110,000 km / 66,000 miles SERVICE OPERATIONS

	Owner's name: Date:
Owner's name:	Address:
	Vehicle identification number:
	Lubrication
Date:	□
	□ Clutch reservoir tank fluid level
	□ Transmission oil/fluid level
Address:	Axle housing gear oil level
	Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	□ Lubrication of king pins
	Lubrication of chassis parts
	Inspection and maintenance
	Engine
	Air, fuel, oil or coolant leaks from engine
Total mileage:	ENN Engine starting performance, speed, noise and exhaust gas conditions
	Retightening the fuel tank bracket bolts
	$\square \in \mathbb{N}$ Belt tension and damage
	Radiator cap condition
Servicing dealer's name:	E Cooling system hose clamp position and clamping condi- tion
	$\square \in \mathbb{N}$ Cleaning the air cleaner element
	EN Damage of air intake system, looseness of clamp and loss of parts
	□ € N Exhaust system
	E PCV valve element replacement
Address:	Power train
	Air or oil leaks from power train
	Clutch pedal play
	□ Clutch function
	Propeller shaft couplings and bearings looseness
	Front and rear axles
	Retightening wheel nuts
Signature:	Disc wheel damage
	Tire inflation pressure, cracking, tread groove depth, abnor- mal wear, etc.
	□ Tire rotation
	Suspension system
	Air leak and damage of air spring
	Braking system
	Air and fluid leaks from braking system
	Looseness, play and damage of braking system parts
	□ Operation of brake pedal
	Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- $\hfill\square$ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

120,000 km / 72,000 miles or 24 months SERVICE OPERATIONS

0

120,000 km / 72,000 miles or 24 months SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification numb	er:
Date: Address:	Axle housing gear oil re Hub bearing grease and Brake reservoir tank flui Power steering fluid rep	iid replacement k shaft ifter I level fluid and filter replacement <fm65f> eplacement d oil seal replacement id replacement blacement shaft (universal joint, slip joint, center mounting pads sion gearshift control</fm65f>
	Inspection and maintena	
Total mileage:	Engine	
Total mileage: Servicing dealer's name: Address:	 Air, fuel, oil or coolant le E N Engine starting pe gas conditions Retightening intake and E Valve clearance E Oil filter replacement E Draining water and s Retightening the fuel tai E Check fuel line outsid E Oolant replacement (E Radiator cap condition E Cooling system hose tion E N Cleaning the air cle E N Damage of air introvision of parts E PCV valve element r Starter function Alternator function 	rformance, speed, noise and exhaust I exhaust manifold bolts I exhaust manifold bolts I ent wediment in fuel tank nk bracket bolts de the engine compartment amage Every 24 months) e clamp position and clamping condi- eaner element ake system, looseness of clamp and
Signature:	Power train	
	Propeller shaft coupling Front and rear axles	earshift control looseness range selector linkage condition s and bearings looseness
	Axle shaft torsion and c Axle shaft torsion and c Front wheel hub bearing Rear wheel hub bearing Retightening wheel nuts Disc wheel damage	g looseness g damage
		Continued on reverse side

23

Continued on reverse side

- □ Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc.
- Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- □ Retightening U-bolts
- □ Air leak and damage of air spring
- $\hfill\square$ Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- $\hfill\square$ Looseness, play and damage of braking system parts
- Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- □ Exhaust brake control cylinder packing replacement
- Replacement of drying agent in air drier
- □ Brake shoe clearance
- □ Brake lining wear
- Brake drum wear
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke
- □ Parking brake drum and lining wear
- Damage on boot of brake chamber expander
- U Wheel cylinder piston cup and dust seal replacement
- □ Brake booster packing, cup and rubber parts replacement
- □ Brake hose replacement
- Check valve packing and rubber parts replacement
- □ Brake valve packing and rubber parts replacement
- $\hfill\square$ Air compressor and pressure gauge hose replacement
- □ Brake booster power cylinder packing replacement
- □ Brake fluid reservoir tank tube replacement
- Brake chamber's packing and rubber parts replacement

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)
- Wheel alignment
- Right and left turning angles and power steering function
- Power steering booster and oil pump internal rubber parts replacement
- Power steering hose replacement

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- □ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function
- □ Switch function

Others

130,000 km / 78,000 miles SERVICE OPERATIONS

Ouror's name:	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number:	
	Lubrication	
Date:	□	
	Clutch reservoir tank fluid le	evel
	□ Transmission oil/fluid level	
Address:	□ Axle housing gear oil level	
	□ Brake reservoir tank fluid le	vel
	Power steering fluid level	G
	Lubrication of propeller sha (universal joint, slip joint, ce	
	Lubrication of king pins	
	Lubrication of chassis parts	
	Inspection and maintenance	•
	Engine	
	□ Air, fuel, oil or coolant leaks	-
Total mileage:	 EN Engine starting perform gas conditions 	mance, speed, noise and exhaust
	Retightening the fuel tank b	racket bolts
	$\square \oplus \mathbb{R}$ Belt tension and dama	ige
Convision de clarie normal	Radiator cap condition	
Servicing dealer's name:	 E Cooling system hose cla tion 	amp position and clamping condi-
	$\square \oplus \mathbb{N}$ Cleaning the air cleaned	er element
	EN Damage of air intake loss of parts	system, looseness of clamp and
	□ ^(E) ® Exhaust system	
	E PCV valve element repla	acement
Address:	Power train	
	Air or oil leaks from power t	rain
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings ar	nd bearings looseness
	Front and rear axles	
	Retightening wheel nuts	
Signature:	Disc wheel damage	
	Tire inflation pressure, crac mal wear, etc.	king, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of air s	spring
	Braking system	
	☐ Air and fluid leaks from brak	king system
	□ Looseness, play and damage	
	Operation of brake pedal	• • •
	1	Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- $\hfill\square$ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

140,000 km / 84,000 miles SERVICE OPERATIONS

Owner's name:	Owner's name: Date:
Owner's name.	Address:
	Vehicle identification number:
- .	Lubrication
Date:	 Engine oil replacement Clutch reservoir tank fluid level
	□ Transmission oil/fluid level
	Axle housing gear oil level
Address:	Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	□ Lubrication of king pins
	□ Lubrication of chassis parts
	Inspection and maintenance
	Engine
	Air, fuel, oil or coolant leaks from engine
	$\square \oplus \otimes$ Engine starting performance, speed, noise and exhaust
Total mileage:	gas conditions
	 E Oil filter replacement
	□ Retightening the fuel tank bracket bolts
Servicing dealer's name:	$\square \oplus \mathbb{R}$ Belt tension and damage
	□ Radiator cap condition
	□ © Cooling system hose clamp position and clamping condi- tion
	$\Box \ \textcircled{E} \ \textcircled{B} \ \end{array}{B} \ \textcircled{B} \ \textcircled{B} \ \textcircled{B} \ \textcircled{B} \ \end{array}{B} \ \textcircled{B} \ \textcircled{B} \ \textcircled{B} \ \end{array}{B} \ \rule{B} \ \end{array}{B} \ \textcircled{B} \ \rule{B} \ \end{array}{B} \ \rule{B} \ B$
	□ ⓒ ℕ Damage of air intake system, looseness of clamp and loss of parts
	□ Ē Exhaust system
Address:	□
	Power train
	□ Air or oil leaks from power train
	□ Clutch pedal play
	 Clutch function Propeller shaft couplings and bearings looseness
	Front and rear axles
Circulation	
Signature:	 Retightening wheel nuts Disc wheel damage
	□ Tire inflation pressure, cracking, tread groove depth, abnor-
	mal wear, etc.
	□ Tire rotation
	Suspension system
	□ Air leak and damage of air spring
	Braking system
	□ Air and fluid leaks from braking system
	Looseness, play and damage of braking system parts
	Continued on reverse side

- $\hfill\square$ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- $\hfill\square$ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- □ Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

150,000 km / 90,000 miles or 30 months SERVICE OPERATIONS

 \bigcirc

150,000 km / 90,000 miles or 30 months SERVICE OPERATIONS

Owner's name:	Owner's name: Date:
	Address:
	Vehicle identification number:
	Lubrication
Date:	Engine oil replacement
	Clutch reservoir tank fluid level
	Lubrication of clutch fork shaft
	Lubrication of clutch shifter
Address:	Manual transmission oil replacement
	Automatic transmission fluid level
	Axle housing gear oil level
	Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	Lubrication of cab rear mounting pads
	Lubrication of transmission gearshift control
	Lubrication of king pins
Total milaaga:	Lubrication of chassis parts
Total mileage:	Inspection and maintenance
	Engine
Servicing dealer's name:	□ Air, fuel, oil or coolant leaks from engine
	□ €
	□
	□ Retightening the fuel tank bracket bolts
	□ © N Belt tension and damage
	□ Radiator cap condition
Address:	 E Cooling system hose clamp position and clamping condition
	\Box E N Air cleaner element replacement
	□ ⓒ ℕ Damage of air intake system, looseness of clamp and loss of parts
	□ ©ℕ Exhaust system
	□
	Power train
Signature:	□ Air or oil leaks from power train
	□ Clutch pedal play
	□ Clutch function
	□ Manual transmission gearshift control looseness
	□ Automatic transmission range selector linkage condition
	Propeller shaft couplings and bearings looseness
	Front and rear axles
	Front wheel hub bearing looseness
	Retightening wheel nuts
	Disc wheel damage
	Continued on reverse side

- □ Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc.
- □ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- □ Retightening U-bolts
- $\hfill\square$ Air leak and damage of air spring
- Oil leaks and damage of shock absorbers

Braking system

- $\hfill\square$ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Check air drier desiccant
- □ Brake shoe clearance
- □ Brake lining wear
- □ Parking brake operation
- □ Parking brake effectiveness
- Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- $\hfill\square$ Gauge and warning/indicator lamp function

Others

160,000 km / 96,000 miles SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
	Address:	
	Vehicle identification number	er:
Dete	Lubrication	at
Date:	□ Clutch reservoir tank flui	
	□ Clucif reservoir tank hui	
Address:	□ Axle housing gear oil lev	-
	□ Axie housing gear on lev	
	□ Power steering fluid leve	
	Lubrication of propeller s (universal joint, slip joint	shaft
	Lubrication of king pins	
	□ Lubrication of chassis pa	arts
	Inspection and maintenar	nce
	Engine	
	□ Air, fuel, oil or coolant le	aks from engine
Total mileage:	1	formance, speed, noise and exhaust
	E Oil filter replacement	
	Retightening the fuel tan	k bracket bolts
Servicing dealer's name:	$\square \in \mathbb{N}$ Belt tension and da	image
	Radiator cap condition	
	E Cooling system hose tion	clamp position and clamping condi-
	$\square \mathbb{E}\mathbb{N}$ Cleaning the air cle	aner element
	EN Damage of air inta loss of parts	ike system, looseness of clamp and
Address:	EN Exhaust system	
	□	eplacement
	Power train	
	□ Air or oil leaks from pow	er train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings	and bearings looseness
Signature:	Front and rear axles	
	Retightening wheel nuts	
	Disc wheel damage	
	mal wear, etc.	cracking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	Air leak and damage of a	air spring
	Braking system	
	□ Air and fluid leaks from t	braking system
		Continued on reverse side

- $\hfill\square$ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- □ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

170,000 km / 102,000 miles SERVICE OPERATIONS

۲

170,000 km / 102,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification num	ber:
	Lubrication	
Date:	□ ^(E) Engine oil replacem	nent
	Clutch reservoir tank fl	luid level
	□ Transmission oil/fluid I	evel
	Axle housing gear oil I	evel
Address:	□ Brake reservoir tank fl	uid level
	Power steering fluid le	vel
	Lubrication of propelle (universal joint, slip joi	
	Lubrication of king pins	s
	Lubrication of chassis	parts
	Inspection and mainten	ance
	Engine	
	□ Air, fuel, oil or coolant	leaks from engine
Total mileage:	ENN Engine starting p gas conditions	erformance, speed, noise and exhaust
	□ Retightening the fuel ta	ank bracket bolts
	$\square \in \mathbb{N}$ Belt tension and	damage
	Radiator cap condition	1
Servicing dealer's name:	□	se clamp position and clamping condi-
	$\square \otimes \mathbb{N}$ Cleaning the air of	cleaner element
	E ® Damage of air ir loss of parts	ntake system, looseness of clamp and
	□ EN Exhaust system	
	□	replacement
Address:	Power train	
	☐ Air or oil leaks from po	ower train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplin	gs and bearings looseness
	Front and rear axles	
	Retightening wheel nu	ts
Signature:	□ Disc wheel damage	
	Tire inflation pressure mal wear, etc.	, cracking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage o	of air spring
	Braking system	
	□ Air and fluid leaks from	n braking system
		lamage of braking system parts
	□ Operation of brake per	
		Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- □ Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

180,000 km / 108,000 miles or 36 months SERVICE OPERATIONS

۲

180,000 km / 108,000 miles or 36 months SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
	Address:	
	Vehicle identification nun	nber:
Date: Address:	Lubrication	fluid replacement fork shaft shifter level replacement and oil seal replacement fluid replacement replacement er shaft bint, center bearing) ar mounting pads ission gearshift control ns
	Inspection and mainter	nance
	Engine	
Total mileage: Servicing dealer's name:	gas conditions Retightening of intake (E) Valve clearance (E) Oil filter replacement (E) Fuel filter replacement	performance, speed, noise and exhaust e and exhaust manifold bolts ent nent
		l damage
Address:	tion EN Cleaning the air EN Damage of air loss of parts EN Exhaust system E PCV valve element Starter function Alternator function	intake system, looseness of clamp and
	Power train	
Signature:	 Automatic transmission Propeller shaft coupli Front and rear axles 	gearshift control looseness on range selector linkage condition ngs and bearings looseness
	 Axle shaft torsion and Front wheel hub bear Rear wheel hub bear Retightening wheel n Disc wheel damage Tire inflation pressure mal wear, etc. 	ring looseness ing damage

□ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- Retightening U-bolts
- □ Air leak and damage of air spring
- □ Air spring diaphragm replacement
- Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- Operation of brake pedal
- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Exhaust brake control cylinder packing replacement
- $\hfill\square$ Air drier disassembly and check
- □ Brake shoe clearance
- □ Brake lining wear
- □ Brake drum wear
- □ Parking brake operation
- Parking brake effectiveness
- □ Parking brake lever stroke
- Parking brake drum and lining wear
- Damage on boot of brake chamber expander
- Wheel cylinder piston cup and dust seal replacement
- □ Brake booster packing, cup and rubber parts replacement
- □ Brake hose replacement
- □ Check valve packing and rubber parts replacement
- □ Brake valve packing and rubber parts replacement
- □ Replacement of rubber parts at brake chamber's wheel parking brake spring and expander

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)
- □ Wheel alignment
- Right and left turning angles and power steering function
- Cab and frame
- □ Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- □ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function
- □ Switch function

Others

190,000 km / 114,000 miles SERVICE OPERATIONS

۲

190,000 km / 114,000 miles SERVICE OPERATIONS

Quinor's name:	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number:	
	Lubrication	
Date:	Engine oil replacement	
	Clutch reservoir tank fluid leve	રા
	Transmission oil/fluid level	
	Axle housing gear oil level	
Address:	Brake reservoir tank fluid leve	1
	Power steering fluid level	
	Lubrication of propeller shaft (universal joint, slip joint, cent	er bearing)
	Lubrication of king pins	
	Lubrication of chassis parts	
	Inspection and maintenance	
	Engine	
	Air, fuel, oil or coolant leaks fr	om engine
Total mileage:	EN Engine starting performations	ance, speed, noise and exhaust
	Retightening the fuel tank bra	cket bolts
	$\square \oplus \mathbb{N}$ Belt tension and damage	e
	Radiator cap condition	
Servicing dealer's name:	E Cooling system hose clam tion	p position and clamping condi-
	$\square \otimes \mathbb{R}$ Cleaning the air cleaner	element
	□ € N Damage of air intake sy loss of parts	/stem, looseness of clamp and
	□ © N Exhaust system	
	□	ement
Address:	Power train	
	Air or oil leaks from power tra	in
	Clutch pedal play	
	□ Clutch function	
	Propeller shaft couplings and	bearings looseness
	Front and rear axles	
	Retightening wheel nuts	
Signature:	Disc wheel damage	
	Tire inflation pressure, cracki mal wear, etc.	ng, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	Air leak and damage of air sp	ring
	Braking system	
	Air and fluid leaks from brakin	ıg system
	Looseness, play and damage	of braking system parts
	Operation of brake pedal	
		Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- $\hfill\square$ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

200,000 km / 120,000 miles SERVICE OPERATIONS

۲

200,000 km / 120,000 miles SERVICE OPERATIONS

wner's name:	Address:
1	Vehicle identification number:
	Lubrication
ate:	Engine oil replacement
i	Clutch reservoir tank fluid level
	Manual transmission oil replacement
ddress:	Automatic transmission fluid and filter replacement <fm65f< p=""></fm65f<>
	Axle housing gear oil level
i i	Brake reservoir tank fluid level
	Power steering fluid level
	 Lubrication of propeller shaft (universal joint, slip joint, center bearing)
	Lubrication of king pins
· · · · · · · · · · · · · · · · · · ·	Lubrication of chassis parts
	Inspection and maintenance
	Engine
	Air, fuel, oil or coolant leaks from engine
tal mileage:	EN Engine starting performance, speed, noise and exhau gas conditions
	E Oil filter replacement
	Retightening the fuel tank bracket bolts
ervicing dealer's name:	$\square \in \mathbb{N}$ Belt tension and damage
	Radiator cap condition
	E Cooling system hose clamp position and clamping condition
i	E D Air cleaner element replacement
	EN Damage of air intake system, looseness of clamp ar loss of parts
ddress:	□ EN Exhaust system
	E PCV valve element replacement
	Power train
	Air or oil leaks from power train
	Clutch pedal play
	Clutch function
1	Propeller shaft couplings and bearings looseness
gnature:	Front and rear axles
<u>5</u>	Retightening wheel nuts
	□ Disc wheel damage
	Tire inflation pressure, cracking, tread groove depth, abno mal wear, etc.
I	□ Tire rotation
1	Suspension system
I	□ Air leak and damage of air spring
	Braking system
	☐ Air and fluid leaks from braking system

- $\hfill\square$ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- □ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

210,000 km / 126,000 miles or 42 months SERVICE OPERATIONS

۲

210,000 km / 126,000 miles or 42 months SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
	Address:	
	Vehicle identification numl	ber:
		ent
Date:	□ ⓒ Engine oil replacem □ Clutch reservoir tank fl	
	Lubrication of clutch to	
Address:		
	□ Axle housing gear oil le	
	□ Brake reservoir tank flu	
	□ Power steering fluid lev	
	Lubrication of propeller (universal joint, slip joir	r shaft
	Lubrication of cab rear	mounting pads
	Lubrication of transmis	sion gearshift control
	Lubrication of king pins	3
	Lubrication of chassis	parts
Total mileage:	Inspection and maintena	ance
	Engine	
	☐ Air, fuel, oil or coolant l	eaks from engine
Servicing dealer's name:		erformance, speed, noise and exhaust
	□	ent
	Retightening the fuel tag	ank bracket bolts
	$\square \oplus \mathbb{N}$ Belt tension and \mathbb{C}	damage
	Radiator cap condition	
	E Cooling system hos condition	e clamp position and clamping
Address:	$\Box \in \mathbb{N}$ Cleaning the air c	
	loss of parts	take system, looseness of clamp and
	□ EN Exhaust system	
	□	replacement
	Power train	
	□ Air or oil leaks from po	wer train
Signature:	□ Clutch pedal play	
	Clutch function	
	☐ Manual transmission g	
		n range selector linkage condition
		gs and bearings looseness
	Front and rear axles	
	□ Front wheel hub bearin	
	Retightening wheel num Disc wheel damage	10
	Disc wheel damage	cracking tread groove depth about
	mal wear, etc.	cracking, tread groove depth, abnor-
	1	Continued on reverse side

□ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- Retightening U-bolts
- □ Air leak and damage of air spring
- Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- Operation of air drier
- □ Check drain from air drier exhaust port
- □ Brake shoe clearance
- Brake lining wear
- Parking brake operation
- □ Parking brake effectiveness
- Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- Heater and defroster operation
- Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

220,000 km / 132,000 miles SERVICE OPERATIONS

۲

220,000 km / 132,000 miles SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
Owner's hame.	Address:	
	Vehicle identification number	er:
	Lubrication	
Date:	□ Engine oil replacement	
	□ Clutch reservoir tank flui	
	□ Transmission oil/fluid lev	
Address:	Axle housing gear oil lev	
	□ Brake reservoir tank fluid	
	Power steering fluid leve	
	Lubrication of propeller s (universal joint, slip joint)	
	□ Lubrication of king pins	
	Lubrication of chassis particular	arts
	Inspection and maintenar	nce
	Engine	
	🗆 🗈 Air, fuel, oil or coolant	t leaks from engine
Total sellers a	EN Engine starting per gas conditions	formance, speed, noise and exhaust
Total mileage:	$\square \bigcirc Oil filter replacement$	
	□ Retightening the fuel tan	k bracket bolts
	\square (E) (N) Belt tension and da	
Servicing dealer's name:		inage
	-	clamp position and clamping condi-
	tion	siamp position and siamping condi-
	$\square \oplus \mathbb{N}$ Cleaning the air cle	eaner element
	□ ĒN Damage of air inta loss of parts	ke system, looseness of clamp and
	EN Exhaust system	
Address:	□	eplacement
	Power train	
	□ Air or oil leaks from pow	er train
	Clutch pedal play	
	□ Clutch function	
	Propeller shaft couplings	s and bearings looseness
	Front and rear axles	
Signature:	Retightening wheel nuts	
	Disc wheel damage	
	☐ Tire inflation pressure, o mal wear, etc.	cracking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of a	air spring
	Braking system	
	□ Air and fluid leaks from b	oraking system
		mage of braking system parts
	1 	Continued on reverse side

- $\hfill\square$ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- $\hfill\square$ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- Looseness and damage of chassis and body
- $\hfill\square$ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

230,000 km / 138,000 miles SERVICE OPERATIONS

۲

230,000 km / 138,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification numbe	er:
	Lubrication	
Date:	🗆 🗈 Engine oil replacemer	nt
	Clutch reservoir tank fluid	
I	□ Transmission oil/fluid lev	el
	Axle housing gear oil level	el
Address:	Brake reservoir tank fluid	level
1	Power steering fluid leve	I
	 Lubrication of propeller s (universal joint, slip joint, 	
	Lubrication of king pins	
	Lubrication of chassis pa	irts
	Inspection and maintenan	ce
	Engine	
	Air, fuel, oil or coolant lea	aks from engine
Total mileage:	□ EN Engine starting perf gas conditions	formance, speed, noise and exhaust
	Retightening the fuel tan	k bracket bolts
	$\square \oplus \mathbb{R}$ Belt tension and da	mage
	Radiator cap condition	
Servicing dealer's name:	tion	clamp position and clamping condi-
I	$\square \oplus \mathbb{N}$ Cleaning the air cleaning the sincle	
	loss of parts	ke system, looseness of clamp and
	□ ⓒ N Exhaust system	
	E PCV valve element re	placement
Address:	Power train	
	□ Air or oil leaks from powe	er train
	Clutch pedal play	
I	□ Clutch function	
I	Propeller shaft couplings	and bearings looseness
	Front and rear axles	
	Retightening wheel nuts	
Signature:	Disc wheel damage	
	mal wear, etc.	racking, tread groove depth, abnor-
I	□ Tire rotation	
I	Suspension system	
1	Air leak and damage of a	air spring
I	Braking system	
	Air and fluid leaks from b	raking system
Looseness, play and damage of braking system page		nage of braking system parts
1	Operation of brake pedal	I
		Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- $\hfill\square$ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- □ Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

240,000 km / 144,000 miles or 48 months SERVICE OPERATIONS

•

240,000 km / 144,000 miles or 48 months SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification num	ber:
Date: Address:	 Axle housing gear oil r Hub bearing grease ar Brake reservoir tank fluid re Power steering fluid re 	luid replacement ork shaft hifter oil level n fluid and filter replacement replacement uid replacement eplacement eplacement or shaft (universal joint, slip joint, center
	□ Lubrication of king pins □ Lubrication of chassis	S
	Inspection and mainten	ance
Total mileage:	Engine	
Servicing dealer's name:	gas conditions Retightening intake an E Valve clearance E Oil filter replacemer E Fuel filter replacemer E Draining water and Retightening the fuel ta	erformance, speed, noise and exhaust ad exhaust manifold bolts nt ent sediment in fuel tank
Address:	 □ E N Belt tension and 0 □ Coolant replacement (□ Radiator cap condition □ E Cooling system hostion □ E N Cleaning the air of 	damage Every 24 months) se clamp position and clamping condi- cleaner element ntake system, looseness of clamp and
	□ Starter function □ Alternator function	
Signature:	Power train	
	Automatic transmissio	ower train gearshift control looseness n range selector linkage condition gs and bearings looseness
	Front and rear axles	
	 Axle shaft torsion and Front wheel hub bearin Rear wheel hub bearin Retightening wheel nu Disc wheel damage 	ng looseness ng damage
	1	Continued on reverse side

47

Continued on reverse side

- □ Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc.
- Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and looseness of leaf springs
- □ Retightening U-bolts
- □ Air leak and damage of air spring
- $\hfill\square$ Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- $\hfill\square$ Looseness, play and damage of braking system parts
- Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- Exhaust brake control cylinder packing replacement
- Replacement of drying agent in air drier
- □ Brake shoe clearance
- □ Brake lining wear
- □ Brake drum wear
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke
- □ Parking brake drum and lining wear
- Damage on boot of brake chamber expander
- □ Wheel cylinder piston cup and dust seal replacement
- □ Brake booster packing, cup and rubber parts replacement
- □ Brake hose replacement
- Check valve packing and rubber parts replacement
- □ Brake valve packing and rubber parts replacement
- □ Air compressor and pressure gauge hose replacement
- □ Brake booster power cylinder packing replacement
- □ Brake fluid reservoir tank tube replacement
- □ Brake chamber's packing and rubber parts replacement

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)
- Wheel alignment
- Right and left turning angles and power steering function
- Power steering booster and oil pump internal rubber parts replacement
- Power steering hose replacement

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function
- □ Switch function

Others

250,000 km / 150,000 miles SERVICE OPERATIONS

۲

250,000 km / 150,000 miles SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
	Address:	
	Vehicle identification numb	per:
	Lubrication	
Date:	□	ent
	□ Clutch reservoir tank flu	
	□ Manual transmission of	il replacement
	Automatic transmission	•
Address:	□ Axle housing gear oil le	
	□ Brake reservoir tank flu	
	□ Power steering fluid lev	vel
	Lubrication of propeller (universal joint, slip joir	shaft
	Lubrication of king pins	3
	Lubrication of chassis p	parts
	Inspection and maintena	ance
	Engine	
	□ Air, fuel, oil or coolant l	eaks from engine
Total mileage:	□ € N Engine starting pe gas conditions	erformance, speed, noise and exhaust
	Retightening the fuel ta	ank bracket bolts
-	$\square \oplus \mathbb{N}$ Belt tension and c	damage
Servicing dealer's name:	Radiator cap condition	
	 E Cooling system hos tion 	e clamp position and clamping condi-
	E ® Air cleaner eleme	nt replacement
	E Turbocharger rotor p	play
	loss of parts	take system, looseness of clamp and
Address:	□ EN Exhaust system	
	□	replacement
	Power train	
	□ Air or oil leaks from po	wer train
	Clutch pedal play	
	□ Clutch function	
		gs and bearings looseness
Signature:	Front and rear axles	
	Retightening wheel nut	ts
	Disc wheel damage	
	mal wear, etc.	cracking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	Air leak and damage of	f air spring
	Braking system	
	☐ Air and fluid leaks from	ı braking system
		Continued on reverse side
	1	

- $\hfill\square$ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Operation and damage of lighting system
- Operation of horn and turn signal lamps
- □ Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

260,000 km / 156,000 miles SERVICE OPERATIONS

۲

260,000 km / 156,000 miles SERVICE OPERATIONS

Quinaria nama:	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification number:	
	Lubrication	
Date:	Engine oil replacement	
	Clutch reservoir tank fluid le	evel
	Transmission oil/fluid level	
Address:	Axle housing gear oil level	
Address.	Brake reservoir tank fluid le	vel
	Power steering fluid level	
	Lubrication of propeller sha (universal joint, slip joint, ce	
	□ Lubrication of king pins	
	Lubrication of chassis parts	i
	Inspection and maintenance)
	Engine	
	Air, fuel, oil or coolant leaks	from engine
Total mileage:	□ (E)(N) Engine starting perform gas conditions	mance, speed, noise and exhaust
	E Oil filter replacement	
	Retightening the fuel tank b	oracket bolts
Convision de clarie normal	$\square \in \mathbb{R}$ Belt tension and dama	age
Servicing dealer's name:	Radiator cap condition	
	E Cooling system hose cla tion	amp position and clamping condi-
	$\square \mathbb{E}\mathbb{N}$ Cleaning the air clean	er element
	loss of parts	system, looseness of clamp and
	E EN Exhaust system	
Address:	□	acement
	Power train	
	Air or oil leaks from power t	rain
	Clutch pedal play	
	□ Clutch function	
	Propeller shaft couplings ar	nd bearings looseness
	Front and rear axles	
Signature:	Retightening wheel nuts	
	Disc wheel damage	
	Tire inflation pressure, crac mal wear, etc.	cking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of air	spring
	Braking system	
	□ Air and fluid leaks from bral	king system
	□ Looseness, play and dama	
		Continued on reverse side

- $\hfill\square$ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- $\hfill\square$ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

270,000 km / 162,000 miles or 54 months SERVICE OPERATIONS

۲

270,000 km / 162,000 miles or 54 months SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
	Address:	
	Vehicle identification numbe	r:
	Lubrication	
Date:	Engine oil replacemen	
	Clutch reservoir tank fluid	
	□ Lubrication of clutch fork	
Address:	Lubrication of clutch shift	
	□ Transmission oil/fluid leve	
	□ Axle housing gear oil leve	
	□ Brake reservoir tank fluid	
	Power steering fluid level	
	□ Lubrication of propeller sl (universal joint, slip joint,	center bearing)
	Lubrication of cab rear m	
	□ Lubrication of transmissio	on gearshift control
	Lubrication of king pins	
	□ Lubrication of chassis part	TS
Total mileage:	Inspection and maintenan	ce
	Engine	
	Air, fuel, oil or coolant lea	ks from engine
Servicing dealer's name:	□ (E)(N) Engine starting perfo gas conditions	ormance, speed, noise and exhaust
	E Fuel filter replacement	
	Retightening the fuel tank	bracket bolts
	$\Box \in \mathbb{N}$ Belt tension and dar	nage
	Radiator cap condition	
	□	clamp position and clamping condi-
Address:	$\square \in \mathbb{N}$ Cleaning the air clea	aner element
	loss of parts	e system, looseness of clamp and
	E E Exhaust system	
	E PCV valve element representation	placement
	Power train	
	\Box Air or oil leaks from powe	r train
Signature:	Clutch pedal play	
	Clutch function	
	Manual transmission gea	rshift control looseness
	Automatic transmission ratio	ange selector linkage condition
	Propeller shaft couplings	and bearings looseness
	Front and rear axles	
	Front wheel hub bearing	ooseness
	Retightening wheel nuts	
	Disc wheel damage	
	Tire inflation pressure, cr mal wear, etc.	acking, tread groove depth, abnor-
		Continued on reverse side

□ Tire rotation

Suspension system

- □ Looseness, play and damage of suspension system
- Damage and loose installation of leaf springs
- Retightening U-bolts
- □ Air leak and damage of air spring
- Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- □ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier
- □ Check drain from air drier exhaust port
- □ Brake shoe clearance
- Brake lining wear
- □ Parking brake operation
- □ Parking brake effectiveness
- Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

280,000 km / 168,000 miles SERVICE OPERATIONS

۲

280,000 km / 168,000 miles SERVICE OPERATIONS

	Owner's name:	Date:
Owner's name:	Address:	
	Vehicle identification num	ber:
	Lubrication	
Date:	□	
	Clutch reservoir tank fl	
	□ Manual transmission o	
Address:		n fluid and filter replacement <fm65f></fm65f>
Address.	Axle housing gear oil le	
	Brake reservoir tank flu	uid level
	Power steering fluid le	vel
	Lubrication of propelle (universal joint, slip join	
	Lubrication of king pins	S
	Lubrication of chassis	parts
	Inspection and maintena	ance
	Engine	
	□ Air, fuel, oil or coolant	leaks from engine
Total mileage:	□ €N Engine starting po gas conditions	erformance, speed, noise and exhaust
	□ ⓒ Oil filter replacemer	nt
	□ Retightening the fuel ta	
Servicing dealer's name:	$\square \mathbb{E}\mathbb{N}$ Belt tension and \mathbb{C}	
	□ Radiator cap condition	-
	-	se clamp position and clamping condi-
	$\square \mathbb{E}\mathbb{N}$ Cleaning the air of	cleaner element
	-	take system, looseness of clamp and
Address:	□ © ® Exhaust system	
Address.	□	replacement
	Power train	•
	☐ Air or oil leaks from po	ower train
	□ Clutch pedal play	
		gs and bearings looseness
Signatura	Front and rear axles	
Signature:	□ Retightening wheel nu	te
	□ Disc wheel damage	15
	□ Tire inflation pressure	, cracking, tread groove depth, abnor-
	nal wear, etc. □ Tire rotation	
	Suspension system	f air annian
	□ Air leak and damage o	or air spring
	Braking system	
	☐ Air and fluid leaks from	n braking system
	, 	Continued on reverse side

- $\hfill\square$ Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- $\hfill\square$ Looseness and damage of chassis and body
- □ Heater and defroster operation
- Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- □ Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

290,000 km / 174,000 miles SERVICE OPERATIONS

۲

290,000 km / 174,000 miles SERVICE OPERATIONS

Owner's name:	Owner's name:	Date:
	Address:	
	Vehicle identification number	er:
	Lubrication	
Date:	□ ^(E) Engine oil replaceme	nt
	Clutch reservoir tank flui	d level
	□ Transmission oil/fluid lev	vel
	Axle housing gear oil lev	vel
Address:	Brake reservoir tank fluid	d level
	Power steering fluid level	el
	Lubrication of propeller s (universal joint, slip joint	shaft , center bearing)
	Lubrication of king pins	
	Lubrication of chassis particular	arts
	Inspection and maintenar	nce
	Engine	
	Air, fuel, oil or coolant le	aks from engine
Total mileage:	□ € N Engine starting per gas conditions	formance, speed, noise and exhaust
	Retightening the fuel tar	ik bracket bolts
	□ ^(E) ® Belt tension and da	amage
	Radiator cap condition	
Servicing dealer's name:	□	e clamp position and clamping condi-
	$\square \otimes \mathbb{N}$ Cleaning the air cleaning the second se	eaner element
	E ® Damage of air inta loss of parts	ake system, looseness of clamp and
	□ ^(E) ® Exhaust system	
	E PCV valve element re	eplacement
Address:	Power train	
	□ Air or oil leaks from pow	er train
	Clutch pedal play	
	Clutch function	
	Propeller shaft couplings	s and bearings looseness
	Front and rear axles	
	Retightening wheel nuts	
Signature:	□ Disc wheel damage	
	Tire inflation pressure, or mal wear, etc.	cracking, tread groove depth, abnor-
	□ Tire rotation	
	Suspension system	
	□ Air leak and damage of	air spring
	Braking system	
	□ Air and fluid leaks from t	oraking system
		mage of braking system parts
	Operation of brake peda	
		Continued on reverse side

- □ Foot brake effectiveness
- Operation of exhaust brake
- □ Operation of air drier

- □ Check drain from air drier exhaust port
- □ Parking brake operation
- □ Parking brake effectiveness
- □ Parking brake lever stroke

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- $\hfill\square$ Steering operating condition
- □ Looseness and play of steering system (including hoses and pipes)

Cab and frame

- □ Looseness and damage of chassis and body
- □ Heater and defroster operation
- $\hfill\square$ Door lock function
- Seat belt mounting condition

Electrical system

- □ Looseness and damage of electrical wiring and connections
- □ Operation and damage of lighting system
- Operation of horn and turn signal lamps
- Operation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function

Others

300,000 km / 180,000 miles or 60 months SERVICE OPERATIONS

0

300,000 km / 180,000 miles or 60 months SERVICE OPERATIONS

Ourser's sema:	Owner's name: Date:
Owner's name:	Address:
	Vehicle identification number:
Date: Address:	Lubrication © Engine oil replacement Clutch reservoir tank fluid replacement Lubrication of clutch fork shaft Lubrication of clutch shifter Manual transmission oil replacement Automatic transmission fluid level Axle housing gear oil replacement Hub bearing grease and oil seal replacement Brake reservoir tank fluid replacement Power steering fluid replacement Lubrication of propeller shaft (universal joint, slip joint, center bearing) Lubrication of transmission gearshift control Lubrication of king pins Lubrication of chassis parts
	Inspection and maintenance
Total mileage:	Engine
Total mileage: Servicing dealer's name: Address:	 Air, fuel, oil or coolant leaks from engine © N Engine starting performance, speed, noise and exhaust gas conditions Retightening intake and exhaust manifold bolts © Valve clearance © Oil filter replacement © Fuel filter replacement Retightening the fuel tank bracket bolts © N Belt tension and damage Radiator cap condition © Cooling system hose clamp position and clamping condition © N Air cleaner element replacement © N Exhaust system © N Exhaust system © PCV valve element replacement Starter function Atternator function
	Power train
Signature:	 Air or oil leaks from power train Clutch pedal play Clutch function Manual transmission gearshift control looseness Automatic transmission range selector linkage condition Propeller shaft couplings and bearings looseness
	Front and rear axles
	 Axle shaft torsion and cracks Front wheel hub bearing looseness Rear wheel hub bearing damage Retightening wheel nuts Disc wheel damage Tire inflation pressure, cracking, tread groove depth, abnormal wear, etc. Tire rotation
	Continued on reverse side

59

Continued on reverse side

Suspension system

- Looseness, play and damage of suspension system
- □ Damage and looseness of leaf springs
- □ Retightening U-bolts
- □ Air leak and damage of air spring
- □ Oil leaks and damage of shock absorbers

Braking system

- □ Air and fluid leaks from braking system
- Looseness, play and damage of braking system parts
- □ Operation of brake pedal
- □ Foot brake effectiveness
- □ Operation of exhaust brake
- □ Exhaust brake control cylinder packing replacement
- □ Air drier disassembly and check
- □ Brake shoe clearance
- □ Brake lining wear
- □ Brake drum wear
- □ Parking brake operation
- Parking brake effectiveness
- Parking brake lever stroke
- Parking brake drum and lining wear
- Damage on boot of brake chamber expander
- □ Wheel cylinder piston cup and dust seal replacement
- $\hfill\square$ Brake booster packing, cup and rubber parts replace-
- ment
- □ Brake hose replacement
- □ Check valve packing and rubber parts replacement
- □ Brake valve packing and rubber parts replacement

Steering system

- □ Fluid leaks from steering system
- □ Steering wheel play
- □ Steering operating condition
- Looseness and play of steering system (including hoses and pipes)
- □ Wheel alignment
- □ Right and left turning angles and power steering function

Cab and frame

- □ Looseness and damage of chassis and body
- Heater and defroster operation
- □ Door lock function
- □ Seat belt mounting condition

Electrical system

- Looseness and damage of electrical wiring and connections
- □ Battery electrolyte level and specific gravity
- □ Operation and damage of lighting system
- □ Operation of horn and turn signal lamps
- Diperation and fluid level of windshield wiper and washer
- □ Gauge and warning/indicator lamp function
- □ Switch function

Others